

REMINGTON®

EST. NEW YORK 1937

REMINGTON ONE™

 
 
 
 
 
 
 
Power Dry & Smooth Brush



AS6077U51

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

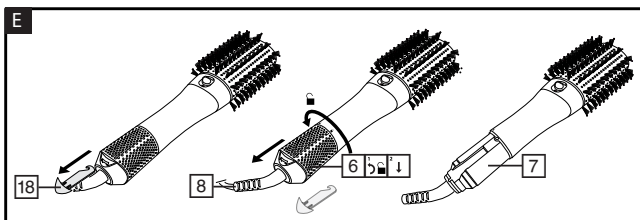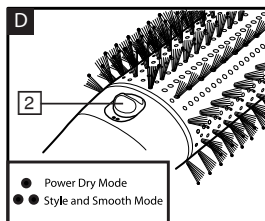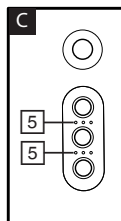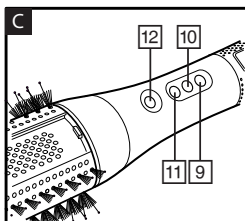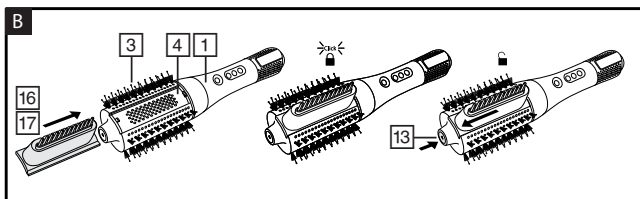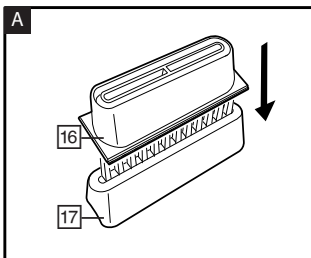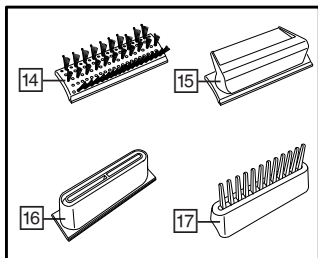

Before First Use



Read the instructions and retain for future reference.

Intended Use



Household use only

Specification

Power Rating (W)	1100-1300
Rated Voltage (V)	220-240V, 50/60Hz

Warning Symbol Glossary



Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

Important Safeguards

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Do not use the appliance for any purpose other than those described in these instructions.
- Do not operate the appliance if it's damaged or malfunctions.
- Do not use accessories or attachments other than those we supply.
- This appliance can be used by children aged from 8 years and above and

persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
- Do not use the product with a damaged cord.
- Do not use the appliance if it is damaged or malfunctions.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap around the appliance.
- Never drop or insert any object into any of the appliance's openings.
- When the appliance is connected to the power supply, never leave it unattended
- Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down

Parts List

1	Power Handle
2	Mode selector switch
3	Ceramic Oval Brush with Anti-Tangle Bristles
4	Attachment channel
5	Heat / Speed setting display
6	Removable air filter cover
7	Inner mesh
8	Swivel cord
Controls	
9	On/off button
10	Speed selector button
11	Heat selector button
12	Cold Shot button
13	Attachment release button
Accessories	
14	Bristle attachment
15	Fly Away Tamer attachment
16	Fast Drying Concentrator attachment
17	Root Boost Comb teeth (works with Fast Drying Concentrator attachment)
18	Cleaning Tool

Not Shown

19	Storage pouch
Illustrated instructions	
A	Accessories require assembly
B	Attaching accessories
C	Function Buttons
D	Mode Selector
E	Cleaning Tool and removing air filter cover

Fitting & removing attachments

- To fit attachments, position the attachment at the entrance of the channel on the Oval Brush barrel and push into the channel until it clicks into place. (Fig B)
- Attachments can be fitted in either orientation.
- To remove the attachments, press:

13	Attachment release button
-----------	---------------------------

and slide out of the barrel.

CAUTION Attachments can become hot during use, let them cool before removing.

TIP Activating Cold Shot for a few seconds before removing attachments can help to reduce their temperature.

Use

- Plug into the mains power supply.
- The heat setting display will flash green indicating the styler is in standby mode.
- Press:

9	On/off button
---	---------------

- Select styling mode using:

2	Mode selector switch
---	----------------------

Mode - Power Dry

High velocity air emitted from the attachment channel in the centre of the barrel.

Parts List	Mode	Symbol
2	Power Dry	●

For use with:

15	Fly Away Tamer attachment
16	Fast Drying Concentrator attachment
17	Root Boost Comb teeth (works with Fast Drying Concentrator attachment)

Mode - Style & Smooth

Controlled air emitted from all around the barrel.

Parts List	Mode	Symbol
------------	------	--------

2	Style & Smooth	●●
---	----------------	----

For use with:

3	Ceramic Oval Brush with Anti-Tangle Bristles
---	--

Speed

Select your desired speed settings using:

10	Speed selector button
----	-----------------------

Light Matrix	Air Speed
●●●	Fast
●●○	Medium
●○○	Slow

Heat

Select your desired speed settings using:

11	Heat selector button
----	----------------------

Heat Matrix	Matrix colour	Heat Setting
●●●	Red	High
●●○	Red	Medium
●○○	Red	Low
●●●	Red/Blue	Comfort+™
●●●	Blue	Cold

Comfort+™ Setting

Automatically cycles between hot and cold temperatures to prevent heat build-up on the scalp for comfortable styling. Can be used with any speed setting.

True Cold Shot

Reduces the heat to a constant cold temperature to set your style.

To activate, press:

12	Cold Shot button
----	------------------

To de-activate, press either:

11	Heat selector button
12	Cold Shot button

Auto Memory Function

After each use, your styler will automatically set itself to the last heat and speed setting used.

Styling Tips

How to prepare hair for styling with the Fast Drying Concentrator attachment – For use on wet hair.

- Wash and condition the hair as normal.
- Squeeze out excess moisture with a towel and comb through.
- Attach the Fast Drying Concentrator to the styler (Fig B) and select the following settings:

Mode	Heat Setting	Speed Setting
Power Dry 	High	Fast

- Rough dry your hair as normal until 70-80% dry.

How to add root volume with the Root Boost Comb attachment– For use on hair that is 70-80% dry

- Section hair prior to styling, style the lower layers first.
- Assemble to Root Boost Comb by fitting comb teeth to the Fast Drying Concentrator. (Fig A)
- Attach the Root Boost Comb to the styler (Fig B) and select the following settings:

Mode	Heat Setting	Speed Setting
Power Dry 	Medium	Medium

- Place the comb teeth close to your scalp to direct airflow towards the roots.
- Gently push the teeth into the roots so the hair lifts against the comb. Hold for up to 10 seconds to boost volume.
- Repeat around the head, finishing at the crown and hairline for maximum lift.

How to create a smooth, voluminous blow-out with the Oval Brush - For use on hair that is 70-80% dry

- Section hair prior to styling, style the lower layers first.
- Attach the bristle insert to the styler (Fig B) and select the following settings:

Mode	Heat Setting	Speed Setting
Style & Smooth 	Comfort+™	Medium

- Place the brush underneath a section, close to the scalp, and hold for a few seconds while lifting at the roots to boost volume.
- Using gentle tension, glide the styler down through the section at a steady pace to dry and shape. Repeat if needed until fully dry.
- Switch to the Cold Shot setting and brush through again to set and smooth.
- Repeat throughout the hair, working layer by layer for a full, voluminous finish.

How to finish straight styles with the Flyaway Tamer attachment - for use on dry hair

- Attach the Flyaway Tamer attachment to the styler (Fig B) and select the following settings:

Mode	Heat Setting	Speed Setting
Power Dry 	Cold	Fast

- Focus on the top layer of the hair.
- Start near the roots and position the attachment close to your hair. Your

hair will be attracted to the attachment.

- Slowly glide the attachment down the length of your hair.
- Repeat around your crown and parting until the desired level of smoothness is achieved.

Thermal Cut-Out

In the event of overheating, the appliance may either stop unexpectedly or start to blow cold air. Overheating is usually caused by a blocked grille/filter. If this happens, immediately unplug the appliance and refer to **Cleaning & Maintenance** to clean the grille/filter. If, after doing this overheating continues to happen, stop using the appliance and contact Customer Service.

Cleaning & Maintenance

Allow the appliance to cool down before cleaning and storing away.

- Use the cleaning tool to remove any hair build up from the brush barrel and bristles, the cleaning tool is stored within the end of the handle (Fig E)
- Wipe all the surfaces with a damp cloth.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt build-up from the styler internals and air filter.

Remove the air filter by first removing the cleaning tool (Fig E) then twisting the filter in the direction shown (Fig E) and pulling it away from the handle revealing the:

7	Inner mesh
----------	------------

- Clean with with a cloth or soft brush and then replace the:

6	Removable air filter cover
18	Cleaning Tool

IMPORTANT: Do not attempt to remove the:

7	Inner mesh
----------	------------

This is not intended to be removed or serviced.

Internal Cleaning Cycle

Regularly cleaning your inlet is recommended to maintain peak performance, maximize efficiency, and prevent premature failure. Internal cleaning cycle can be activated at any time and should be done regularly.

As a reminder, after 800 minutes of use (maximum recommended time between cleaning), the heat and speed setting displays will flash 10 times. Running the internal cleaning cycle will reset this timer. If the internal cleaning cycle is not performed, the cleaning reminder will activate again the next time you use your styler.

To activate Internal Cleaning Cycle:

Parts List	Action	Duration (seconds)
6	Remove	n/a
18		
10	Press+Hold together	3
11		

During the internal cleaning cycle, the motor will operate in the reverse direction for 10 seconds and blow air out of the air filter to clean the internal parts of the styler.

If the internal cleaning cycle is not completed, the cleaning reminder will activate again the next time you plug in your styler.

Recycling



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

ERP

For ErP energy consumption information, please refer to website eu.remington-europe.com/erp

Service & Guarantee



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided

the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

Service Centre

UK

0800 212 438 (free call mainland UK)
Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK
www.remington.co.uk

Ireland

142 951 40
Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12
<https://ie.remington-europe.com>

Ref. No. AS6077U51

Type No. AS28A

25/UK/ AS6077U51

T22-7004067-B

Version 01 /26

Remington® is a Registered Trade Mark
of Spectrum Brands, Inc., or one of its
subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Fairsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2026 Spectrum Brands, Inc.
