

REMINGTON®

EST. NEW YORK 1937




Trendology™
Rotating Curling Iron
CI41RC5U51 (CI32AH)

 remington-europe.com

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

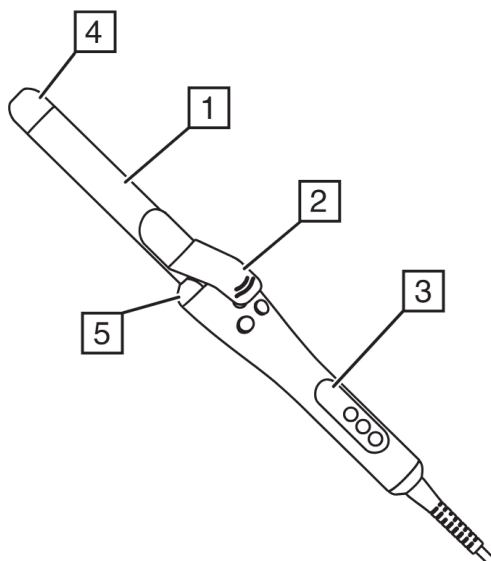

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.



WARNING: This appliance is hot. Keep out of reach of children at all times.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
 -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
 - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*.
- * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- Burn hazard. Keep the appliance out of reach from young children, particularly during use and while cooling down.
 - Never leave the appliance unattended when it is connected to the power supply.
 - Always place the appliance (with its stand, if any), on a heat-resistant, stable flat surface.
 - If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.

- Do not allow any part of the appliance touch the face, neck or scalp.
- Keep the power plug and cord away from heated surfaces.
- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
- Do not twist or kink the cable, or wrap it round the appliance. Check the cord regularly for any sign damage.
- CAUTION: Always remove the appliance from the storage pouch/sleeve before heating and allow it to fully cool before placing it back.
- This appliance is not intended for commercial or salon use.

PARTS

1. Ceramic coated barrel
2. Clamp
3. LED display
4. Cool tip
5. Safety stand

Controls

- ⏻ On/off button
- 🌡 Temperature control
- ⌚ Timer length control
- ◀ Left barrel rotation
- ▶ Right barrel rotation
- ↺↻ Barrel rotation reset

ADDITIONAL FEATURES

- Fast heat up—ready to use in 30 seconds.
- Automatic safety shut off – this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V, times and temperatures may vary.

INSTRUCTIONS FOR USE

1. Plug in the styler.
2. Press and hold the (⏻) button to switch on. The display will illuminate.
3. Select the appropriate temperature for your hair and the curl you want to create using the (🌡) temperature control button. The selected temperature will be shown on the display.
4. Select the appropriate timer setting for your hair (see section below "Audible curl ready indicator").
5. When the styler is ready to use and the selected temperature has been reached, the unit will beep three times and the display will stop flashing.
6. When finished styling, press and hold the (⏻) button to turn off and unplug the appliance.

Audible curl ready indicator

- Select the appropriate timer setting for your hair and the curl you want to create using the (⌚) timer length control button. Your selected timer length will be shown on the display.
- To turn off timer and audible feedback, press the (⌚) timer length control button until no selection is

shown on the display.



Note: It is recommended to start with the shortest timer setting first to test which timer length works for you and your hair type before styling.

Timer setting	Hair type
5 seconds	Thin / fine to normal hair
8 seconds	Normal to thick hair

Temperature and timer lock mode

- To lock the temperature and timer length controls while styling, press and hold the (🔒) button for 3 seconds. These controls will be locked and the display will show the 🔒 symbol.
- To unlock, press and hold the (🔒) button for 3 seconds. All keys will be unlocked and the 🔒 symbol will no longer be displayed.

Rotation direction

- Rotate the barrel in the desired curling direction using the left or right barrel rotation buttons.

◀	To rotate the barrel left
▶	To rotate the barrel right

Barrel rotation reset

- To return barrel to home position, press the (↺) barrel rotation reset button to return the barrel to the center. This will allow you to place the styler down on the safety stand.

STYLING TIPS

- Before use, ensure the hair is clean, dry and tangle-free.
- For extra protection use a heat protection spray.
- Hairsprays contain flammable material - do not use while using this product.
- Section the hair prior to styling. Style the lower layers first.
- Start at a lower temperature with a small section size and try an experimental curl first to determine the ideal section size, timer length, and temperature for you.
- When curling the front sections of your hair, curl them in the direction away from your face to frame it. For an even more natural-looking result, alternate the curl direction throughout the rest of your hair.

Recommended Temperatures

Temperature	Hair type
140°C – 160°C (285°F – 320°F)	Thin / fine, damaged, or bleached hair
160°C – 200°C (320°F – 390°F)	Normal, healthy hair
200°C – 220°C (390°F – 430°F)	Thick and difficult to style hair

Caution: the hottest temperatures should only be used by experienced stylists.

Styling

1. Start by dividing hair into sections no more than 1 inch deep and 2 inches wide.
2. Keep the section smooth by brushing or combing through it while holding the ends taut with the other hand.
3. Taking one section at a time, place the ends of hair over the barrel with the clamp open.
4. Then close the clamp, making sure that the ends extend just a tiny bit beyond the clamp.
5. Press the (<|) or (>|) barrel rotation button to auto rotate the barrel in your preferred direction. Keep the section of hair taut as it winds around the hot barrel. Wind the curl toward the scalp as far as you wish to go without touching your scalp with the hot barrel.
6. Once the strand is wrapped:
 - a. If using the audible curl ready indicator – Hold the styler in place until the timer beeps. The timer will begin when you release the barrel rotation button.
 - b. If not using audible curl ready indicator – Hold for approximately 5-10 seconds. Hold for less time if hair is easy to curl, or if you want loose curls or waves.
7. When ready to release curl, push down on the clamp release lever to open the clamp. Now, gently withdraw the barrel from the center of curl.
8. Press the (|<|>) barrel rotation reset button to reset the barrel to the home position.
9. Allow the curl to cool, and try not to disturb curls while proceeding in the same manner around your whole head. When completely finished, and all curls have cooled thoroughly, gently brush and comb hair into the style desired.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

ERP

For ErP energy consumption information, please refer to website eu.remington-europe.com/erp

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

United Kingdom

☎ 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failssworth, Manchester

M35 0HS, UK

www.remington.co.uk

Product support:

productsupport@remington.co.uk

Ireland

☎ 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

productsupport@remington.co.uk

REMINGTON®

EST. NEW YORK 1937



REF. NO. CI41RC5U51
Type No. CI32AH
26/UK/ CI41RC5U51

T22-7004079-A