

REMINGTON®

EST. NEW YORK 1937




BODYscape™ Detail Nose & Ear Trimmer NE9000

 remington-europe.com

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

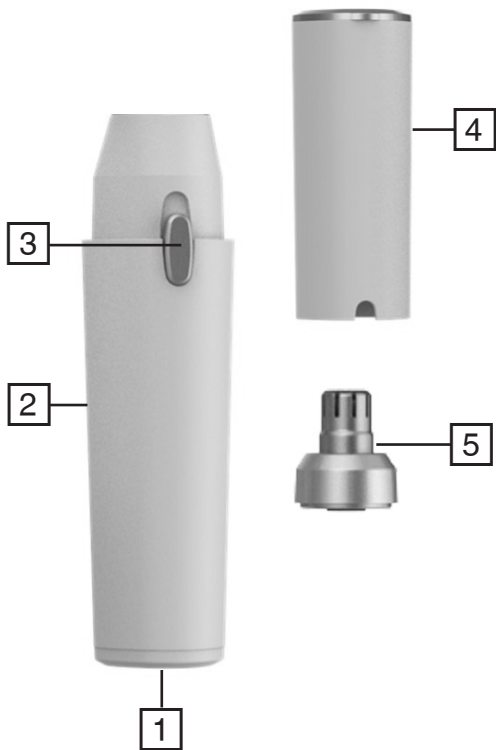

DISCLAIMER

The product that you receive can differ from the product that is shown. The colour, shape, or features can change. These changes do not affect the function of the product.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Before using your product, we recommend that you carefully read the user manual, which indicates the term of this warranty and the proper use you should give the product.
- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not put in fire or mutilate your batteries when disposing as they may burst and release toxic materials.
- Do not short circuit as it may cause burns.
- Keep the cord away from heated surfaces.
- Use and store the product at a temperature between 0°C and 32°C.
- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use this appliance with damaged or broken tracks, foils or cutters, as injury may occur.
- Do not plug or unplug the appliance with wet hands.
- For household use only.

- Do not place or store the appliance or charging cable where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid for extended periods of time.
- If an appliance falls into water, "unplug it" immediately. Do not reach into the water.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments other than those we supply.
- Never drop or insert any object into any opening of this appliance.
- Do not use on people who are asleep.
- Turn off when cleaning or applying oil.
-  Suitable for use in a bath or shower
- For Household use only
- The battery is a type Li-ion, 300mAh. The normal temperature range for charging the battery is from 5°C to 40°C.
- Do not expose the appliance or battery to excessive temperatures.

PARTS

- | | |
|---------------------------|-------------------------|
| 1. Charging connector | 5. Nose and ear trimmer |
| 2. Handle | Not shown: |
| 3. On/off switch | • USB-C charging cord |
| 4. Integrated storage cap | • Cleaning brush |
-

CHARGING

Charge the device for 90 minutes before first use.

1. Ensure the device is switched off.
2. Connect the device to the USB-C cable and then connect the USB end of the cable to a powered USB port.

CHARGING INDICATOR LIGHTS

- When charging: LED blinks continuously
- When fully charged: LED stays on
- When shaver is on/in use and sufficiently charged: LED switches off.
- When shaver is on/in use and battery is low: LED will blink 5 times then turn off

INSTRUCTIONS FOR USE

ONLY USE ON CLEAN, DRY SKIN

If skin is very dry or sensitive to irritation, you can apply a small amount of a gentle, non-comedogenic facial oil.

Test a small area on an arm or leg before using your groomer on your face.

Discontinue use immediately if any sensitivity or allergic reaction occurs. Do not use on sensitive or irritated skin.

NOTE: Hairs may grow in different directions. Moving your shaver against the direction of hair growth will be most effective.

TO TURN THE UNIT ON:

1. Remove the storage protection cap.
2. Push on/off switch up towards the trimming head.
- NOTE: When using the precision eyebrow sculptor, the LED ring light will automatically light up.

CHANGING ATTACHMENTS

1. Remove any attachment by rotating it to the left (counter-clockwise) and pulling it off.
2. Place another attachment on the unit and rotate it to the right (clockwise) until it locks into place.

USING THE NOSE AND EAR TRIMMER

Suggested use: Trimming nose, ear, and eyebrow hair.

Recommended area(s) of use: Nose, ears, and eyebrows

CAUTION: NEVER insert the trimmer more than ¼" (6mm) into nose or ear. Foreign objects should never come into contact with the eardrum.

NOTE: Do not apply excessive pressure as this damages the trimmer head and may cause skin irritation.

- Fit the nose, ear and brow trimmer attachment to the handle.

To remove hair from the nose:

1. Insert the trimming head gently into the nostril.
2. Gently move the groomer in and out of the nostril and at the same time rotate the groomer.

To remove hair from the ear:

3. Insert the trimming head gently into the outer ear canal opening.
4. Gently rotate appliance in a circular motion.

CARE FOR YOUR TRIMMER

- After each use, brush or blow accumulated hair from the cutting unit & shaving head(s) used.
- Your shaver can be rinsed with cool or warm water. For best results, turn shaver on while

rinsing under water.

- Shake off excess water from shaver and pat dry with cloth.

BATTERY DISPOSAL

This appliance contains batteries that are non-replaceable. When the battery is at the end of its life or is no longer working, the appliance and battery must be properly disposed of at an official recycling point. We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver and tools have sharp edges and may cause injury if not handled correctly.

1. Be aware of the risk of terminals of the battery being short-circuited by metal objects.
2. The rechargeable battery must be removed from the appliance before it is scrapped.
3. Disconnect the charging adapter before removing the battery.
4. Ensure the device is discharged of all power. To do this, switch it on and allow it to run until stops.
5. Using a small flat screwdriver, carefully pry apart the bottom cover from handle.
6. Remove (2) screws from bottom cover.
7. Take out inner housing to expose circuit board.
8. Remove (1) screw from circuit board and take out circuit board and expose battery.
9. Cut tabs holding battery to circuit board
10. Used batteries must be removed from the appliance and disposed of at an appropriate official recycling point
11. Do not attempt to operate shaver once you have opened it

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

ERP

For ErP energy consumption information, please refer to website **eu.remington-europe.com/erp**

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any

economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Product support:

productsupport@remington.co.uk

IRELAND

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

productsupport@remington.co.uk

REMINGTON®
EST. NEW YORK 1937

