

REMINGTON®

EST. NEW YORK 1937




DURACUT™ Rotary Shaver RC3370U51

 remington-europe.com

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

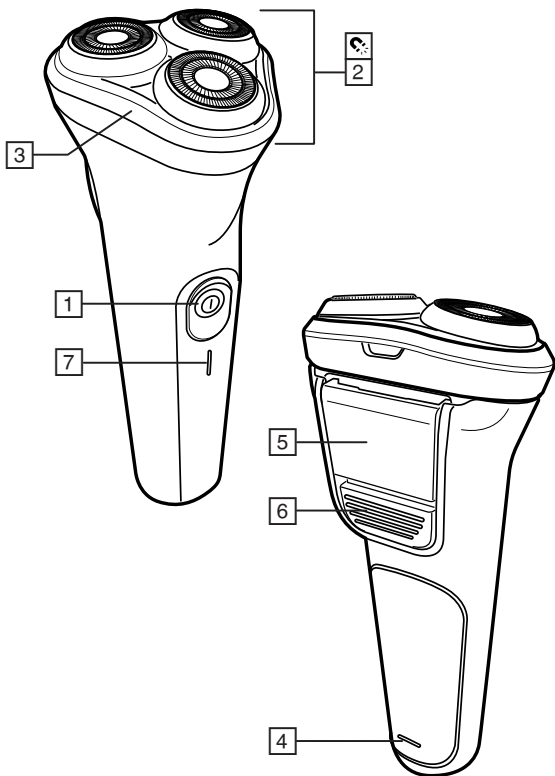

Before First Use



Read the instructions and retain for future reference

Intended Use



Household use only



Suitable for use in bath or shower

Important Safeguards

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use attachments other than

those we supply.

- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- When charging or powered, you must use an external supply unit with an output terminal of 5V & 5W (the measured maximum output power is less than 15W) and meets the requirements of IEC 60335-1 standard.
- The battery is a type Li-ion 750mAh and must only be charged between 0°C and 45°C.
- Do not expose the appliance or battery to excessive temperatures.

Battery Use & Safety

- This appliance should never be left unattended when plugged into a power outlet, except when charging.

Specification

Charge Type	USB-C
Charge Time (min)	60
Run time (min)	60
IP	IPX7*

Warning Symbol Glossary

	Do not fully immerse in water
---	-------------------------------

Parts List

1	On/Off Switch	
2	Individual flexing heads	
3	Hairpocket	
4	USB-C port	
5	Pop out Trimmer	
6	Pop out Trimmer Button	
7	LED Indicator	
Not Shown		
8	Head guard	
9	USB-C Cable	
10	Cleaning brush	

Charging

When the battery is charging, the

7	LED Indicator	
---	---------------	--

will illuminate white until charging is complete.

Quick Charge

The appliance has a 5 minute Quick Charge Feature that will provide enough charge for 1 shave lasting 3 minutes.

Low Battery

When the appliance is running low on battery with 5 minutes of charge remaining the:

7	LED Indicator	
---	---------------	--

will begin to flash.

Instructions for Use - Shaving

- Switch on the appliance

1	On/Off Switch	
---	---------------	--

- Stretch the skin with your free hand so the hairs stand upright.
- Only apply light pressure on the shaving head while shaving (pressing too hard can cause skin irritation).
- Use short, circular strokes.

Instructions for Use - Shaving with Gel

- Follow the same instructions as dry shaving if using shaving gel.

Note - After use with shaving gel, please rinse the head and cutters under warm

water to clean away any excess gel and debris.

Dual Speed

When the appliance is turned on, activate using:

Parts List	Button	Action
1	On/Off Switch	Press + Hold (3 seconds)

Travel Lock

When the appliance is turned off, activate using:

Parts List	Button	Action
1	On/Off Switch	Press + Hold (3 seconds)

To De-activate

Parts List	Button	Action
1	On/Off Switch	Press + Hold (3 seconds)

Tips for Best Results

- Hold the shaver at right angles to the skin so that all three heads are touching the skin with equal pressure.
- Use moderate to slow movements.

The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.

- Do not push hard against the skin in order to avoid skin irritation.

Care and Cleaning

This appliance contains no user serviceable parts. Before cleaning, ensure the appliance is switched off.

- Do not use abrasives or brushes to clean components.
- Do not place parts in boiling liquids.

Rinse and dry:

1	On/Off Switch	
2	Individual flexing heads	
3	Hairpocket	
5	Pop out Trimmer	
6	Pop out Trimmer Button	

Battery Removal

This appliance contains batteries that are non-replaceable. When the battery is at the end of its life or leaking, the appliance and battery must be properly disposed of at an official recycling point.

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if

not handled correctly.

Be aware of the risk of terminals of the battery being short-circuited by metal objects.

The rechargeable battery must be removed from the appliance before it is scrapped.

- Disconnect the charging USB cable before removing the battery.
- Use a small flat screwdriver to pry away the Bottom Cover from unit bottom carefully.
- Unscrew (2s) screws from the unit bottom.
- Use a small flat screwdriver to pry away the small front panel from unit carefully and remove the switch button.
- Hold the handle, and carefully pull the unit bottom, and take the internal assembly out.
- Unscrew (5s) screws from the internal assembly.
- Take away the internal assembly cover and expose the printed circuit board.
- Pry the printed circuit board out from internal housing.
- Expose the battery and cut the connections on battery ends.
- Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/ collection point.
- Do not attempt to operate the shaver once you have opened it.
- Dispose of the battery safely.

Recycling



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

ERP

For ErP energy consumption information, please refer to website eu.remington-europe.com/erp

Service & Guarantee



Defects affecting product functionality appearing within the guarantee period will be corrected by

replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: **<https://uk.remington-europe.com/product-registration>**

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

Service Centre

UK

0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Ref. No. RC3370U51

Type No. R37A

26/UK/ RC3370U51

T22-0005726

Version 01 /26

Remington® is a Registered Trade Mark
of Spectrum Brands, Inc., or one of its
subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,
Failsworth,
Manchester

M35 0HS

www.remington.co.uk

© 2026 Spectrum Brands, Inc.
