

REMINGTON®


WASHUP™ Rotary Shaver



RC4380U51

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

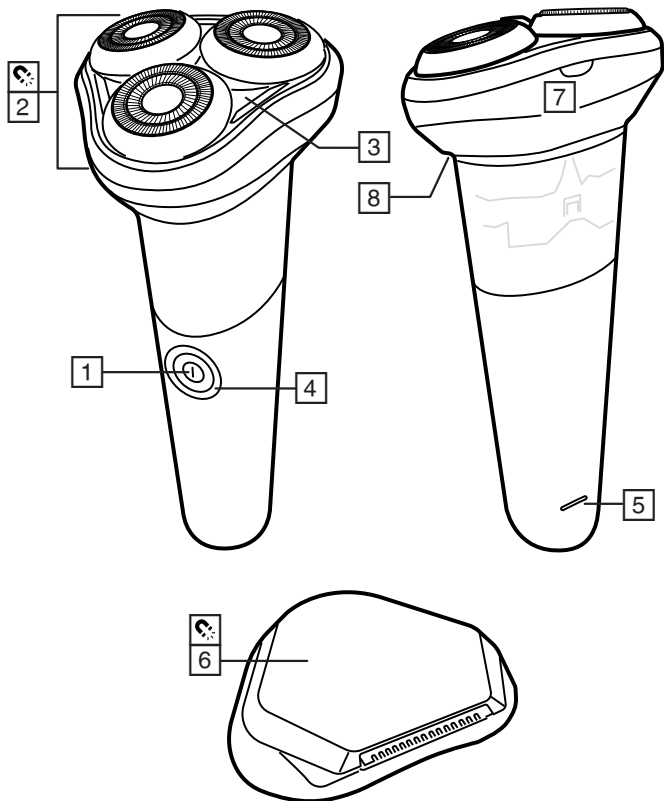

Before First Use

	Read the instructions and retain for future reference.
---	--

Intended Use

	Household use only
	Suitable for use in bath or shower

Specification

Charge Type	USB-C
Quick Charge Time (min)	5
Charge Time (min)	60
Run time (min)	60
IP	IPX7

Important Safeguards

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Do not use the appliance for any purpose other than those described in these instructions.
- Do not operate the appliance if it's damaged or malfunctions.
- Do not use accessories or attachments other than those we supply.
- This appliance can be used by children

aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.

- Detach the device from the charging adapter before cleaning it in water.
- Do not use the product with a damaged cord.
- The battery in this device is not replaceable.
- Do not use the appliance if it is damaged or malfunctions.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- Never drop or insert any object into any of the appliance's openings.
- When charging, you must use an external supply unit with an output terminal of 5V & 1A (the measured maximum output power is less than 15W) and meets the requirements of IEC 60335-1 standard.
- The normal temperature range for charging the battery is from 0°C to 45°C.
- Do not expose the appliance or battery to excessive temperatures.
- The battery is a type Li-ion, 750mAh.

Parts List

1	Power/function switch	
2	Individual flexing heads	
3	Hairpocket	
4	Indicator light	
5	USB-C Charging Port	
6	Detail trimmer Head	
7	Head release groove	
8	Washout Port	
Not Shown		
9	USB Charging cable	
10	Travel Pouch	
11	Head Guard	
12	Cleaning Brush	

Charging

- Always ensure that your hands, shaver and mains adaptor are dry before charging.
- Ensure the appliance is switched off.
- Before using the appliance for the first time charge it for 1 hour.
- Your shaver cannot be overcharged. If the product is not going to be used for an extended time period (2-3 months), unplug it from the mains and store.
- To preserve batteries, let them run out every 6 months then recharge for 1 hour.

Charging Status

Charging status is shown:

4	Indicator light	
---	-----------------	--

Status	LED State
Charging	Flashing
Fully Charged	OFF
In use	Solid
Low Battery	Rapid Flashing

Use - Everyday Shaving

- Switch on

1	Power/function switch	
---	-----------------------	--

- Hold the shaver at a right angle to your skin and move the shaver against the direction of the hair growth.
- After shaving, switch off shaver.

Note - Before dry shaving, make sure that the area is clean, dry and free from creams or oil.

Use - Trimming & Shaping

- Attach

6	Detail trimmer Head	
---	---------------------	--

- Switch on

1	Power/function switch	
---	-----------------------	--

- Hold the shaver at a right angle to your skin and press down gently.

- Edge and shape the area as desired.
- After shaving, switch off shaver.

Travel Lock

Ensure the appliance is switched OFF
To activate:

Parts List	Action	Duration (sec)
1	Press + Hold	3

The Indicator Light will flash 3x.

To De-activate, repeat process whilst locked.

When locked, the Indicator Light will flash 3x if the Power/function button is pressed.

Rapid Rinse

Turn the appliance upside down and rinse a tap through the:

8	Washout Port	
---	--------------	--

for daily maintenance that helps prevent build up of dirt and hair

Clean Mode Alert

When the unit is in need of a clean
The:

4	Indicator light	
---	-----------------	--

will alternatly flash white & red.

Clean Mode Procedure

Ensure the appliance is switched on to activate.

To enter into clean mode:

Parts List	Action	Duration (sec)
1	Press + Hold	3

The shaver emits a pulsing sound.
The Indicator light flashes white and red alternately.

- Place the shaver head in a basin of water or under a tap.
- The clean cycle stops automatically after 15 seconds.

When the clean cycle is complete:
The Indicator Light stops flashing and switches off.

Cautionary Notes

If your skin is easily irritated by shaving, or you suffer from skin allergies, you should test a section of your arm or leg before using the shaver. You can also use it wet with soap, foaming gel, or body wash.

Care and Cleaning

Rinse clean using a damp cloth and dry:

3	Individual flexing heads
4	Hairpocket
6	Detail trimmer Head

Battery Removal

This appliance contains batteries that are non-replaceable. When the battery is at the end of its life or leaking, the appliance and battery must be properly disposed of at an official recycling point.

- We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.
- Be aware of the risk of terminals of the battery being short-circuited by metal objects.
- The rechargeable battery must be removed from the appliance before it is scrapped.
- Disconnect the charging USB cable before removing the battery.
- Discharge the unit and remove the shaver head.
- Use a small flat screwdriver to pry away the Bottom Cover from unit bottom
- Unscrew (2s) screws from the unit bottom.
- Use a small flat screwdriver to pry away the Power Button from unit carefully and remove the Power Button and Button Bracket.
- Hold the handle, and carefully push the unit bottom, and take the internal assembly out.
- Unscrew (5s) screws from the internal assembly.
- Take away the internal assembly cover and expose the printed circuit board.
- Pry the battery out from internal housing.
- Expose the battery and cut the connections on battery ends.
- Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/ collection point.
- Do not attempt to operate the shaver once you have opened it.
- Dispose of the battery safely.

Recycling



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

ERP

For ErP energy consumption information, please refer to website eu.remington-europe.com/erp

Service & Guarantee



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided

the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

Service Centre

UK

0800 212 438 (free call mainland UK)
Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK
www.remington.co.uk

Ireland

142 951 40
Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12
<https://ie.remington-europe.com>

Ref. No. RC4380U51

Type No. R38A

26/UK/ RC4380U51

T22-0005731

Version 01 /26

Remington® is a Registered Trade Mark
of Spectrum Brands, Inc., or one of its
subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2026 Spectrum Brands, Inc.
