


REMINGTON®

EST. NEW YORK 1937



SENSICUT™ Rotary Shaver
RC5390U51

 remington-europe.com

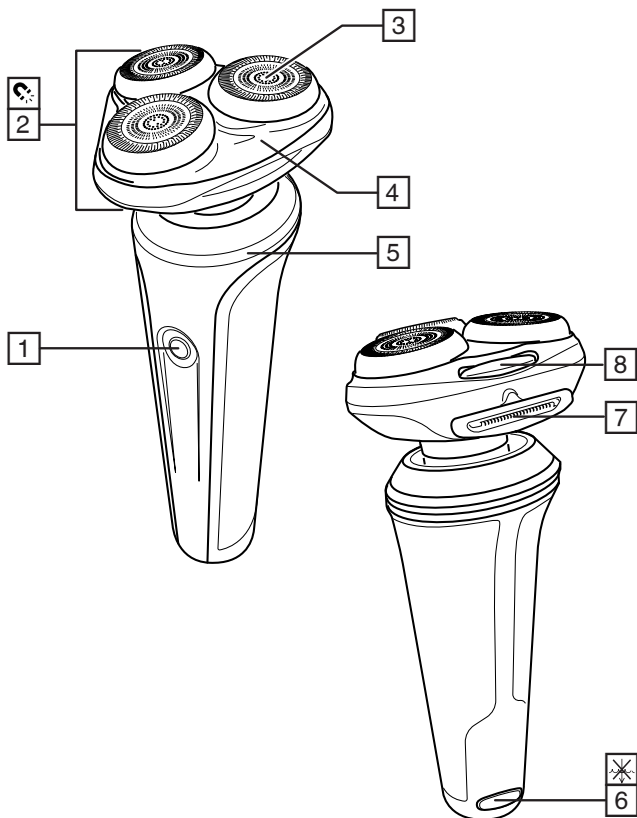

EN

Before First Use



Read the instructions and retain for future reference

Intended Use



Household use only



Suitable for use in bath or shower

Important Safeguards

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it.
- Do not use the appliance if it is damaged, as this may cause injury.
- The battery is a type Li-Ion, 750mAh.
- The normal temperature range for charging the battery is from 0°C to 45°C.
- Do not expose the appliance or battery to excessive temperatures. Suitable for use in a bath or shower.
- **WARNING:** Detach the appliance from the charging adapter before cleaning it in water.
- Do not use the appliance with a damaged cord.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use attachments other than those we supply.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.
- When charging, you must use an external supply unit with an output terminal of 5V & 1A (the measured maximum output power is less than 15W) and meets the requirements of IEC 60335-1 standard.

Specification

Charge Type	USB-C
Charge Time (min)	60
Run time (min)	60
IP	IPX7*

* Close and latch the USB-C port. Only open the port when you charge the unit.

Warning Symbol Glossary

	Do not fully immerse in water
---	-------------------------------

Parts List

1	Power/Function Button	
2	Pivoting head and cutter assembly	
3	Individual flexing heads	
4	Hairpocket	
5	LED Ring	
6	USB-C port	
7	Pop out Trimmer	
8	*Pop out Trimmer Button	
Not Shown		
9	Travel case	
10	Head guard	
11	USB Cable	
12	Cleaning brush	

*Note - Always switch off the appliance when pushing the Pop out Trimmer back into the Head and Cutter Assembly.

Charging

When the battery charges, the LED ring flashes clockwise. When the battery is fully charged, briefly illuminates solid, then switches off.

To preserve the life of your batteries, let the appliance run flat every 6 months then fully charge.

Quick Charge

The appliance has a 5 minute Quick Charge Feature that will provide enough charge for 1 shave lasting 3 minutes.

Instructions for Use - Shaving

- Switch the appliance:

1	Power/Function Button	
---	-----------------------	--

- Stretch the skin with your free hand so the hairs stand upright.
- Only apply light pressure on the shaving head while shaving (pressing too hard can cause skin irritation).
- Use short, circular strokes.

Instructions for Use - Shaving with Gel

- Follow the same instructions as dry shaving if using shaving gel.

Note - After use with shaving gel, please rinse the head and cutters under warm

water to clean away any excess gel and debris.

SensiSpeed™ Mode

Use the SensiSpeed™ feature on sensitive skin.

To activate SensiSpeed™ mode, once switched on:

Button	Action
Power/Function Button	Press + Hold (3 seconds)

A slower RPM and LED Ring will switch from permanently illuminated to a slow pulse confirming the mode is active.

To De-activate SensiSpeed™ mode:

Button	Action
Power/Function Button	Press + Hold (3 seconds)

Pressure Sensor

The Pressure Sensor feature provides feedback on optimum pressure to use on your skin when shaving. This is shown through the:

5	LED Ring	
---	----------	--

Pressure	LED Ring Colour	LED Ring State
----------	-----------------	----------------

Light	White	Solid
Moderate	Green	Solid
High	Red	Flashing

When the LED ring flashes red, a high-frequency vibration also occurs.

Travel Lock

Ensure the appliance is turned off before activating the Travel Lock:

Button	Action
Power/Function Button	Press + Hold (3 seconds)

To De-activate Travel Lock

Button	Action
Power/Function Button	Press + Hold (3 seconds)

Tips for Best Results

- Hold the appliance at right angles to the skin so that all three heads are touching the skin with equal pressure.
- Use moderate to slow movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- Do not push hard against the skin in order to avoid skin irritation.

Care and Cleaning

This appliance contains no user serviceable parts. Before cleaning, ensure the appliance is switched off.

- Do not use abrasives or brushes to clean components.
- Do not place parts in boiling liquids.

Do not fully immerse in liquid without the latch closed. Only open the port when you charge the unit and securely close when charging is complete.

6	USB-C port
---	------------

Remove, rinse and dry:

2	*Pivoting head and cutter assembly
3	Individual flexing heads
4	Hairpocket

*Note - The pivoting head and cutter assembly use magnets to attach and remove.

Battery Removal

This appliance contains batteries that are non-replaceable. When the battery is at the end of its life or leaking, the appliance and battery must be properly disposed of at an official recycling point.

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- Be aware of the risk of terminals of the battery being short-circuited by metal objects.
- The rechargeable battery must be removed from the appliance before it is scrapped.
- Disconnect the charging USB cable before removing the battery.
- Remove the shaver head.
- Use a small flat screwdriver to pry away the Bottom Cover from unit bottom.
- Unscrew (2s) screws from the unit bottom.
- Hold the handle, and carefully push the unit bottom, and take the internal assembly out.
- Unscrew (4s) screws from the internal assembly.
- Take away the internal assembly cover and expose the printed circuit board.
- Pry the printed circuit board out from internal housing.
- Expose the battery and cut the connections on battery ends.
- Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/ collection point.
- Do not attempt to operate the shaver once you have opened it.
- Dispose of the battery safely.

Recycling



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

ERP

For ErP energy consumption information, please refer to website
eu.remington-europe.com/erp

Service & Guarantee



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided

the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: **<https://uk.remington-europe.com/product-registration>**

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

Service Centre

UK

0800 212 438 (free call mainland UK)
Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK
www.remington.co.uk

Ireland

142 951 40
Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12
<https://ie.remington-europe.com>

Ref. No. RC5390U51

Type No. R39A

26/EU/ RC5390U51

T22-0005737-B

Version 01 /26

Remington® is a Registered Trade Mark
of Spectrum Brands, Inc., or one of its
subsidiaries.

Spectrum Brands (UK) Ltd
Fir Street,
Failsworth,
Manchester
M35 0HS
www.remington.co.uk

© 2026 Spectrum Brands, Inc.
