

REMINGTON®

BareMe™ 3 Blade Shaver



WDF310U51



www.remington.co.uk

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

Before First Use



Read the instructions and retain for future reference.

Intended Use



Household use only



Suitable for use in bath or shower

Specification

Power Rating (W)	5.0
Operating voltage (V)	5.0
Battery Type	Ni-MH, 730Mah
IPX4	Protected against water immersion up to 0.3 meter for 5minutes

Important Safeguards

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- WARNING:** Detach the device from the charging adapter before cleaning it in water.

- Do not use the product with a damaged cord.
- The battery in this device is not replaceable.
- Do not use the appliance if it is damaged or malfunctions.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- Never drop or insert any object into any of the appliance's openings.
- When charging, you must use an external supply unit with an output terminal of 5V & 1A (the measured maximum output power is less than 15W) and meets the requirements of IEC 60335-1 standard.
- The normal temperature range for charging the battery is from 0°C to 45°C.
- Do not expose the appliance or battery to excessive temperatures.

Parts List

1	Shaving Head	
2	Head Release Button	
3	Flexible Outer Foil	
4	Massaging Strip	
5	Flexible Trimmer	
6	On/Off Switch	
7	Bikini Trimmer Headguard/ Protective cap	
8	Cleaning Brush	
Not Shown		
9	USB Charging cable	



Disclaimer

The product that you receive can differ from the product that is shown. The colour, shape, or features can change. These changes do not affect the function of the product.

Charging

Full charge time (hrs)	Run time (min)
20	40

- Always ensure that your hands, shaver and mains adaptor are dry before charging.
- Ensure the product is switched off.
- Before using the appliance for the first time charge it for 24 hours.
- Your shaver cannot be overcharged. If the product is not going to be used for an extended time period (2-3 months), unplug it from the mains and store.
- To preserve batteries, let them run out every 6 months then recharge for 20 hours.

Use

The appliance is suitable for legs, underarms and the bikini area. It can be used dry or in the shower.

Everyday Shaving

- Remove protective cap (7).
- Switch on shaver.
- Hold the shaver at a right angle to your skin and move the shaver against the direction of the hair growth.
- After shaving, switch off shaver.

Note - Before dry shaving, make sure that the area is clean, dry and free from creams or oil.

If you have not shaved for a prolonged period, use the Flexible Trimmer (5) before shaving. This will help you achieve an optimum shaving result.

- Switch on shaver.
- Hold the shaver with the trimmer facing your leg and slightly tilted towards you (approximately at a 45°

angle). Move the trimmer slowly against the direction of the hair growth.

- After shaving, switch off shaver.

Trimming & Shaping

- Attach the bikini trimmer headguard.
- Switch on shaver.
- Hold the shaver at a right angle to your skin and press down gently.
- Edge and shape the area as desired.
- After shaving, switch off shaver.

Best Shaving Performance

We recommend that you use your new shaver daily for two or three weeks to allow time to find the optimum shaving methods for your particular type of hair growth patterns.

Cautionary Notes

If your skin is easily irritated by shaving, or you suffer from skin allergies, you should test a section of your arm or leg before using the shaver. You can also use it wet with soap, foaming gel, or body wash.

Care and Cleaning

This appliance contains no user serviceable parts. Before cleaning, ensure the appliance is switched off.

- Do not use abrasives or brushes to clean components.
- Do not place parts in boiling liquids.

Rinse clean using a damp cloth and dry:

1	Shaving Head
2	Head Release Button
3	Flexible Outer Foil
4	Massaging Strip
5	Flexible Trimmer

6	On/Off Switch
9	USB Charging cable

rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

Battery Removal

This appliance contains batteries that are non-replaceable. When the battery is at the end of its life or leaking, the appliance and battery must be properly disposed of at an official recycling point.

The appliance must be removed from the charging stand when removing the battery.

- Be aware of the risk of terminals of the battery-operated appliance or battery being short-circuited by metal objects
- Ensure the battery is discharged.
- On the back of the shaver, press the shaving head release button to the right, grip the head and remove the shaving head.
- Using a small screwdriver, remove the 4 screws from the inside top of the shaver and the single screw from the bottom of the shaver.
- Separate the top and bottom housing.
- Push the inner frame up and out through the centre of the top housing.
- Prise out the batteries from the inner frame.
- Cut or break the wire stamps on both ends of the batteries.
- The batteries are to be disposed of safely.

Recycling



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable,

ERP

For ErP energy consumption information, please refer to website eu.remington-europe.com/erp

Service & Guarantee



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided

the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

Service Centre

UK

0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

142 951 40

Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12

<https://ie.remington-europe.com>

Ref. No. WDF310U51

Type No. F02A

5V₋₋₋

25/UK/ WDF310U51

T22-7003686 -A

Version 10 /25

Remington® is a Registered Trade Mark
of Spectrum Brands, Inc., or one of its
subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2025 Spectrum Brands, Inc.
