

REMINGTON®

BareMe™ Bikini Kit



WPG310U51

 www.remington.co.uk

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

Before First Use

	Read the instructions and retain for future reference
---	---

not be made by children without supervision.

- **WARNING:** Keep out of reach of children.

Intended Use

	Household use only
	Suitable for use in bath or shower

Battery Use & Safety

WARNING: Keep out of reach of children. Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 h of ingestion. Seek medical attention immediately.


Specification

Operating voltage (V)	1.5V ---
IP Rating	IPX4

1x	AA alkaline battery
-----------	---------------------

Important Safeguards

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance.
 - Do not use attachments other than those we supply.
 - Do not use the appliance if it is damaged or malfunctions.
 - This appliance is battery operated only.
 - This product uses batteries. At the end of their life the batteries must be removed from the appliance and be recycled or disposed of properly in accordance with your state and local requirements.
 - Do not use the product on your eyelashes.
 - Cleaning and user maintenance shall
- When the battery is leaking, the battery must be properly disposed of at an official recycling point.
 - Do not expose the appliance or battery to excessive temperatures.
 - Be aware of the risk of terminals of the battery-operated appliance or battery being short-circuited by metal objects.
 - This appliance contains non-rechargeable batteries, these batteries are not to be recharged.
 - New and used batteries are not to be mixed.
 - Do not use modified or damaged batteries
 - Ensure to align (+) and (-) symbols on the battery with the corresponding mark in the battery compartment.
 - Remove battery if the appliance is not in use for prolonged periods.
 - Do not use a rechargeable battery.
 - Do not dispose of used batteries in a fire.
 - Do not short circuit the battery contacts.
 - Used batteries must be removed from the appliance, recycled or disposed of in an environmentally responsible manner.

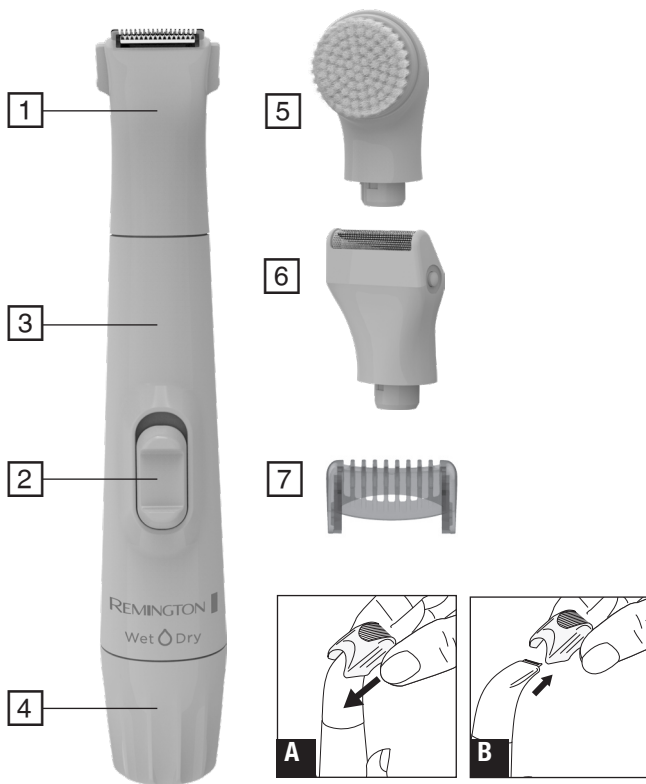

Disclaimer

The product that you receive can differ from the product that is shown.

The colour, shape, or features can change.

These changes do not affect the function of the product.

Parts List

1	Bikini trimmer attachment	
2	On/Off switch	
3	Groomer body	
4	Battery compartment	
5	Exfoliation attachment	
6	Foil shaver attachment	
7	Adjustable length guide	
8	Storage pouch (not shown)	

Use - Tips

- Do not use the groomer if the cutter unit is damaged or broken.
- Ensure hair does not have lotion before you use the groomer.
- You can use the groomer on the bikini area, underarms, and fine facial hair.
- You can use the groomer dry or in the shower.
- Do not rinse the appliance with water exceeding 71°C.
- Before you use the groomer dry, make sure the skin is clean, dry, and does not have cream or oil.

Use - Bikini trimmer & length guide attachment

Use the bikini trimmer to trim hair outside the bikini line. To trim hair inside the bikini line, install the 3-position guide attachment.

- To attach the guide, slide it onto the trimmer as shown (Fig A).
- To adjust the length, grip the sides of the guide, slide the guide off, adjust to align into desired slots and slide back into locked position (Fig B).

Use - Exfoliator

This attachment is designed to exfoliate the skin before shaving. It helps make the skin feel smooth and look clean.

- Move the attachment in a continuous circular motion.
 - Do not use the attachment near long hair.
 - Caution - Long hair can become entangled in the spinning head.
-

Use - Foil Shaver

You can use this attachment to shave small areas. Use it on the bikini line, underarms, or fine facial hair.

- Do not use it to shave large areas such as the legs.
- You can use the attachment dry.
- You can also use it wet with soap, foaming gel, or body wash.

Hold the groomer so that the foil-shaver screen touches the skin gently. This position gives a close shave and reduces wear on the screen.

- Do not hold the groomer at an angle. If you hold it at an angle, the screen can bend and cause skin irritation.

Consult your dermatologist before using on irritated skin or skin with rosacea.

Care and Cleaning

This appliance contains no user serviceable parts. Before cleaning, ensure the appliance is switched off.

- Do not use abrasives or brushes to clean components.
- Do not place parts in boiling liquids.

Do not fully immerse in liquid. Clean using a damp cloth and dry:

3	Groomer body
4	Battery compartment

Remove, clean and dry:

1	Bikini trimmer attachment
5	Exfoliation attachment
6	Foil shaver attachment
7	Adjustable length guide

Recycling



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

ERP

For ErP energy consumption information, please refer to website
eu.remington-europe.com/erp

Service & Guarantee



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided

the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>
 Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

Service Centre

UK
 0800 212 438 (free call mainland UK)
 Spectrum Brands (UK) Ltd
 Fir Street, Failsworth, Manchester
 M35 0HS, UK
www.remington.co.uk

Ireland
 142 951 40
 Remington Consumer Products,
 Unit B12, Ballymount Corporate Park,
 Ballymount, Dublin 12
<https://ie.remington-europe.com>

Ref. No. WPG310U51

Type No. WPG4060

25/UK/ WPG310U51

T22-7003669 Version 10 /25

Remington® is a Registered Trade Mark
of Spectrum Brands, Inc., or one of its
subsidiaries.

Spectrum Brands (UK) Ltd
Fir Street,
Failsworth,
Manchester
M35 0HS
www.remington.co.uk

© 2025 Spectrum Brands, Inc.
