

REMINGTON®

Balder™ Head & Face





XF8000U51

 remington-europe.com

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

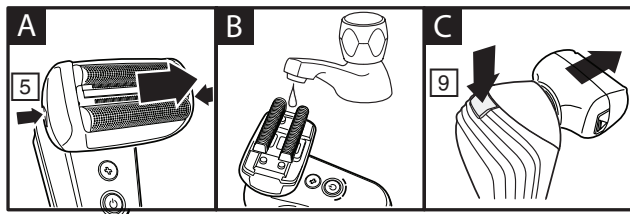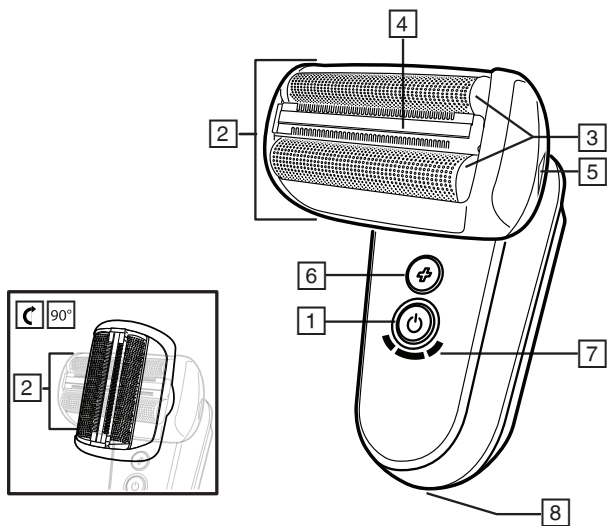

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. **Do not** use the appliance if it is damaged, as this may cause injury.
- The battery is a type Li-Ion, 1150mAh. The normal temperature range for charging the battery is from 0°C to 45°C.
- **Do not** expose the appliance or battery to excessive temperatures.



Suitable for use in a bath or shower.

- **WARNING:** Detach the device from the charging adapter before cleaning it in water.
- **Do not** use the appliance with a damaged cord.
- **Do not** use the appliance if it is damaged or malfunctions.
- **Do not** use attachments other than those we supply.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- **Do not** plug or unplug the appliance with wet hands.
- **Do not** twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|---------------------------------|------------------------------|
| 1. On/off Button | 8. Charging Connector |
| 2. Head Assembly | 9. Attachment Release Button |
| 3. Shaving Foils | Not shown: |
| 4. Intercept Trimmer | • Head Guard |
| 5. Foil assembly Release Button | • Cleaning brush |
| 6. Turbo Button | • Travel Case |
| 7. Indicator Lights | • USB Cable (type-C) |

PERFORMANCE

Performance	Minutes
Charge time	120
Run time on full charge	80
Quick Charge	5
IP	IPX7

CHARGING YOUR APPLIANCE

1. Ensure the appliance is switched off.
2. Charge for 2 hours on first use.
3. Connect the appliance to the USB cable and then connect the USB end of the cable to a powered USB port.

CHARGING INDICATOR LIGHTS

DURING CHARGING

■ On □ Off ▣ Flashing*

*1 second on, 1 second off

When the battery is fully charged, all three **Indicator Lights (7)** remain illuminated for 5 minutes before switching off automatically.

Lights	Charge level (%)
▣ □ □	0-33
■ ▣ □	34-66
■ ■ ▣	67-99

CHARGE REMAINING

■ On □ Off

After switching off the shaver, the **Indicator Lights (7)** remain illuminated for 5 seconds to display the remaining battery level.

Lights	Charge remaining (%)
■ □ □	≤33
■ ■ □	31-65
■ ■ ■	≥66

DURING USE

Note: The **Indicator Lights (7)** will flash in a repeating left-to-right pattern while the device is in use

- The head shaver cannot be operated while it is charging.
- When the battery is fully discharged, charge the shaver for 2 hours to achieve a full charge. A full charge provides up to 80 minutes of shaving time.

INSTRUCTIONS FOR USE

Note: The shaver body will automatically shut off if an attachment head is not attached. Please select the accessory you'd like to use and attach it to the body.

To remove accessory attachments (**Fig C**) press the **Attachment Release Button (9)** and slide the attachment off to release.

1. Hold the shaver body in the palm of your hand. Press the **On/Off Button (1)** to switch the shaver on.
2. Gently press the cutting heads against the scalp. **Do not** apply excessive pressure.
3. Move the shaver slowly across the scalp. Use linear or circular strokes, depending on which method gives the best results for your hair type.
4. Use a handheld mirror to inspect the back of the head and confirm complete coverage. You may also use your free hand to feel for areas that may require additional shaving.
5. When shaving is complete, press the on/off button to switch the shaver off.

TURBO MODE

Activate Turbo mode for efficient shaving of thick hair.

Function	Button	Action	Result
Activate	Turbo Button (6)	Press	Turbo Mode
De-Activate	Turbo Button (6)	Press	Normal Mode

Note: The **Indicator Lights (7)** will flash quicker in a repeating left-to-right pattern while the device is in Turbo Mode.

TRAVEL LOCK FEATURE

☐ Off ☒ Flashing*

Function	Button	Action	Time	Indicator Lights	Result
Activate	Turbo Button (6)	Press + Hold	5 sec	 Flashes 5x	Locked
De-Activate	Turbo Button (6)	Press + Hold	5 sec	 Flashes 5x	Unlocked

TIPS

- **Do not** use the head shaver on hair longer than 2.0 mm or more than four days of growth. The head shaver is designed to maintain a clean-shaven appearance and should be used daily or every two to three days for optimal results
- If hair length exceeds 2.0 mm, use a hair clipper to trim it before operating the head shaver
- The head shaver may be used dry or with shaving cream or gel. It is also suitable for use in the shower

CARE FOR YOUR SHAVER

Maintain the shaver regularly to ensure long-lasting performance. It is recommended to clean the shaver after each use.

- Before cleaning the shaver, ensure it is switched off and disconnected from the charging adaptor.

DEEP CLEAN

- After rinsing away hair and debris, reassemble the shaver and switch it on. Submerge the shaving head in warm water with a few drops of dish soap. Run the shaver for 15 seconds. Switch it off, remove the shaving head from the hair pocket, and thoroughly rinse to remove any remaining buildup.

TROUBLESHOOTING

- If the shaver produces an unusual noise, clean and re-lubricate the inner surfaces of the cutting heads. To maintain optimal performance, clean and lubricate the shaver after each use.

AFTER EACH USE

1. Release the shaver head (**fig. A**).
2. Empty out any hair clippings. The head can be rinsed under a running tap (**fig. B**).
3. Use a cleaning brush to remove any shaving debris.
 - The shaver is washable and can be cleaned by rinsing under warm water.
 - When using shaving creams or gels with the shaver it is especially important to clean after each use to prevent the gel from drying and clogging the cutters.
 - When cleaning the external surfaces of the shaver, **do not** use strong detergents or other chemicals.
 - To dry, wipe the surface of the shaver with a dry cloth or towel.
 - The shaver head assembly is designed to be detachable from the shaver body.
 - (**fig C**) To remove the shaver head, press the **Attachment Release Button(9)** and pull the accessory away from the shaver body. To reattach, align the shaver head with the opening on the shaver body and press until it clicks into place.

BATTERY REMOVAL & DISPOSAL

This appliance contains batteries that are non-replaceable. When the battery is at the end of its life or leaking, the appliance and battery must be properly disposed of at an official recycling point. We strongly recommend that a professional removes the rechargeable battery. Parts of the case, and tools have sharp edges and may cause injury if not handled correctly.

1. The rechargeable battery must be removed from the appliance before it is scrapped.
2. Ensure the trimmer is discharged of all power. To do this, operate the device until it stops.
3. Be aware of the risk of terminals of the battery-operated appliance or battery being short-circuited by metal objects.
4. Remove the attachments.

5. Use a small flat screwdriver to carefully pry off the front housing.
6. Unscrew the 5 screws from top unit and then remove inner top housing.
7. Use a small flat screwdriver to pry off motor, battery and circuit board assembly.
8. Take out the assembly and explode the battery.
9. Disconnect the battery from the circuit board.
10. The battery must be disposed of at an appropriate official recycling/collection point.
11. **Do not** attempt to operate the device once you have opened it.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

ERP

For ErP energy consumption information, please refer to website **eu.remington-europe.com/erp**

REMINGTON®
EST. NEW YORK 1937

