

REMINGTON®

Cordless Ladyshaver



WDF4840

 www.remington.co.uk


Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.



Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
-  The shaver is suitable for cleaning under an open water tap.
- The body of this appliance is not washable or water resistant. Do not put the appliance in liquid.
- **WARNING:** Detach the shaver from the charging adaptor before cleaning it in water.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- This product should only be used with the charging adaptor supplied.
- Always replace a damaged adaptor with one of the original type.
- Do not use the appliance if it is damaged or malfunctions.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

1. Head assembly
2. Head release button
3. On/off switch
4. 2 hypoallergenic flexing shaver foils
5. Bikini trimmer comb guard
6. Flexible trimmer
7. Moisturising massage strip with Aloe Vera
8. Charging stand
9. Anti-Slip grip (not shown)
10. Beauty bag (not shown)
11. Cleaning brush (not shown)
12. Charging adapter with charging indicator light (not shown)

GETTING STARTED

CHARGING YOUR APPLIANCE

- Always ensure that your hands, shaver and mains adaptor are dry before charging.
- Ensure the product is switched off.
- Your shaver can be charged by connecting the adaptor to the charge stand or directly to the product. The charge indicator light on the adaptor will illuminate green when your shaver is charging.
- Before using your Remington® lady shaver for the first time charge it for 24 hours. For subsequent uses, charge for 20 hours before use. One full charge allows 30 minutes of cordless usage time.
- Use the product until the battery is low. This is indicated by the shaver working distinctly slower.
- Your shaver cannot be overcharged. However, if the product is not going to be used for an extended time period (2-3 months), unplug it from the mains and store. Fully recharge your shaver when you would like to use it again.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 20 hours.

CHARGING CAUTIONS

- Do not attach the mains adaptor to the mains with wet hands.
- Always charge your trimmer in a cool, dry place.
- Do not charge your trimmer in close proximity to water.
- The trimmer can be attached to an electrical outlet voltage of 220V – 240V.

INSTRUCTIONS FOR USE

Your lady shaver is suitable for legs, underarms and the bikini area. It can be used dry or in the shower.

FOR REGULAR SHAVING

1. Switch the shaver on.
2. Hold the shaver so that the shaving head is at a right angle to your skin and move the device against the direction of the hair growth.
3. After shaving, turn the shaver off.

NOTE: Before dry shaving, ensure the area is clean, dry and free from creams or oils.

FOR LONGER HAIRS

- If you have not shaved for a while, use the trimmer before shaving. This will help you achieve a more effective shaving result.
- Hold the shaver with the trimmer facing your leg and slightly tilted towards you (approximately 45° angle).
- Move the trimmer slowly against the direction of hair growth.

EDGING AND SHAPING

- Attach the bikini trimmer attachment.
- Hold the trimmer at a right angle to your skin and press down gently.
- Edge and shape the area as desired.

FOR BEST SHAVING PERFORMANCE

- We recommend that you use your new shaver daily for 2-3 weeks to allow time to find the optimum shaving methods for your particular type of hair growth patterns.

CAUTION If your skin is easily irritated by shaving or you suffer from skin allergies, you should test a section of your arm or leg before using the shaver.

CLEANING AND MAINTENANCE

- Care for your appliance to ensure a long lasting performance.
- We recommend you clean your product after each use.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.

AFTER EACH USE

- Ensure the shaver is switched off.
- Remove the shaving head assembly by grasping the trimmers between your thumb and forefinger and pull upwards.
- Blow any loose debris from the foil.
- Brush or rinse any accumulated hair from the main body of the shaver, head assembly and trimmers.
- Leave the head assembly open to let the shaver dry completely.

NOTE

- Do not rinse with water hotter than 70°C.
- Do not submerge the appliance.
- Ensure the shaver is turned off when cleaning.
- Do not clean the shaving foil with a brush.
- At regular intervals, put a drop of sewing machine oil onto the foil and cutter head. Remove excess oil.

REPLACING THE FOIL AND CUTTERS

- To ensure the continued highest quality performance from your shaver, we recommend that the foil and cutters are replaced every 6 months. These can be obtained from your nearest Remington® Service Centre.

SIGNS THAT YOUR FOIL AND CUTTERS NEED REPLACING

- Irritation: as the foil gets worn, you may experience skin irritation.
- Pulling: as the cutters wear, your shave may not feel as close and you may feel the cutters pulling your hair.
- Wear through: you may notice that the cutters have worn through the foils.

TO REPLACE THE FOIL

- Ensure the shaver is switched off.
- Gently push the small plastic area at either end of the foil. The foil should then easily detach from the head assembly.
- To reassemble, slide the foil into foil bracket and click into position.
- Close the head assembly.

CAUTION

- Only hold the plastic to prevent damage to the foil.
- Do not press on the foil when replacing.

TO REPLACE THE CUTTERS

- Ensure the shaver is switched off and open the head assembly.
- Grasp the cutter between your thumb and forefinger and pull upwards.
- To reassemble the cutter, place onto the oscillator tip. Gently push the centre of the cutter, until it clicks into place.

BATTERIES

- The battery must be removed from the appliance before it is scrapped.
 - The appliance must be disconnected from the supply mains when removing the battery.
 - Ensure battery is discharged.
1. Remove the shaver head from the unit.
 2. Using a small screwdriver, remove the screw from the bottom of the shaver.
 3. Pry the front panel from the front housing and remove the switch button.
 4. Pull out the inner housing from the top of the unit and expose the PCB and batteries.
 5. Pry the PCB assembly out of the shaver housing.
 6. Cut or break the wire stamps on both ends of the batteries and remove the batteries.
- The battery is to be disposed of safely.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

 0800 212 438 (free call mainland UK)


Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

IRELAND

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Model No. WDF4840

19/UK/ WDF4840 T22-7000636 Version 06 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.
Spectrum Brands (UK) Ltd

Fir Street,
Failsworth,
Manchester

M35 0HS

www.remington.co.uk

© 2019 Spectrum Brands, Inc.