

REMINGTON®

Cordless Bikini Trimmer



BKT4000

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery




Visit www.remington.co.uk/product/register
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe.

Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Do not immerse the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors. 
- 3 Suitable for use in shower.
- 4 Do not submerge the appliance.
- 5 Do not use attachments other than those we supply.
- 6 Do not use the appliance if it is damaged or malfunctions.
- 7 If the supply cord to the adaptor is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 8 Do not plug or unplug the adaptor with wet hands.
- 9 Store the product at a temperature between 15°C and 35°C.
- 10 This appliance is not intended for commercial or salon use.
- 11 This appliance should be charged by approved safety isolating adaptors VA050035J (EU), BA050035J (UK) with the output capacity of 5VAC; 350mA.



KEY FEATURES

- 1 Detail Trimmer
- 2 Main Trimmer
- 3 Easy Clean Washout Area
- 4 On/Off Switch
- 5 Charging Indicator
- 6 Hang Loop
- 7 2mm Comfort Comb
- 8 4mm Comfort Comb
- 9 Beauty Bag
- 10 Adaptor (not shown)

GETTING STARTED

- ✦ Note: It is recommended to fully charge your appliance before using for the first time. Please refer to the charge times shown in this book.
- Ensure the product is switched off.
- Connect the adaptor to the product and then to the mains.

✦ CHARGE LEVEL INDICATORS

Charge Level	Indicator
Charging	LED will illuminate
Fully charged	LED will remain illuminated

- Run time from fully charged is up to 60 minutes.
- Charge time from empty is 4 hours.
- ✦ Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

INSTRUCTIONS FOR USE

- Select the desired trim length prior to trimming by attaching one of the comfort combs.
- If trimming longer hair, or if trimming for the first time, always start with the longest length comb (4mm) and work your way down to shorter lengths until you reach your desired style.
- Always ensure the trimmer is switched off before attaching or removing a comb.
- Switch the shaver on by pressing the on/off switch.

✦ CHANGING THE ATTACHMENTS

- To attach a comb, place it on top of the trimmer with the teeth of the comb over the main trimmer. Slide the comb down until it clicks into place.
- To remove the comb, pull the sides of the comb where it connects to the trimmer out and lift the comb away from the trimmer.
- ✦ Note: Using the detail trimmer with no comb attached will trim down to 0.2mm.
- Using the main trimmer with no comb attached will trim hair to 1mm.
- Holding the main trimmer upright on the skin will trim hair to 0.4mm.

✦ BIKINI

- Choose and attach the desired comfort comb.
 - Place the flat top of the trimmer comb against the skin.
 - Slowly slide the trimmer through the hair, against the direction of hair growth. As hair grows in different directions, you may wish to change direction where necessary.
 - The comb will trim the hair to the same length, whichever direction you trim.
- ✦ CAUTION: Ensure that the trimmer blade is kept away from any sensitive areas.
- ✦ TIP: Use slow and even strokes and keep the skin nice and taut to ensure hairs are well trimmed.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off and remove the comb. Brush excess hair from the trimmer (dry use) or rinse the comb under water (wet use).
- ✦ CLOSE TO SKIN TRIMMING AND SHAPING THE BIKINI AREA
- For close to skin trimming for the bikini area, remove the comb and use the detail trimmer. This will trim hair down to 0.2mm.
 - To edge and shape the bikini area, remove the comb and use the main trimmer held upright on the skin to create the desired shape.
 - This trimmer has been designed so that it can be used in the shower.
 - Please do not store the trimmer in an area that constantly gets wet.
 - Make sure you dry the trimmer after each use.

CLEANING AND MAINTENANCE

- To ensure long lasting performance clean after each use.
- Ensure the appliance is switched off and unplugged from the mains before cleaning.
- The easiest and most hygienic way to clean the trimmer is under the tap.
- Allow the water to run through the washout area to help wash out any hair trimmings from the inside of the trimmer.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.

✱ TO REMOVE THE BATTERY:

- Ensure the trimmer is discharged of all power.
- Pry the trimmer head out using a single sided screwdriver.
- Using a small screwdriver, unscrew 2 screws on the back housing of the trimmer.
- Pry the front of the trimmer away using a single side screwdriver.
- Pry the circuit board holder from the back using the single side screwdriver so you can see the circuit board and batteries.
- Destroy the circuit board using a wire cutter, cut the tabs on both ends of the battery assembly and remove the circuit board.
- The battery is to be disposed of safely.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. BKT4000

15/UK/ BKT4000 T22-0003686 Version 07 /15

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2015 SBI