

REMINGTON®

CURL CREATE WAND



CI52W0

£10,000 prize draw
PLUS Free Rewards Gallery
Register online now to
collect your reward
See back for
details



Thank you for buying your new Remington® product.

Before use, please read these instructions carefully and keep them safe. Remove all packaging before use.

KEY FEATURES

- 1 4 x Protection coated barrel
- 2 On-off switch
- 3 Temperature controls
- 4 Cool tip
- 5 Stand
- 6 Protection glove – first line protection only (image not shown)
- 7 Swivel cord

PRODUCT FEATURES

- 4x Protection coating – Anti static, Ceramic ,Tourmaline Ionic, Smooth Glide
* Vs standard ceramic coating
- High heat 130°C to 200°C.
- Fast heat up - ready in 30 seconds
- Automatic safety shut off – This unit will switch itself off if no button is pressed or it is left on after 60 minutes
- Multivoltage 120-240V: for home or abroad. At 120V times and temperatures may vary
- 3 year guarantee

SAFETY CAUTIONS

- 1 The appliance, including its cord, must not be used, played with, cleaned or maintained by persons under eight years old and should at all times be kept out of their reach. Use, cleaning or maintenance of the appliance by children over eight or by anyone with a lack of knowledge, experience or with reduced physical, sensory or mental capabilities should only be undertaken after receiving appropriate instruction and under the adequate supervision of a responsible adult to ensure that they do so safely and that the hazards involved are understood and avoided.
- 2 Do not put the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors.
- 3 Keep the hot styling barrel away from the skin.
- 4 Do not leave the appliance unattended while plugged in.
- 5 Only set the appliance down on a heat-proof surface.
- 6 Do not use attachments other than those we supply.
- 7 Do not twist or kink the cable, or wrap it round the appliance.
- 8 Do not use the appliance if it is damaged or malfunctions.
- 9 If the cable is damaged return the appliance, to avoid hazard.
- 10 This appliance is not intended for commercial or salon use.
- 11 Let the appliance cool down before cleaning and storing away.



⚠ INSTRUCTIONS FOR USE

- 1 Before use, ensure the hair is clean, dry and tangle-free.
- 2 For extra protection use a heat protection spray.
 - * Hair sprays contain flammable material – do not use while using the styler.
- 3 Section the hair prior to styling. Style the lower layers first.
- 4 Plug in the styler and slide switch to turn on.
- 5 Start styling on lower temperatures first. Select appropriate temperature for your hair type using the controls on the side of the styler.

Temperature Wheel settings:

0 = Off

130 = Lowest temperature

200 = Maximum temperature

- 6 The on-indicator will flash whilst the styler is heating up and glow when styler is ready to use – this will be about 30 seconds.
- 7 Use the heat protection glove to avoid accidental burns.
- 8 Hold the handle and wrap the hair around the heated barrel.
- 9 Wait about 10 seconds for curl to form.
- 10 Unwind the hair and release the curl.
- 11 Let the hair cool before styling.
- 12 Repeat this around the head to create as many curls as desired.
- 13 When finished slide the switch down to turn off and unplug the appliance.

👁 CLEANING AND MAINTENANCE

Unplug the appliance and let it cool.

Wipe all surfaces with a damp cloth.

Don't use harsh or abrasive cleaning agents or solvents.

Replacement parts and accessories available to buy at <http://www.remington.co.uk/parts-accessories>.

🔌 WIRING INSTRUCTIONS UK PLUGS ONLY

The product doesn't need an earth.


It has a 13A BS1362 fuse in a 13A BS1363 plug.

To replace the plug, fit the blue wire to N, and the brown wire to L. Fit the cord grip.

If in doubt, call an electrician.

Don't use a non-rewireable/moulded plug unless the fuse cover is in place.

If you remove the plug, dispose of it.

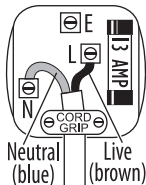



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➔ SERVICE AND GUARANTEE

This product has been checked and is free of defects.

We guarantee this product against any defects that are due to faulty material or workmanship for the guarantee period from the original date of consumer purchase.

If the product should become defective within the guarantee period, we will repair any such defect or elect to replace the product or any part of it without charge, provided there is proof of purchase.

This does not mean an extension of the guarantee period.

In the case of a guarantee simply call the Service Centre in your region.

This guarantee is offered over and above your normal statutory rights.

The guarantee shall apply in all countries in which our product was sold via an authorised dealer.


This guarantee does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required.

This guarantee shall not apply if the product has been dismantled or repaired by a person not authorised by us.

If you ring the Service Centre, please have the Model No. to hand, as we won't be able to help you without it.

It's on the rating plate which can be found on the appliance.

UNITED KINGDOM

 +44 0800 212 438 (free call)

Customer Service
Spectrum Brands (UK) Ltd
Fir Street, Failsworth,
Manchester M35 0HS

12/UK/CI52W0 Version 08/12 Part No. T22-0000657
Remington® is a Registered Trade Mark of Spectrum Brands, Inc.,
or one of its subsidiaries
Spectrum Brands (UK) Ltd
Fir Street,
Failsworth,
Manchester
M35 0HS
www.remington.co.uk
© 2012 SBI

REGISTRATION AND PRIZE DRAW

Collect your free reward, and a chance to win £10,000.

Visit www.productregister.co.uk/remington