REMINGTON®

Shine Wand






Redicted Country for dearth of the state of

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

★ WARNING: This appliance is hot. Keep out of reach of children at all times.

♠ IMPORTANT SAFETY INSTRUCTIONS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 3 Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- 4 When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- 5 For UK, Household Use Only. Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the dryer/straightener is not permitted (see BS7671).
- 6 Do not wrap the cord around the unit. Check the cord regularly for any sign damage.
- 7 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 8 Do not use the appliance if it is damaged or malfunctions.
- 9 Do not allow any part of the appliance touch the face, neck or scalp.
- 10 Do not leave the appliance unattended while plugged in.
- 11 Only set the appliance down on a heat-proof surface.
- 12 Do not place the appliance on any soft furnishings.
- 13 Do not use attachments other than those we supply.
- 14 This appliance is not intended for commercial or salon use.
- 15 Let the appliance cool down before cleaning and storing away.

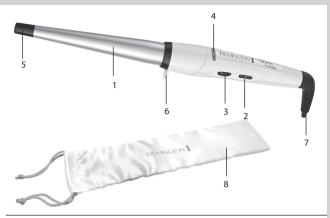

KEY FEATURES

- 1 Advanced Ceramic coated barrel infused with conditioners and Moroccan Argan Oil
- 2 On-off switch
- 3 Temperature controls
- 4 Ready indicator light
- 5 Cool tip
- 6 Stand
- 7 Swivel cord
- 8 Heat resistant pouch

PRODUCT FEATURES

- Conical wand for spiral curls.
- Advanced Ceramic coated barrel, infused with conditioners and Moroccan Argan Oil for soft, beautiful, bouncy curls.
- 8 variable heat settings 140°C 210°C.
- Fast heat up ready in 30 seconds.
- Automatic safety shut off this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

INSTRUCTIONS FOR USE

- 1 Before use, ensure the hair is clean, dry and tangle-free.
- 2 For extra protection use a heat protection spray.
- ★ Hairsprays contain flammable material do not use while using this product.
- 3 Section the hair prior to styling. Style the lower layers first.
- 4 Plug the product into the mains power supply.
- 5 Press and hold the on button to switch on.
- 6 Start styling on lower temperatures first. Select appropriate temperature for your hair type using the controls on the side of the product.
- 7 To increase the temperature rotate the temperature controls to the left in the direction of the '+'. To decrease the temperature rotate the controls to the right in the direction of the '-'.

★ Recommended Temperatures:-

| Temperature | Hair Type |
|---------------|---|
| 140°C - 160°C | Thin/Fine, damaged or bleached hair |
| 180°C - 190°C | Normal, healthy hair |
| 210℃ | Thick, very curly and difficult to style hair |

- Caution: the hottest temperatures should only be used by experienced stylers.
- The temperature display will pulse continuously until the desired temperature is reached.
- · Use the heat protection glove to avoid accidental burns.
- · Hold the handle and wrap a section of hair around the heated barrel.
- · Wait about 10 seconds for the curl to form.
- · Unwind the hair and release the curl.
- · Allow the hair to cool before further styling.
- Repeat this around the head to create as many curls as desired.
- ★ TIP: For soft curls or waves, wait for your hair to cool and brush the curls with a paddle brush.
- When finished, press and hold the off button for two seconds to turn off and unplug the appliance.
- · Let the appliance cool before cleaning and storing away.

CLEANING AND MAINTENANCE

- · Unplug the appliance and allow to cool.
- Wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

ℰ ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



⇒ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

⇒ SERVICE CENTRE

United Kinadom

Tel 0345 6460 438 (free call mainland UK)

+44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 OHS, UK

www.remington.co.uk

Ireland

Tel 142 951 40

Reminaton Consumer Products.

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

M REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. CI53W

15/UK/ CI53W T22-0003240 Version 2 / 15

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street.

Failsworth.

Manchester

M35 0HS

www.remington.co.uk

© 2015 SBI