

REMINGTON®

ColourCut Clipper



HC5035

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery



Visit www.remington.co.uk/productregister
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Do not leave the appliance unattended while plugged in.
- 3 Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- 4 Make sure the power plug, cord and product unit do not get wet.
- 5 Do not plug or unplug the appliance with wet hands.
- 6 Do not use the product with a damaged cord.
- 7 Store the product at a temperature between 15°C and 35°C.
- 8 Do not use attachments other than those we supply.
- 9 This appliance is not intended for commercial or salon use.



KEY FEATURES

- 1 On/off switch
- 2 Taper lever – (6 positions, 0.5 – 2mm)
- 3 9 attachment guide combs
- 4 2 Taper combs (not shown)
- 5 Neck brush (not shown)
- 6 Cleaning brush (not shown)
- 7 Scissors (not shown)
- 8 Styling comb (not shown)
- 9 Adaptor (not shown)

INSTRUCTIONS FOR USE


BEFORE STARTING THE CUT

- Inspect the clipper making sure that it is free from hair and dirt.
- Seat the person so that their head is approximately at your eye level.
- Before cutting, always comb the hair so it is tangle free and dry.

TO ATTACH A COMB

- Hold the comb with its teeth upward.
- Slide it onto and along the clipper blade until the front of the comb firmly sits against the clipper and click into position.

TO REMOVE THE COMB

- Holding the clipper with the blades facing away from you, firmly push the comb upward and away from the blades.
- Each comb attachment is marked accordingly on its outside middle surface.
-  Please note a 0.5mm cutting length can be achieved from holding the clipper, with no comb attachment, perpendicular to the skin. A 1.0mm cutting length is achieved from holding the clipper, with no comb attachment, with the top of the blade surface in contact with the skin.
- This is with the taper setting set at the closest gap between the blades.

Guide Combs	Cutting Length
1 (Grade 0)	1.5mm
2 (Grade 1)	3mm
3 (Grade 2)	6mm
4 (Grade 3)	9mm
5 (Grade 4)	12mm
6 (Grade 5)	16mm
7	18mm
8	22mm
9	25mm

✱ INSTRUCTIONS FOR CUTTING HAIR

- For even cutting, allow the comb attachment/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb attachment.

✱ STEP 1 – Nape of the neck

- Use 3mm or 6mm guide comb.
- Hold the clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
- Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

✱ STEP 2 – Back of the head

- With the 12mm comb attached, cut the hair at the back of the head.

✱ STEP 3 – Side of the head

- With the 3mm or 6mm guide comb attached, trim sideburns. Then change to the longer 9mm or 12mm guide comb and continue to cut up to the top of the head.

✱ STEP 4 – Top of the head

- With the 16mm or 18mm guide comb attached, cut hair on top of the head against the direction in which it normally grows.
- For longer hair on top, use without a guide comb. Lift the hair on top of the head with a small hand comb. Cut over the hand comb with the hair lifted or hold the hair between the fingers to lift it and cut it to the desired length.
- Always work from the back of the head.

✱ STEP 5 – The finishing touches


- Use the clipper without an attachment comb for close trimming around the base and sides of the neck. Use the ear comb guides to get a clean line around each ear. For the required ear comb guide, angle the clipper and lightly stroke around each ear to the back of the neck.
- To produce a clean straight line at the sideburns, reverse the hair clipper.
- Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

✱ TAPER LEVER


- The taper lever adjusts the length of cut when not using comb attachments.
- It is suggested to set the blades closest together when using the comb attachments. Half grade sizes can be achieved by using the taper lever with comb attachments.

CARE FOR YOUR HAIRCLIPPER

AFTER EACH USE

- To ensure long lasting performance of your clipper, clean the blades and unit regularly.
 - Ensure the appliance is switched off and unplugged from the mains before cleaning.
 - Brush the accumulated hair from the blades and body of the clipper. Do not submerge the clipper in water.
 - We recommend oiling the blades after cleaning with a little sewing machine oil.
-  Note: Ensure the clipper is turned off when cleaning.

EVERY SIX MONTHS

- At regular intervals the blade set should be removed and cleaned.
 - The blade set can be removed and reinstalled by using a screwdriver.
 - Brush out hair and do not use water or cleaners on the blade set or internal body housing.
-  CAUTION: Do not use liquid cleaners on the blades or harsh or corrosive chemicals on the blade casing. Always use a soft brush to remove the accumulated hairs.
- Always store this appliance and cord in a moisture-free area.
 - Do not wrap the supply cord around the appliance.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.


If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➡ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

 **REGISTER ONLINE FOR**

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. HC5035

15/UK/ HC5035 T22-0003111 Version 02 /15

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2015 SBI