

REMINGTON®

Beard Trimmer



MB4120

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery




Visit www.remington.co.uk/product/register
You must register within 28 days
of purchase.


Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe.

Remove all packaging before use.

IMPORTANT SAFEGUARDS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE OR INJURY TO PERSONS:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- 3 Store the product at a temperature between 15°C and 35°C.
- 4 Do not use attachments other than those we supply.
- 5 This appliance is not intended for commercial or salon use.
- 6 Keep the appliance dry.
- 7 The blades are washable under a running tap. 
- 8 Please note the main body of the trimmer is not washable and should be kept away from water.

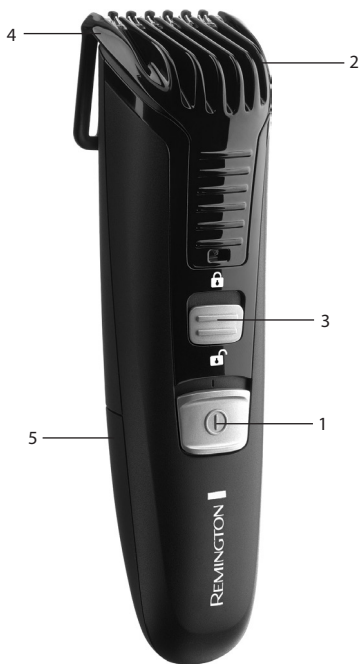

KEY FEATURES

- 1 On/Off switch
- 2 Adjustable comb
- 3 Adjustable comb lock switch
- 4 Trimmer assembly
- 5 Battery compartment
- 6 Cleaning brush (not shown)
- 7 2 x AAA batteries (not shown)

GETTING STARTED

BATTERIES

- Your beard trimmer requires 2 AAA alkaline batteries (first set included). We recommend that you use Varta batteries.
- Turn the appliance off.
- Open the battery compartment by pressing in the ridged areas and pulling downwards.
- Insert batteries so that the (+) and (-) marks on the batteries face the same marks in the battery compartment.
- Remove the batteries if the unit is not in use for long periods.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the appliance before being charged.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the appliance and safely disposed of.
- If the appliance is to be stored unused for a long period, the batteries should be removed.
- The supply terminals are not to be short-circuited.

INSTRUCTIONS FOR USE

BEFORE YOU BEGIN

- Always comb your beard or moustache with a fine comb before you start trimming.
- Adjusting the trim length.
- The trimmer can be adjusted to give you 9 different trim lengths.

Comb Position	Cutting Length
1	1.5mm
2	3mm
3	5mm
4	7mm
5	9mm

6	11mm
7	13mm
8	15mm
9	18mm

✱ Note: Use the beard trimmer without the adjustable comb for trimming hair close to the skin. This will trim hair to 1mm, holding the blades perpendicular to the skin will trim hair to 0.4mm.

✱ ATTACHING AND REMOVING THE ADJUSTABLE COMB

- Ensure the trimmer is switched off.
- To attach the comb place the comb on the beard trimmer so that the teeth of the comb sit on top of the teeth of the blades.
- Slide on the comb until it sits securely on the beard trimmer.
- To remove the adjustable comb, ensure the trimmer is switched off.
- Push the back of the comb upwards and lift away from the beard trimmer.

✱ Note: the on/off switch controls the adjustable comb lock switch to ensure consistent grooming results. When the trimmer is turned on the comb lock switch is enabled. After the trimmer is turned off slide the lock switch down to adjust the comb length.

✱ TO THIN AND TAPER THE BEARD/MOUSTACHE

- Attach the adjustable comb to the trimmer blade and select the desired length by sliding the adjustable comb up or down.
- The setting will appear on the length position indicator on the comb. If you are trimming for the first time, start with the maximum trimming length setting.
- Once you have your desired adjustable comb length turn the trimmer on, this will secure the length increment on the comb.
- Place the flat top of the trimmer comb against the skin.
- Use motions towards the edge of the beard/moustache line to trim to desired locations in facial area and away from the beard in the neck area.

✱ TRIMMING EDGE OF SIDEBURNS

- Start with edge of sideburn and with the trimmer blades resting lightly against your skin, use motions towards the edge of the sideburn line to trim to the desired locations in the facial area.

✦ TRIMMING THE NAPE OF YOUR NECK

- ✦ Note: you will need a hand mirror for this operation if performing it alone.
- Remove the fixed combs or adjustable comb from the wide trimmer. Use your fingers to lift the hair at the base of your head up off the neck.
- Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by the beard trimmer.
- Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
- Be sure to move the unit slowly when performing this operation and to keep the roots at the base of your head out of the way of the trimmer.

✦ BLADE RELEASE

- Ensure the trimmer is switched off.
- Remove the adjustable comb.
- Remove the blades by pushing your thumb upwards under the blades and move the blade set away from the trimmer body.
- To reattach the blades, align the back of the blades with the back housing at the top of the trimmer and push down until the blade set clicks into place.

➡ TIPS FOR BEST RESULTS

- Beard, moustache and sideburn hairs should be dry.
- Avoid using lotions before use.
- Comb your hair in the direction that it grows.

👁 CARE FOR YOUR TRIMMER

- To ensure long lasting performance of the trimmer, clean the blades and unit regularly.
- Ensure the appliance is switched off.
- Do not use harsh or corrosive cleaners on the unit or the blades.
- This product has washable blades. Ensure the blades are detached from the trimmer before washing the blades. Wash the blades under a running tap to remove any hair clippings.
- After rinsing under a tap ensure the blades are dry.
- Do not rinse while the product is connected to the mains. Please note the main body of the trimmer is not washable and should be kept away from water.
- After each use it is recommended to clean hair from the blades either by rinsing the blades or using a cleaning brush.

➡ TROUBLESHOOTING

- The trimmer does not work when turned on:
- Ensure the batteries are properly inserted.
- Trimmer blades do not move:
- The cutting unit may be dirty and clogged.
- Clean and lubricate the unit.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.


If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. MB4120

15/UK/ MB4120 T22-0003570 Version 08 /15

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2015 SBI