

REMINGTON®

DualTrack-X



R4150

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery



Visit www.productregister.co.uk/remington.
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 An appliance should never be left unattended when plugged into a power outlet, except when charging.
- 3 Make sure the power plug and cord do not get wet.
- 4 Do not plug or unplug the appliance with wet hands.
- 5 Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- 6 Store the product at a temperature between 15°C and 35°C.
- 7 Do not use attachments other than those we supply.
- 8 Suitable for cleaning under an open water tap.
- 9 Do not submerge the appliance.
- 10 This appliance is not intended for commercial or salon use.



KEY FEATURES

- 1 Pivoting head and cutter assembly
- 2 Head release button
- 3 Individual flexing heads
- 4 On/Off push button
- 5 Power port
- 6 LED light
- 7 Charging indicator
- 8 Trimmer button
- 9 Power plug

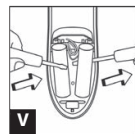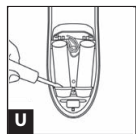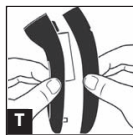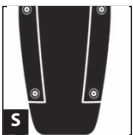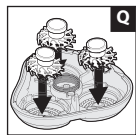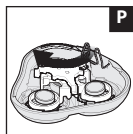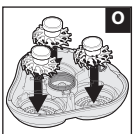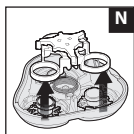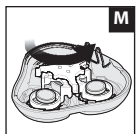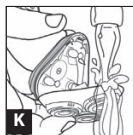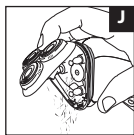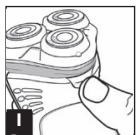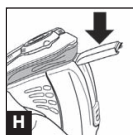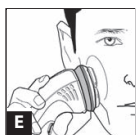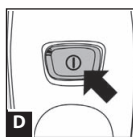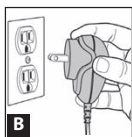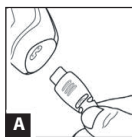

| Feature | |
|----------------------|-------------------------------|
| Power System | Cordless |
| Full Charge Time | 16 hours |
| Cordless Shave Time | 30 minutes |
| Quick Charge | No |
| Indicators | Single green LED for charging |
| Voltage Type | Worldwide |
| Replacement Part No. | SP-SFD2 |

GETTING STARTED

It is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system.

CHARGING YOUR SHAVER

- Ensure your hands, shaver and power cord are dry before charging your shaver.
- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.
- Charge for at least 24 hours when using for the first time.
- After the shaver batteries are fully charged, the green indicator light will remain on.
- Use product until the battery is low.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 24 hours.
- Allow 16 hours for a full charge.
- The shaver automatically adjusts to a mains voltage between 100V and 240V.

CORDED USE

- For corded use connect the shaver to the adaptor, then to the mains.
- Recharge for 5 minutes before use.

CAUTION

Extended mains only use will result in the reduction of the battery life.

INSTRUCTIONS FOR USE

SHAVING

- Switch the shaver on.
- Use the trimmer to remove long hair first (see below).
- Hold the shaving head so all three heads touch your face simultaneously (Fig. E).
- The independently floating heads will automatically adjust to the contours of your face.
- Stretch the skin with your free hand so the hairs stand upright.
- Only apply light pressure on the shaving head while shaving (pressing too hard can damage the heads and make them vulnerable to breakage). Use short, circular strokes.

TRIMMING

- Push the trimmer button down (Fig. F).
- Place the trimmer at desired trim line for a quick, easy, professional trim.
- Hold the shaver as shown in the illustration (Fig. G).
- To retract and switch off the trimmer, push the trimmer lock button in and downwards (Fig. H).

TIPS FOR BEST RESULTS

- Ensure skin is dry.
- Ensure your skin is dry. Always hold the shaver at right angles to the skin so that all three heads are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid damage to the rotary heads.

CARE FOR YOUR SHAVER

- Care for your appliance to ensure a long lasting performance.
- We recommend you clean your product after each use.
- Using a brush, clean the internal parts of the head assembly and shaver body.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.
- Keep the switch in the "off" position when not in use.

✱ DAILY

- Ensure the shaver is switched off and unplugged from the mains.
- Open the shaver head by pressing the release button on the front of the shaver (Fig. I) and flipping open the head away from the body of the shaver (Fig. J).
- Rinse the shaver head with warm water (Fig. K).
- Close head assembly (Fig. L).

✱ WEEKLY

- Perform the daily cleaning steps first.
- Open the shaver head by pressing the release button on the front of the shaver and flipping open the head away from the body of the shaver.
- Release the inner cutter carrier by rotating the locking arms anti-clockwise.
- Pull the inner cutter carrier away from the inner cutters.
- Thoroughly brush hairs from the inner and outer cutters and rinse out any remaining debris.
- Replace the inner cutter.
- Place the inner cutter carrier back onto the upper hair pocket and lock into place by rotating the locking arms clockwise until the arms 'click' into place.

✱ CAUTION:

- Do not submerge in water as damage will occur.
- The shaver can be rinsed with water.
- The water temperature should not exceed 70 degrees.
- Unplug the shaver before cleaning with water.
- Keep the adaptor and cable dry.

✱ CLEANING TRIMMER

- Lubricate the teeth of the trimmer every six months with a drop of sewing machine oil.

✱ TROUBLESHOOTING

- If your shaver battery is completely empty or the shaver has not been used for an extended period of time, the shaver may not start when operated using the cord. If this occurs, charge the shaver for approximately 15 seconds before shaving.
- Your shaver should be mainly used in cordless mode and only recharged when battery charge is low. Continuous connection to the mains will result in the reduction of the battery life.

 **BATTERY REMOVAL**

- Unplug the shaver.
- Remove the head from the shaver (Press release button and pull head straight away from the shaver body).
- Using a small screwdriver, pry the front cover from the body.
- Remove the 4 screws located on the front of shaver (Fig. S).
- Remove rear cover from inner housing to expose batteries (Fig. T).
- Pry batteries free from circuit board and cut wires (Fig. U – V).
- Dispose of batteries safely.

 **ENVIRONMENTAL PROTECTION**

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➔ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.


If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.


Replacement parts and accessories are available to buy at

www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. R4150

15/UK/ R4150 T22-0003196 Version 02 /15

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2015 SBI