

REMINGTON

# REMINGTON® TRIPLE FOIL SHAVER




## Model No. MS5120

10/UK/MS5120 Version 07/10 Part No. T22-30390  
REMINGTON® is a Registered Trade Mark of Spectrum Brands, Inc.,  
or one of its subsidiaries VARTA Consumer Batteries GmbH & Co. KGaA  
Alfred-Krupp-Str.9  
73479 Ellwangen  
Germany  
www.remington-europe.com  
© 2010 SBI



MS5120

 REMINGTON

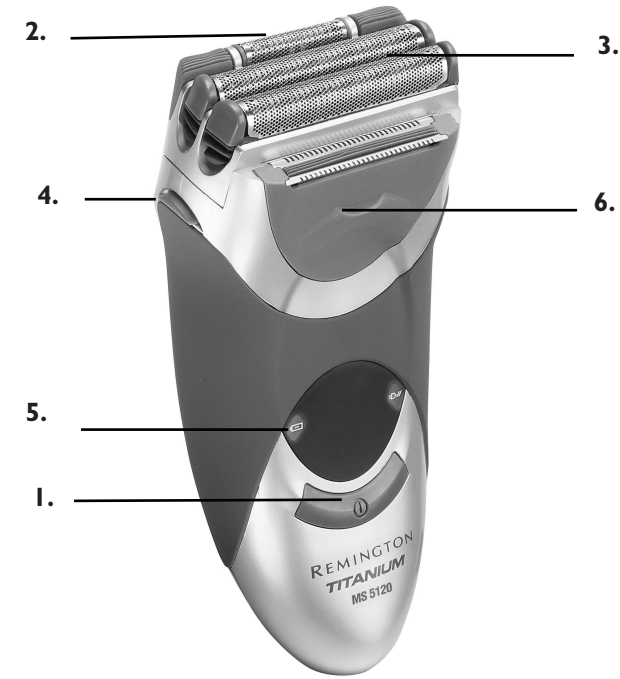




















➔ REMINGTON® SERVICE HOTLINES

**United Kingdom**

                 **☎ +44 0800 212 438 (free call)**

Rayovac Europe Ltd,  
Watermans House, Kingsbury Crescent,  
The Causeway, Staines, Middlesex,  
TW18 3BA, UNITED KINGDOM

[www.remington.co.uk](http://www.remington.co.uk)

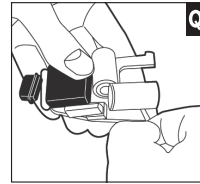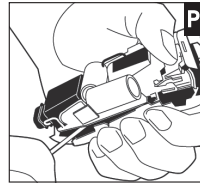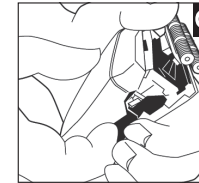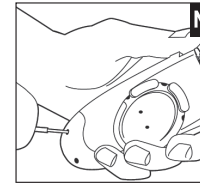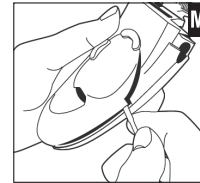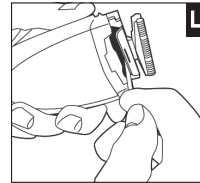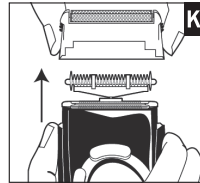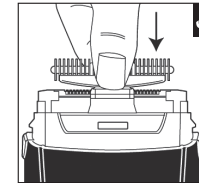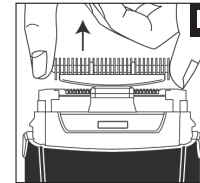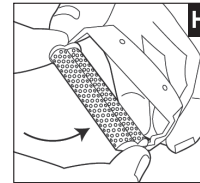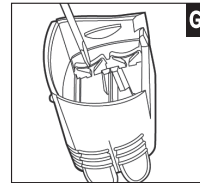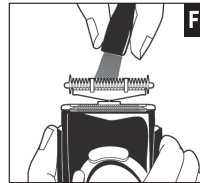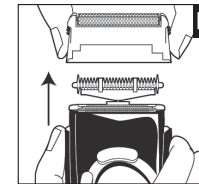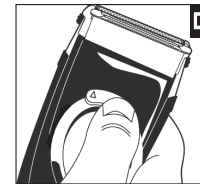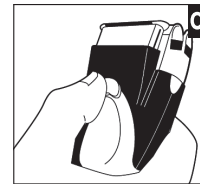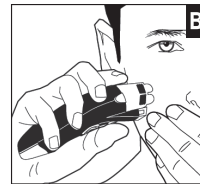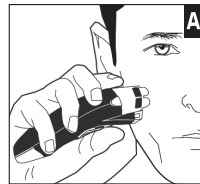

Thank you for choosing Remington®. Our products are designed to meet the highest standard of quality, functionality and design. We hope you enjoy using your new Remington® product. Please read the instructions for use carefully and keep in a safe place for future reference.



## CAUTION

- ◆ Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington®.
- ◆ Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped into water.



## DESCRIPTION

1. On/Off switch
2. Mini foil assembly
3. Foil & cutter assembly
4. Head release button
5. LED charging indicator
6. 3-position pop up trimmer
7. Head guard
8. Power cord
9. Cleaning brush

# ENGLISH

	MS5120
Rechargeable	■
Corded	■
Full charge time	16 hours
Cordless shaving time	60 mins
Charging indicator	■
Low battery indicator	■



## GETTING STARTED

For best shaving performance, it is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system.

### ■ CHARGING YOUR SHAVER

- ▶ Ensure the product is switched off.
- ▶ Connect the shaver to the adapter, then to the mains and charge for at least 24 hours when using for the first time.
- ▶ After the product is fully charged, the green flashlight will indicate the shaver is fully charged.
- ▶ When the red LED is illuminated, the shaver needs to be recharge.

### ■ CORDED USE

- ▶ Connect the shaver to the adapter, then to the mains and recharge for 5 mins before using.
- ◆ CAUTION: Extended mains only use will result in the reduction of the battery life.



## HOW TO USE

### ■ SHAVING

- ▶ Make sure your shaver is properly charged or use directly from the mains.
- ▶ Remove the head guard.
- ▶ Switch the shaver on.
- ▶ Hold the shaving head so that the foils touch your face. (Fig. A)
- ▶ Stretch the skin with your free hand so the hairs stand upright. (Fig. B)

### ■ TRIMMING (fig. E)

The shaver has a 3-position trimmer. Use the trimmer push tab to extend or retract the trimmer.

- ▶ Completely retracted: Push the trimmer down until it locks into position.
- ▶ In the middle position, the trimmer works with the foils, cutting the longer, hard-to-shave hairs. Slide the trimmer into the position level with the foils.
- ▶ Fully extended, the trimmer can be used to trim sideburns and moustache. Slide the trimmer into the top position, above the foils.

### ■ Pop-up mini-foil

The shaver is equipped with a 2-position pop-up mini-foil. Use the mini-foil push tab to extend or retract the mini-foil.

1. Completely retracted the mini-foil works with the 2 large foils to provide a comfortable and close shave.
2. Fully extended (up), the mini-foil can be used to provide a close shave for small or difficult-to-reach areas.

### 👉 Tips for best results

Ensure your skin is dry. Always hold the shaver at right angles to the skin so that both foils are touching the skin with equal pressure. Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line. **DO NOT** hold the shaver at an angle whereby only one foil is touching the skin. This will distort the foil and may cause the cutters to damage the foil. **DO NOT** press hard against the skin in order to avoid damage to the foil.



## CARE FOR YOUR SHAVER

Care for your product to ensure a long lasting performance. We recommend you clean your shaver after each use. The easiest and the most hygienic way to clean the shaver is by rinsing the product head after use with warm water. Always keep the protective cap on the shaving head and keep the trimmer in the "off" position when the shaver is not in use.

### ■ CLEANING

- ▶ Ensure the shaver is switched off and unplugged from the mains outlet.
- ▶ Release the head assembly from the shaver body. (Fig. E)
- ▶ Gently tap the shaver head on a flat surface to remove the hair particles, and rinse under warm water. Never submerge your shaver completely under water.
- ▶ Thoroughly clean the cutter and trimmer with a brush. (Fig. F)
- ▶ Close the shaving unit and shake off excess water.

- ▶ Leave the shaving unit open to let the shaver dry completely.
- ▶ At regular interval, put a drop of sewing machine oil onto the shaving head.
- ◆ **CAUTION:** Do not clean the shaving foil with the brush.

## ■ REPLACING THE FOILS & CUTTERS

To ensure the continued highest quality performance from your shaver, we recommend that foils and cutters are replaced regularly.

Signs that your foils and cutters need replacing:

- ▶ Irritation: As foils get worn, you may experience skin irritation.
- ▶ Pulling: As the cutters wear, your shave may not feel as close and you may feel your cutter pulling your hair.
- ▶ Wear through: You may notice that the cutters have worn through the foils.

## ■ TO REPLACE THE FOIL

- ▶ Hold the housing of the head assembly with one hand. Use a small flat blade screwdriver or similarly tipped blunt object. From the inside opening, press upward on each release strap to push both screen assemblies out of the top of the head assembly. (Fig. G)
- ▶ Carefully slide two foil assemblies downward into the top openings. It is easiest if you lower one end first, hooking the end in place, then swing the far end down until it snaps in place. (Fig. H)
- ◆ If the foil assembly will not fit easily into the housing, rotate the foil 180 degrees.

## ■ TO REPLACE THE CUTTERS

- ▶ Grasp cutter between thumb and forefinger and pull upward. (Fig. I)
- ▶ Snap both new cutter assemblies into top of oscillator tips. (Fig. J)
- ◆ **Note:** Do not press on the cutter ends as this may cause damage.

Foil replacement model: SP95.

Foil and cutters replacement model: SP96.



## IMPORTANT SAFETY INSTRUCTIONS

### ■ WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- ▶ Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.
- ▶ An appliance should never be left unattended when plugged in to a power outlet, except when charging.
- ▶ Keep the power adaptor and cord away from heated surfaces.

- ▶ Make sure the power adaptor and cord do not get wet.
- ▶ Do not plug or unplug the shaver with wet hands.
- ▶ Do not use the product with a damaged cord. A replacement can be obtained via the Remington® Service Center.
- ▶ Charge, use and store the product at a temperature between 15°C and 35°C.
- ▶ Always unplug from the mains when cleaning or when being used under running water.
- ▶ Only use parts supplied or recommended by Remington®.



## TROUBLESHOOTING

- ▶ If your shaver battery is completely empty or the shaver has not been used for an extended period of time, the shaver may not start when operated using the cord. If this occurs, charge the shaver for approximately 15 sec. before shaving.
- ▶ Your shaver should be mainly used in cordless mode and only recharged when battery charge is low. Extended mains only use or continuous connection to the mains will result in the reduction of the battery life.



## PROTECT THE ENVIRONMENT

This appliance contains an environmental friendly rechargeable Nickel Metal Hydride battery. Do not dispose the appliance or the battery in the household waste as restrictions exist in most countries. Adhere to the national or local regulations for collection and disposal that apply for your specific location. In case you are required to remove the battery from the appliance for separate disposal see instructions in the 'Battery Removal' section on how to open the housing.



For further information on recycling see [www.remington-europe.com](http://www.remington-europe.com)

- ◆ CAUTION: Do not put in fire or mutilate your battery packs as they may burst or release toxic materials.



## BATTERY REMOVAL



Ni-MH



To remove the shaver battery, please follow the instruction as shown in Fig. K – Q.

- ◆ DANGER! Once the shaver has been dismantled for disposal, do not attempt to reassemble and/or use.

- ◆ Alternatively, you may choose to remove the batteries yourself.
- ▶ To avoid a possible electric shock hazard, unplug cord (if used) from electrical outlet and shaver.
- ▶ Run the shaver until the motor stops.
- ▶ Remove head assembly by first pressing the two side buttons. (Fig. K)
- ▶ Un-clip the top metal bracket by prying the lower back edge over the snap. Lift the lip of the rubber boot off the housing. (Fig. L)
- ▶ Pry off the front panel. (Fig. M)
- ▶ Remove the two screws securing the cord opening. (Fig. N)
- ▶ Squeeze the front housing and pull the back off to expose the PCB and batteries. (Fig. O)
- ▶ Pry the PCB assembly out of the shaver housing (Fig. P)
- ▶ Cut or break the wire straps on both ends of the batteries, pry the batteries from the foam adhesive tape on the PCB. (Fig. Q)
- ▶ Dispose of batteries with extreme care.

2  
years

## SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for a 2 year period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the Remington® Service Center.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include shaving heads / foils and cutters which are consumable parts. Also not covered is damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.