

# REMINGTON®



Official Electrical Styling Partner of Manchester United

## QuickCut Hair Clipper



**HC4255**

 [remington-europe.com](http://remington-europe.com)

**Register online for an EXTRA year guarantee**

Visit [uk.remington-europe.com/product-registration](http://uk.remington-europe.com/product-registration) You must register within 28 days of purchase.

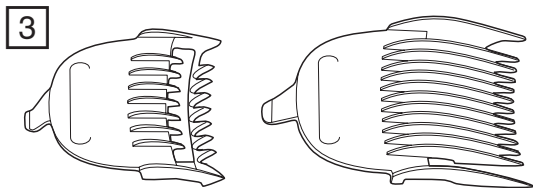
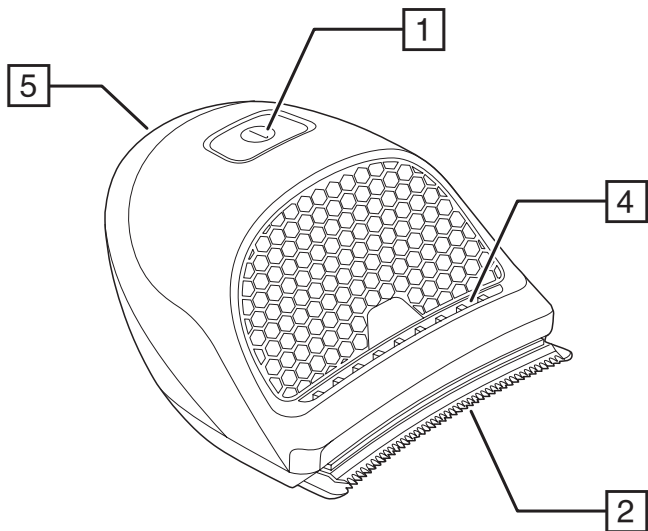


Fig. 1



Fig. 2



Fig. 3



Fig. 4

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## IMPORTANT SAFEGUARDS

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.



The device is suitable for cleaning under an open water tap.

- **WARNING:** Detach the device from the charging adapter before cleaning it in water.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- This product should only be used with the charging adaptor supplied.
- Do not use attachments other than those we supply.
- The charging adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
- Do not use the appliance if it is damaged or malfunctions.
- Do not plug or unplug the appliance with wet hands.
- This appliance is not intended for commercial or salon use.

---

## PARTS

---

1. On/off switch
2. Blade set
3. 9 attachment guide combs
4. Washout port
5. Charging indicator

*Not shown:*

- Cleaning brush
- Oil bottle
- Adaptor
- Travel pouch
- Hair cape

---

## GETTING STARTED

---

### CHARGING YOUR APPLIANCE

Note: It is recommended to fully charge your appliance before using for the first time. Please refer to the charge times shown in this book.

- Connect the product to the adaptor and then to the mains.
- When charging the charge indicator will slowly flash.

### CHARGE LEVEL INDICATORS

Charge Level	Indicator
Charging	LED blinks
Fully charged	LED solid

- Run time from fully charged is up to 40 minutes.
- Charge time from empty is 4 hours.

Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

### QUICK CHARGE FUNCTION

- 10 minutes charging will give an emergency burst of run time.

---

## INSTRUCTIONS FOR USE

---

- For corded use connect the product to the adaptor, then to the mains.  
CAUTION Extended mains only use will result in the reduction of the battery life.

### CORDLESS USE

- When the unit is switched on and fully charged, the product can be used in cordless mode for up to 40 minutes.
- Switch the product on by pressing the on/off switch.

### BEFORE STARTING THE CUT

- Inspect the clipper making sure that it is free from hair and dirt.
- Before cutting, always comb the hair so it is tangle free and dry.

Guide Comb	Cutting length
1 (Grade 0)	1.5mm
2	2mm
3	2.5mm
4 (Grade 1)	3mm

<b>Guide Comb</b>	<b>Cutting length</b>
5	4.5mm
6 (Grade 2)	6mm
7 (Grade 3)	9mm
8 (Grade 4)	12mm
9 (Grade 5)	15mm

- Use the clipper without any fixed combs for trimming hair close to the skin.
- This will trim hair to 1mm, holding the clipper so the blades are perpendicular to the skin will trim hair to 0.5mm.

### **TO ATTACH A COMB**

- Hook the front edge of the comb to the front teeth of the wide trimmer blade. Then push the back of the comb down until it snaps in place.

### **TO REMOVE THE COMB**

- Push up the back of the comb until it clicks off the clipper blade.

### **INSTRUCTIONS FOR CUTTING HAIR**

- The QuickCut Clipper's ergonomic design provides many different ways of holding the clipper in use.
- For clipping the top of the head (see fig. 1).
- For clipping the back of the head (see fig. 2).
- For clipping the sides of the head (see fig. 3).
- For detailing (see fig. 4).
- For even cutting, allow the comb attachment/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb attachment.
- For one all over cut length, attach the desired guide comb and slowly guide the clipper through the hair against the direction the hair normally grows.
- Remove the guide comb. To produce a clean straight line at the sideburns and the base of the neck, reverse the hair clipper. Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

The following instructions are for those users who want different trimming lengths on the sides, back and top of the head

#### **STEP 1 – NAPE OF THE NECK**

- Set the comb to 3mm or 6mm.
- Hold the clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.

- Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

#### **STEP 2 – BACK OF THE HEAD**

- With the comb set at 9mm or 12mm, cut the hair at the back of the head.

#### **STEP 3 – SIDE OF THE HEAD**

- With the comb set at 3mm or 6mm, trim sideburns. Then change to the longer 9mm guide comb and continue to cut the top of the head.

#### **STEP 4 – TOP OF THE HEAD**

- Use the longer length comb attachment and set it to 12mm or 15mm then cut hair on top of the head against the direction in which the hair normally grows.

#### **STEP 5 – THE FINISHING TOUCHES**

- Use the clipper without an attachment comb for close trimming around the base and sides of the neck and around the ears.
- To produce a clean straight line at the sideburns, reverse the hair clipper. Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

---

### **CARE FOR YOUR HAIRCLIPPER**

---

- To ensure long lasting performance of your clipper, clean the blades and unit regularly.
- Always keep the clipper in the provided travel pouch.
- Ensure the appliance is switched off and unplugged from the mains before cleaning.
- Do not use harsh or corrosive cleaners on the unit or blades.
- Cleaning should be done with a soft brush.
- After each use - brush the accumulated hair from the blades.

#### **WASHABLE CLEANING**

- The QuickCut Clipper is fully washable for easy cleaning.
- Ensure the appliance is switched off and unplugged from the mains.

#### **WASHOUT PORT INSTRUCTIONS**

Note: Never rinse, wash or otherwise subject this product to liquid whilst the power cord is connected.

- For best results, keep trimmer running while running it under the tap. Allow water to run through the washout port and over the blades. Recommended to rinse after each use.
- Ensure the clipper is dry after cleaning.
- For more thorough cleaning the blade set can be easily removed to wash any hair trimmings from the blades. To release the blade set, push the blade set release button found on the base of the clipper.

- Ensure the blades are dry after rinsing under the tap. To reattach, align the blade set onto the clipper and push the blade set towards the clipper body until it clicks into place.
- Place a small drop of cutter or sewing machine oil onto the blades at each end and at the middle point of the blades. Turn the unit on for a few seconds to distribute the oil then turn off and wipe off excess oil.

---

## **BATTERY REMOVAL**

---

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure the clipper is discharged of all power.
- Starting at the seam on either side of the charge indicator lens, pry open seam working back and forth from one side to the other, following the seam until the top shell has been pried apart all the way from the rest of the clipper. Remove the two screws from the inner housing.
- Gently pull the inner housing straight up and away to remove the inner housing shell.
- Remove the two screws from the inner structure located on each side of the circuit board.
- Gently pull the inner structure containing the battery and circuit board up out of the lower housing structure of the clipper.
- From the under side of this inner structure, cut the red and black wires which lead to the battery.
- With the inner housing structure right side up, pull upward firmly on the circuit board to allow room to remove the battery. Pry the battery out of its holder.
- Dispose of the batteries safely.
-

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.



---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under

any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.

\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

---

## SERVICE CENTRE

---

### UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester


M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

Product support:

[productsupport@remington.co.uk](mailto:productsupport@remington.co.uk)

### IRELAND

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

[productsupport@remington.co.uk](mailto:productsupport@remington.co.uk)



# **Ref. No. HC4255**

## **Type No. RG016A**

20/UK/ HC4255 T22-7001716 Version 08 /20

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[remington-europe.com](http://remington-europe.com)

© 2020 Spectrum Brands, Inc.