

# REMINGTON®

## Endurance Groomer



**MB4200**

 [www.remington.co.uk](http://www.remington.co.uk)

**Register online for an EXTRA year guarantee**

Visit [uk.remington-europe.com/product-registration](http://uk.remington-europe.com/product-registration) You must register within 28 days of purchase.



Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## IMPORTANT SAFEGUARDS

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.



- The device is suitable for cleaning under an open water tap.
- **WARNING:** Detach the device from the charging adapter before cleaning it in water.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- This product should only be used with the charging adaptor supplied.
- Do not use the appliance, charging adaptor, or any other part if it is damaged, as this may cause injury. Always replace a damaged charging adaptor with one of the original type.
- The charging adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
- Do not immerse the charging adaptor in water or any other liquid, nor rinse it under the tap.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

---

## PARTS

---

1. On/Off switch
  2. Main blade
  3. Detail blade
  4. Adjustable comb (1-15mm)
  5. Fuel gauge
  6. USB charging cable
  7. Travel lock
  8. Oil bottle (not shown)
  9. Travel case
- 

## GETTING STARTED

---

### CHARGING YOUR APPLIANCE

- Note: It is recommended to fully charge your appliance before using for the first time.
- Ensure the product is switched off.
- Connect the product to the USB cable and then connect the USB end of the cable to a USB plug adaptor to the mains.

### CHARGE LEVEL INDICATORS

Charge Level	Indicator
Charging	LED flashes
Low battery	LED flashes red
Fully charged	LEDs show solid

- When in use;
- 3 Blue LEDs indicate 70% - 100% charge remaining.
- 2 Blue LEDs indicate 40% - 70% charge remaining.
- 1 Blue LED indicates 10% - 40% charge remaining.
- 1 Red LED indicates 5% - 10% charge remaining. 1 Red flashing LED indicates less than 5% charge remaining as noted in the above section on low battery charge level indicator.
- Run time from fully charged is up to 90 minutes when not operated in turbo mode.
- Charge time from empty is 4 hours.

### QUICK CHARGE FUNCTION

- The trimmer has a 5 minute quick charge feature that will provide enough charge for 1 grooming session.

### ENDURANCE TECHNOLOGY AND TRAVEL LOCK

- The product will only charge when the travel lock, found on the back of the product is disabled.
- To enable the endurance technology to operate please ensure you activate the travel lock in between uses of the groomer by sliding down the travel lock.
- Only charge from 5V 1A (minimum) adapters.

---

## INSTRUCTIONS FOR USE

---

- Switch the product on by pressing the On/Off switch.
- This model has a turbo mode that can be activated by pressing down the On/Off switch for 2 seconds.
- To deactivate turbo and go to the normal speed setting, press the On/Off switch down for 2 seconds.
- Always comb your beard or moustache with a fine comb before you start trimming.

### ADJUSTABLE COMB

- Attach the adjustable comb by placing the comb above the groomer so that the back of the adjustable comb sits above the detail blade. Slide the comb down onto the groomer body so that the comb rails slot into the recesses found either side of the groomer body until it clicks into place.
- To remove the comb make sure the comb is set at the minimum length setting. Grasp the comb and pull firmly upwards and away from groomer, whilst pushing upwards with your other thumb.
- Select the comb length by pressing the comb length adjustment button and pushing upwards to increase the length setting or downwards to decrease the length on the adjustable comb. The length setting can be seen on the length position indicator on the back of the comb.

### TO THIN AND TAPER THE BEARD/MOUSTACHE

- If you are trimming for the first time start with the maximum trimming length setting.
- Turn the unit on.
- Place the flat top of the adjustable comb against the skin.
- Slowly slide the trimmer through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush the hair off.

### CLOSER TRIMMING AND DETAIL BLADE TRIMMING

- For stubble lengths, remove the adjustable comb and follow the instructions noted above.
- Using the main blade without the adjustable comb will trim hair to 1mm. Holding the main blade perpendicular to the skin will trim hair to 0.4mm.
- To achieve a shaven look ensure the hair is already trimmed down to 1mm. Then using the detail blade slowly rest the blades against the skin to trim down to 0.2mm.
- Note: The detail blade sits directly behind the front of the product. This has been designed to pull the skin taut in order to effectively trim hairs down to the 0.2mm length.

### TRIMMING EDGE OF SIDEBURNS

- Hold the trimmer with the main blade facing you with the adjustable comb removed.
- Start with edge of sideburn and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim the desired locations in facial area.
- Shape as desired.

### TIPS FOR BEST RESULTS

- Avoid using lotions before use.
- If you are trimming for the first time start with the maximum comb length setting.

---

### CARE FOR YOUR GROOMER

---

- To ensure long lasting performance of the groomer, clean after each use.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head under the tap after use while the blades are running.
- To keep the unit in optimal condition we recommend re-oiling the blades after cleaning. Place a few drops of cutter or sewing machine oil onto the blades. Wipe off excess oil.

---

### BATTERY REMOVAL

---

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the mains supply when removing the battery.
- Ensure the trimmer is discharged of all power.
- Remove the comb attachment.
- Use a flat screwdriver to pry apart the top and bottom housing.
- Remove the circuit board from the housing.
- Disconnect the battery from the circuit board.
- The battery is to be disposed of safely.

---

### RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.

\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

---

## SERVICE CENTRE

---

### UNITED KINGDOM


 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd  
Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

### IRELAND

 142 951 40

Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12

<https://ie.remington-europe.com>

# Model No. MB4200

19/UK/ MB4200 T22-7000584 Version 06 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2019 Spectrum Brands, Inc.