

REMINGTON®

Nano Series Nose and Ear Trimmer



NE3850

NE3870

 www.remington.co.uk

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.



3



4



5



6



Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Suitable for use in shower.
- Do not disassemble the cutter assembly.
- Always remember to turn the trimmer on before you insert it into your nose or ear to avoid injury.
- This appliance is not intended for commercial or salon use.

BATTERY SAFETY

- It is not recommended to use a rechargeable battery.
- Different types of batteries or new and used batteries are not to be mixed.
- Do not short circuit the battery contacts.
- Used batteries must be removed from the appliance, recycled or disposed of in an environmentally friendly way (see RECYCLING).

PART

- | | |
|---|--------------------------------------|
| 1. On/Off switch | 6. Vertical trimmer attachment combs |
| 2. Vertical trimmer | 7. Battery compartment |
| 3. Rotary trimmer (NE3850) | 8. Active BladeClean system button |
| 4. Detail trimmer (NE3870) | 9. Wash out feature |
| 5. 5 setting guide comb for detail trimmer (NE3870) | |

GETTING STARTED

INSERTING BATTERIES

- Your NE3850 requires 1 'AA' alkaline battery (first one included).
- Your NE3870 requires 1 'AA' lithium battery (first one included).
- Ensure the product is switched off.
- Rotate the battery compartment cap approximately ¼ turn anti-clockwise then pull off.
- Insert the battery so that the (+) and (-) marks on the batteries face the same mark in the battery compartment.
- Place cap back on unit using the alignment marks and rotate clockwise until the cap snaps into place.

Note: Your trimmer will not work if the batteries are inserted incorrectly.

Note: Remove the batteries if the appliance is not in use for long periods.

EXCHANGING THE ATTACHMENTS

- Ensure the product is switched off.
- Remove the head by turning it anti-clockwise and pull off.
- Attach the other head by placing it on the top of the unit and turning it clockwise to lock into position.

TURNING ON THE TRIMMER

- The On/Off switch is integrated into the battery cap.
- Rotate the battery cap clockwise to turn on.
- To turn off, simply rotate the battery cap anti-clockwise to the off position.

INSTRUCTIONS FOR USE

Note: Your trimmer has been designed to be used in the shower if desired. Do not submerge trimmer when in use. It can be rinsed, or used in the shower, but not underwater.

Note: Do not apply excessive pressure as this damages the trimmer head and may cause skin injury.

TO REMOVE HAIR FROM NOSE

- The vertical trimmer or rotary trimmer (NE3850) can be used for trimming the nose hair.
- Insert trimmer's cutting unit gently into the nostril.
- Gently move the trimmer in and out of the nostril and at the same time rotate the trimmer.
- Avoid inserting the cutting unit more than 6mm into your nostril.

TO REMOVE HAIR FROM EYEBROWS

- Attach the vertical linear trimmer.
- For trimming, attach one of the attachment combs onto the vertical linear trimmer.
- Gently guide the cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
- To remove the hairs completely, remove the attachment comb and lower the trimmer onto the skin and move over the desired area.
- Use slow and well-controlled movements.

TO REMOVE HAIR FROM EAR

- The vertical trimmer or rotary trimmer (NE3850) can be used for trimming ear hair.
- Insert the cutting unit gently into the outer ear canal opening.
- Gently rotate the trimmer in a circular motion.
- Avoid inserting the cutting unit more than 6mm into your ear canal.

TO SHAPE SIDEBURNS AND BEARD LINES (NE3870)

- Hold trimmer with detail trimmer blade (NE3870) facing you.
- Start with edge of beard/moustache line and gently lower the trimmer blade onto your skin. Use motions towards edge of beard/moustache line to trim to desired locations in facial area and away from beard in neck area.

TO TRIM SIDEBURNS AND OTHER FACIAL HAIR AREAS (NE3870)

- The detail trimmer (NE3870) comes with an adjustable comb to trim sideburns and other facial hair areas to any length between 1 and 5mm.
- To attach the comb onto the detail trimmer (NE3870), ensure the trimmer blade is facing away from you and then slide the guide comb over the back of the trimmer blade until fitted securely.
- Hold the trimmer with cutting blade facing you.
- Use a small comb to lift the hairs. Hold the comb at the desired beard or moustache length.
- Move the trimmer along the comb to cut the hairs. Use light pressure and well-controlled movements to trim hair.

CARE FOR YOUR TRIMMER

- Care for your product to ensure a long lasting performance. We recommend that you clean your trimmer after each use.
- For best results, keep trimmer running while running it under the tap. Allow water to run through the washout port and over the blades. Press the Active BladeClean system button while rinsing to flush water through the blades.
- Dry off excess water.
- Do not submerge in water as damage will occur.

TROUBLESHOOTING

- The trimmer is not running but has battery power left:
- If the trimmer is not running it may need cleaning; look for and remove any dried debris from the cutting blades and then press the Active BladeClean system button whilst rinsing the trimmer under running water.

AFTER EACH USE

- Rinse the accumulated hair from the cutters as noted above. Ensure all debris is removed from between the blades and then press the Active BladeClean system button and shake off excess water.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- Rotate the battery compartment cap approximately $\frac{1}{4}$ turn anti-clockwise then pull off.
- Remove the battery from the battery compartment.
- Place the cap back on the unit opposite to how it came off and rotate clockwise until the cap snaps into place.
- The battery is to be disposed of safely.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM


 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

IRELAND

 142 951 40

Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12

<https://ie.remington-europe.com>

Model No. NE3850 / NE3870

19/UK/ NE3850/NE3870 T22-7000570 Version 07 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2019 Spectrum Brands, Inc.