

# REMINGTON®

## Battery Operated Grooming Kit





**PG180**

 [www.remington.co.uk](http://www.remington.co.uk)

**Register online for an EXTRA year guarantee**

Visit [uk.remington-europe.com/product-registration](http://uk.remington-europe.com/product-registration) You must register within 28 days of purchase.

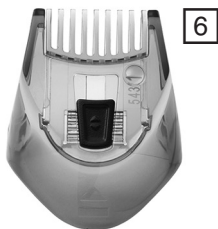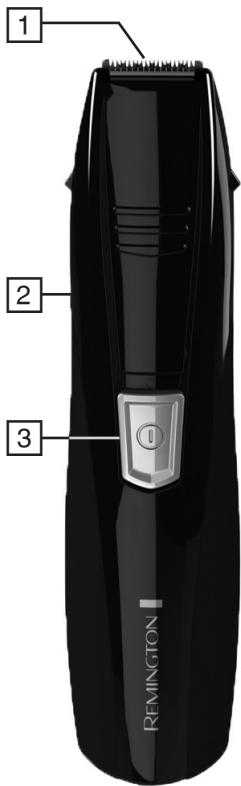

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## **IMPORTANT SAFEGUARDS**

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance.
- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
- This appliance is battery operated only.
- This product uses batteries. At the end of their life the batteries must be removed from the appliance and be recycled or disposed of properly in accordance with your state and local requirements.
- This appliance is not intended for commercial or salon use.

### **BATTERY SAFETY**

- Remove batteries if the unit is not in use for long periods.
- It is not recommended to use a rechargeable battery.
- Do not dispose of used batteries in a fire.
- Do not short circuit the battery contacts.
- Used batteries must be removed from the appliance, recycled or disposed of in an environmentally friendly way (see RECYCLING).

---

## **PARTS**

---

- |                   |                               |
|-------------------|-------------------------------|
| 1. Detail trimmer | 4. Miniscreen shaver          |
| 2. Groomer        | 5. Nose, ear, eyebrow trimmer |
| 3. On/off switch  | 6. Attachment guide comb      |

---

## **GETTING STARTED**

---

### **BATTERIES**

1. Make sure the product is turned off.
2. Slide off the battery compartment cover then pull off.

3. Insert 2 "AA" alkaline batteries, so that the (+) and (-) marks on the battery face the same mark in the battery compartment.
4. Replace the battery compartment cover.

Note: Remove batteries if the unit is not in use for long periods.

---

## **INSTRUCTIONS FOR USE**

---

### **ATTACHING AND REMOVING THE COMB**

- The adjustable guide comb gives 5 different trim lengths.
- To fasten the guide comb, snap on to the back of the detail trimmer head.
- If you are trimming for the first time start with the maximum trimming length setting.

### **BEFORE YOU BEGIN**

- Comb facial hair with a fine comb before you start trimming.
- Hairs should be dry and without any waxes or lotions before using the groomer.

### **TO THIN AND TAPER BEARDS OR MOUSTACHES**

1. Attach the trimmer blade.
2. Place the hair length attachment on the trimmer blade, select the desired length and switch on.
3. Start trimming under the chin, following the jawbone line.
4. Work towards the ear and upper beard line using an upward motion.

### **TO TRIM EDGE OF BEARD OR MOUSTACHE**

1. Attach the trimmer blade.
2. Hold groomer with cutting blade facing you.
3. Start with edge of beard/moustache line, and with the cutting blades resting lightly against your skin, use slow movements to create a beard/moustache line.

### **TO TRIM SIDEBURNS**

1. Attach the trimmer blade.
2. Use a small comb to lift the hairs. Hold the comb at the desired beard or moustache length.
3. Move the groomer along the comb to cut the hairs. Use light pressure and well-controlled movements to trim hair.

### **TRIMMING THE NAPE OF YOUR NECK**

1. Attach the trimmer blade.
2. Use your fingers to lift the hair at the base of your head up off the neck.
3. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by groomer.

4. Using your other hand, hold the groomer to the base of your neck with the cutting unit facing up, and move the groomer up the length of the neck until the unit touches your finger covering the hair roots at the base of your head. Move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the groomer.

#### **TO REMOVE HAIR FROM NOSE AND EAR**

1. Attach nose, ear and eyebrow attachment.
  2. Insert the groomer's cutting unit gently into the nostril or ear.
  3. Gently move the groomer in and out of the nostril or ear and at the same time rotate the groomer.
- Avoid inserting the cutting unit more than 6mm into your nostril or ear.

#### **TO REMOVE HAIR FROM EYEBROWS**

1. Attach nose, ear and eyebrow attachment.
  2. Gently guide the cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
  3. To remove the hairs completely, lower onto the skin and move over desired area.
- Use slow and well-controlled movements.

#### **USING YOUR MINISCREEN SHAVER**

1. Hold the groomer so the miniscreen gently touches your face.
2. Use short, well-controlled movements to shave around your beard/moustache. Use your free hand to stretch your skin. This encourages the hair to stand upright, making it easier to shave.

**Note:** The miniscreen shaver was designed to shave the detail areas around your beard/moustache/sideburns. It was not designed to shave your entire face. For a close comfortable shave, guaranteed, use one of Remington's electric shavers.

---

#### **TIPS FOR BEST RESULTS**

---

- Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- After trimming, lightly go over the trimmed areas with the foil to get a smooth clean finish.
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards or across) for better results.

---

## CARE FOR YOUR GROOMER

---

- Care for your product to ensure a long lasting performance. We recommend that you clean your groomer after each use.
- The easiest and the most hygienic way to clean the groomer is by rinsing the product head after use with warm water. Always keep the protective cap on the shaving head and keep the trimmer in the "off" position when the shaver is not in use.

### AFTER EACH USE

- Rinse the accumulated hair from the cutters and shake off excess water.
- Alternatively, use a brush.
- Gently tap on a flat surface to remove hair particles and brush the remaining hairs away.
- Place one or two drops of cutter oil or sewing machine oil on the blades. Turn the clipper on to distribute the oil evenly, wipe off any excess oil.
- Wipe the main unit with a damp cloth and dry immediately.

**Note:** Ensure that the groomer is turned off when applying the oil or rinsing under the tap.

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.


\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

---


## SERVICE CENTRE

---

### UNITED KINGDOM

 0800 212 438 (free call mainland UK)  
Spectrum Brands (UK) Ltd  
Fir Street, Failsworth, Manchester  
M35 0HS, UK  
[www.remington.co.uk](http://www.remington.co.uk)

### IRELAND

 142 951 40  
Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12  
<https://ie.remington-europe.com>

# Model No. PG180

19/UK/ PG180 T22-7000577 Version 06 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2019 Spectrum Brands, Inc.