

REMINGTON®

All In One Grooming Kit - Titanium




PG350

 www.remington.co.uk

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

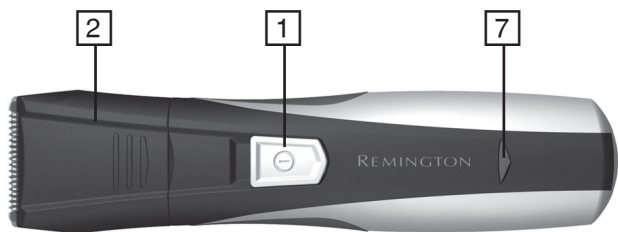

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- ⊘ Do not immerse the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors.
- Make sure the power plug and cord do not get wet.
- An appliance should never be left unattended when plugged into a power outlet, except when charging.
- Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- Do not use attachments other than those we supply.
- Always remember to turn on the groomer before you insert it into your nose or ear to avoid injury.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|-------------------------------|-----------------------------|
| 1. On/off switch | 6. 2 attachment guide combs |
| 2. 30mm trimmer | 7. Charging indicator |
| 3. 17mm trimmer | 8. Adaptor (not shown) |
| 4. Nose, ear, eyebrow trimmer | 9. Stand |
| 5. Minifoil shaver | |

GETTING STARTED

CHARGING YOUR APPLIANCE

- Before using your groomer for the first time, charge for 14-16 hours.
- Ensure the product is switched off.
- Place your groomer into the stand, connect the adaptor to the product and then to the mains.
- The charging indicator will illuminate.
- Your appliance cannot be overcharged. However, if the product is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store.
- Fully recharge your appliance for 16 hours when you would like to use it again.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 14-16 hours.

INSTRUCTIONS FOR USE

ATTACHING AND REMOVING GUIDE COMBS

NOTE: Always ensure the groomer is switched off before changing any attachments.

To attach:

With the trimmer blade facing away from you, slide the guide comb on top of the trimmer blade and click into position.

To remove:

With the trimmer blade facing away from you, carefully push the guide comb away from the trimmer blade.

BEFORE YOU BEGIN

- Comb facial hair with a fine comb before you start trimming.
- Hairs should be dry and without any waxes or lotions before using the groomer.

TO THIN AND TAPER THE BEARD/MOUSTACHE

- Attach a guide comb to the 30mm trimmer blade. If you are trimming for the first time, start with the maximum trimming length setting.
- Turn on the product and place the flat top of the trimmer comb against the skin.
- Slowly slide the personal groomer through the hair. Repeat from different directions as necessary.
- Start trimming under the chin, following the jawbone line. Work toward the ear and upper beard line using an upward motion.

TO TRIM EDGE OF BEARD OR MOUSTACHE

- Hold the personal groomer with 17mm trimmer blade facing you.
- Start with edge of beard/moustache line, and with the cutting blades resting lightly against your skin, use slow movements to create a beard/ moustache line.

TO TRIM SIDEBURNS

- Hold groomer with 17mm trimmer blade facing you.
- Use a small comb to lift the hairs. Hold the comb at the desired beard or moustache length.
- Move the groomer along the comb to cut the hairs. Use light pressure and well-controlled movements to trim hair.

TRIMMING THE NAPE OF YOUR NECK

- Attach the 30mm trimmer blade
- Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer.
- Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
- Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

TO REMOVE HAIR FROM NOSE AND EAR

- Attach the nose, ear, eyebrow attachment.
- Insert the groomer's cutting unit gently into the nostril or ear.
- Gently move the groomer in and out of the nostril or ear and at the same time rotate the groomer.
- Avoid inserting the cutting unit more than 6mm into your nostril.

TO REMOVE HAIR FROM EYEBROWS

- Attach the nose, ear, eyebrow attachment.
- Gently guide the cutting unit to stray, unwanted hairs along the eyebrow line or protruding from the eyebrow itself.
- To remove the hairs completely lower onto the skin and move over desired area.

TIPS FOR BEST RESULTS

- Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards or across) for better results.

ATTACHING AND REMOVING THE TRIMMER ATTACHMENTS

NOTE: Always ensure the groomer is switched off before changing any attachments.

To attach:

To attach, hold the groomer with one hand and turn the trimmer head clockwise with the other.

To remove:

To remove, hold the groomer with one hand and turn the trimmer head anti-clockwise with the other.

USING THE MINI FOIL SHAVER

- Hold the groomer so the mini foil shaver gently touches your face.
- Use short, well-controlled movements to shave around your beard/moustache. Use your free hand to stretch your skin. This encourages the hair to stand upright making it easier to shave.
- Note: The mini foil shaver was designed to shave the detail areas around your beard/moustache/sideburns. It was not designed to shave your entire face. For a close comfortable shave, guaranteed, use one of Remington's electric shavers.

CARE FOR YOUR GROOMER

- Care for your product to ensure a long lasting performance. We recommend that you clean your groomer after each use.
- The easiest and the most hygienic way to clean the groomer is by rinsing the product head after use with warm water.

AFTER EACH USE

- Rinse the accumulated hair from the cutters and shake off excess water, alternatively, use a small soft brush.
- Gently tap on a flat surface to remove hair particles, and brush the remaining hairs away.
- Place one or two drops of cutter oil or sewing machine oil on the blades.
- Turn the clipper on to distribute the oil evenly, wipe off any excess oil.
- Wipe the main unit with a damp cloth and dry immediately.
- Ensure that the groomer is turned off when applying the oil or rinsing under the tap.
- Never use a cleaning brush on the foils of the mini foil shaver as damage may occur.
- Do not use harsh or corrosive cleaners on the units or their blades.
- Do not submerge in water as damage will occur.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Unplug groomer from the outlet to avoid risk of electrical shock.
- Remove rear groomer cover by first prying the rubber panel from the product with a flat head screwdriver. Pry the on/off switch from the product with a flat head screwdriver. Unscrew the front cover from the product by Philips head screwdriver. Unscrew the upper housing by Philips head screwdriver and pry the upper housing from the product with a flat head screwdriver. This will expose the batteries.
- Using wire cutters, clip the wires leading to the batteries.
- Remove the batteries from the product. Contact your local authorities for proper disposal.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.


Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.


SERVICE CENTRE

UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK
www.remington.co.uk

IRELAND

 142 951 40

Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12
<https://ie.remington-europe.com>

Model No. PG350

19/UK/ PG350 T22-7000578 Version 06 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2019 Spectrum Brands, Inc.