

REMINGTON®

EST. NEW YORK 1937

 
 
 
 
 


HYDRAluxe PRO Straightener S9001

 www.remington.co.uk

Register online for an EXTRA year guarantee


Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

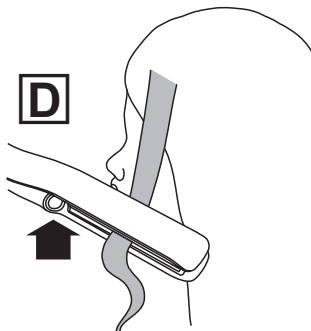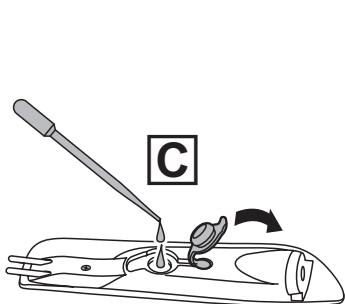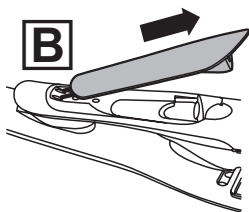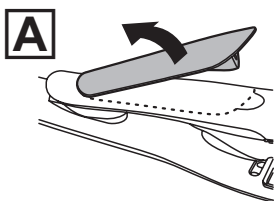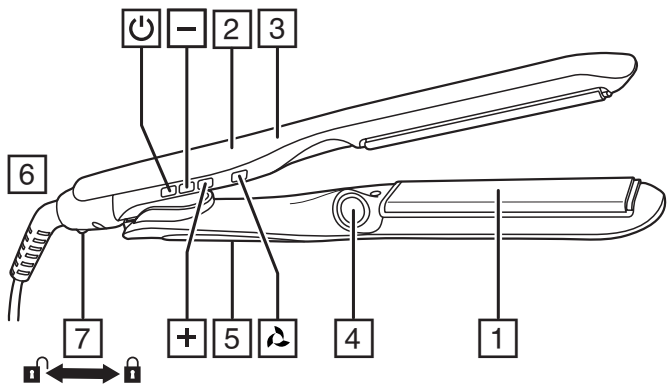

Please read these instructions carefully and keep them safe. Remove all packaging before use.

WARNING: This appliance is hot. Keep out of reach of children at all times.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
 -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
 - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*.
- * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- Burn hazard. Keep the appliance out of reach from young children, particularly during use and while cooling down.
 - Never leave the appliance unattended when it is connected to the power supply.
 - Always place the appliance with its stand, if any, on a heat-resistant, stable flat surface.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not allow any part of the appliance touch the face, neck or scalp.
- Keep the power plug and cord away from heated surfaces.
- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
- Do not twist or kink the cable, or wrap it round the appliance. Check the cord regularly for any signs of damage.
- CAUTION: Always remove the appliance from the storage pouch/sleeve before heating and allow it to fully cool before placing it back.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|-----------------------------------|------------------------------|
| 1. Advanced ceramic coated plates | Controls: |
| 2. Temperature display | ⏻ On/off button |
| 3. Hydracare ON icon | +/- Temperature functions |
| 4. Hydracare moisture mist outlet | 🔄 Hydracare on/off button |
| 5. Water reservoir | Accessories (not shown): |
| 6. Swivel cord | • Pipette |
| 7. Hinge lock | • Protective silicone sleeve |

ADDITIONAL FEATURES

- Fast heat up—ready to use in 15 seconds.
- Automatic safety shut off – this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.


INSTRUCTIONS FOR USE

- Before use, ensure the hair is clean, dry and tangle-free.
- For extra protection use a heat protection spray.
- Hairsprays contain flammable material - do not use while using this product.
- Section the hair prior to styling. Style the lower layers first.
- Your straightener can also be used without activating the Hydracare function.
- Before operating the Hydracare function, the reservoir must be filled with water.
- DO NOT operate Hydracare function if the reservoir is empty.

Filling the Reservoir

- Unplug your straightener before filling the reservoir.
 - Beware of the the hot plates if your straightener has been in use.
1. Lift the front end of the reservoir upwards slightly (fig. A).
 2. Slide the reservoir forwards and lift out (fig. B).
 3. Gently open the plug using the tab and fill with water using the pipette provided (fig. C).
 4. Replace the plug securely and dry off any excess water on your hands and the outside of the reservoir.
 5. Replace the reservoir into the body of the straightener and press it downwards until it clicks into place.
- To prolong the life of the product we recommend using filtered or distilled water ONLY.

Using

1. Plug the product into the mains power supply.
- When the styler is plugged in but not turned on, a lock symbol  will show on the display indicating the styler is in standby mode.
2. Press and hold the on/off (⏻) button to switch on.
- To use the Hydracare function see **Using the Hydracare Function** below.
3. Select the appropriate temperature for your hair type using the +/- controls on the side of the product. Start styling at on lower temperatures first.
4. The '+' button will increase the temperature and the '-' button will decrease the temperature.

Recommended temperatures when the Hydracare function is turned off

Temperature	Hair type
150°C - 170°C	Thin / fine, damaged or bleached hair
170°C - 190°C	Normal, healthy hair
210°C - 230°C	Thick, very curly and difficult to style hair

- **Caution:** the hottest temperatures should only be used by experienced stylists
5. The temperature on the display will stop flashing when the product is ready to use.
 6. Working on one section at a time, run the straightener through the entire length of the hair without stopping.
 7. After use, press and hold the on/off (⏻) button for two seconds to turn off then unplug the appliance.

Using the Hydracare Function

- Before operating the Hydracare function, the reservoir must be filled with water.
- 1. Press and hold the Hydracare on/off switch (🔌) for 2 seconds to activate.
- 2. The Hydracare icon (💧) will illuminate during styling.
- The recommended optimum temperature of 170°C is automatically selected. If required this can be overridden using the +/- controls on the side of the product.
- 3. The temperature on the digital display will stop flashing when the product is ready to use.
- **IMPORTANT:** In use, always ensure the Hydracare moisture mist outlet is facing downwards towards the end of the hair (fig. D). If the outlet is facing upwards towards the roots of your hair, your hair will be left damp and the performance of the straightener will be restricted.
- 4. When the plates are closed onto the hair, moisture in the form of a light mist is emitted from the outlet.
- 5. Working on one section at a time run the straightener through the entire length of the hair without stopping.

Temperature Boost Function

- For quick touch ups of stubborn, hard to style sections.
- The temperature boost function boosts the temperature to 230°C.
- Hold the '+' button for 2 seconds to operate.
- **Caution:** The highest temperature is not suitable for every hair type. If you plan to use this straightener on the boost setting of 230°C please test on a small section of your hair first.

Temperature Lock Function

- Set the desired temperature by pressing +/- buttons and lock the temperature controls by pressing the 'L' button for 2 seconds. A 🔒 symbol will appear next to the temperature.
- To unlock the temperature controls, press and hold the 'L' button again for 2 second.

STORAGE, CLEANING AND MAINTENANCE

Let the appliance cool down before cleaning and storing away

- Wipe away any condensation/steam residue with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.
- Ensure the water reservoir is emptied after every use.

The plates can be locked together for easy storage:

To lock, push the hinge lock to the locked position.

To unlock, pull the hinge lock to the unlocked position

NOTE: Do not heat the unit in the locked position.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under

any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

United Kingdom

☎ 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK

www.remington.co.uk

Product support:

productsupport@remington.co.uk

Ireland

☎ 142 951 40

Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12

<https://ie.remington-europe.com>

Product support:

productsupport@remington.co.uk

Ref. No. S9001

Type No. S18A

20/UK/ S9001 T22-7001333-B Version 04 /20

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2020 Spectrum Brands, Inc.