

# REMINGTON®

## Ultimate Series Foil Shaver




**F7 / F8**

 [www.remington.co.uk](http://www.remington.co.uk)

**Register online for an EXTRA year guarantee**

Visit [uk.remington-europe.com/product-registration](http://uk.remington-europe.com/product-registration) You must register within 28 days of purchase.

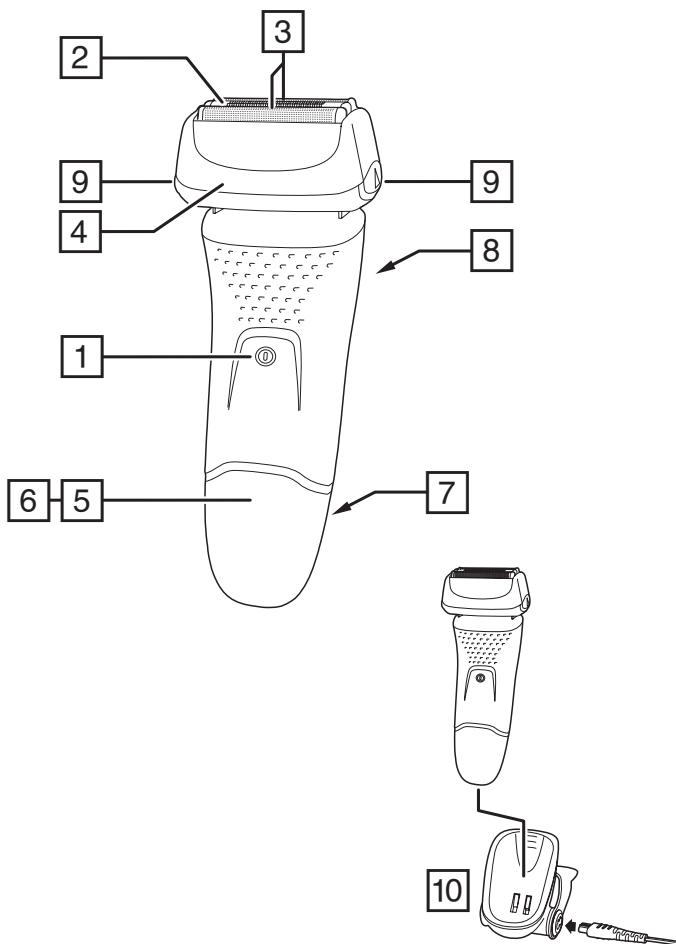



Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## IMPORTANT SAFEGUARDS

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
-  The shaver is suitable for cleaning under an open water tap.
-  Suitable for use in a bath or shower.
- **WARNING:** Detach the shaver from the charging adaptor before cleaning it in water.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- This product should only be used with the charging adaptor supplied.
- Always replace a damaged adaptor with one of the original type.
- Do not use the shaver, charging adaptor, charging stand or any other part if it is damaged, as this may cause injury.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

---

## KEY FEATURES

---

- |                                  |                                  |
|----------------------------------|----------------------------------|
| 1. On/off switch                 | 8. Pop-up trimmer (on back)      |
| 2. Intercept trimmer             | 9. Foil assembly release buttons |
| 3. Shaving foils                 | 10. Charging stand               |
| 4. Hair pocket                   | 11. Adaptor (not shown)          |
| 5. 3 stage charge indicator (F7) | 12. Head guard (not shown)       |
| 6. LED display (F8)              | 13. Storage pouch (not shown)    |
| 7. Charging pins (on back)       |                                  |
- 

## GETTING STARTED

---

### Charge the shaver:

1. Ensure the product is switched off.
2. Connect the charging stand to the adaptor and then to the mains.
3. Place the charge stand on a flat surface.
4. Place the shaver in the charge stand with the charge pins contacting.
  - Charge for at least 24 hours when using for the first time.
  - F7: At low charge the LED indicator will flash rapidly. When charging the LED will flash slowly.
  - When fully charged the LED will light for 1 minute and then turn off.
  - F8: When charge is low 'Lo' will flash rapidly on the screen. When charging, the LED's flash in a clockwise rotation.
  - When fully charged the minutes will flash 60 for 1 minute and then turn off.
  - To preserve the life of your batteries, let them run out every 6 months then recharge for 24 hours.
  - The appliance adapts automatically to a mains voltage between 100V and 240V.

### Quick charge

- Quick charge feature: Your shaver is fitted with a 5 minute quick charge feature that will provide enough charge for 1 shave (3 minutes).
- 

## INSTRUCTIONS FOR USE

---

It is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system.

### Shaving

1. Switch the shaver on by pressing the on/off switch.
2. Stretch the skin with your free hand so the hairs stand upright.
3. Hold the shaving head so that the foils touch your face.
4. Use short, linear strokes.

### Shaving with shaving gel

- Follow the same instructions as dry shaving if using shaving gel.
- CAUTION After use with shaving gel, please rinse the head and cutters under warm water to clean away any excess gel and debris.

### Trimming

1. Push the trimmer release button up to activate the trimmer.
2. Hold the trimmer at right angles to your skin.
3. To retract the trimmer, slide the trimmer release button down and push the back of the trimmer head downwards until it locks into place.

### Travel lock

Model F8 is equipped with a Travel Lock feature, intended to prevent the shaver from turning on and discharging accidentally while packed in luggage.

To set the travel lock:

- Press and hold the on switch for 3 seconds. The shaver will turn on, then will shut off after the 3 seconds. The LED display will flash five times to indicate the lock is set.
- While the travel lock is set, if the on switch is pressed, the LED display will flash three times to indicate the shaver is in travel lock mode.

---

## TIPS FOR BEST RESULTS

- Always hold the shaver at right angles to the skin so that all foils are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short linear motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid damage to the foil heads.
- Note: your shaver has been designed to be used in the shower if desired.

---

## CARE FOR YOUR SHAVER

To ensure long lasting performance clean after each use.

1. Remove the foil assembly by pressing the release buttons on either side of the head and lifting the foil assembly upwards to remove from the hair pocket.
  2. Tap out the excess hair shavings and rinse the foils under running water.
  3. Do not clean the shaving foil with a brush.
  4. Replace the head assembly by placing the assembly on top of the hair pocket, press down and click into place.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.
  - Lubricate the teeth of the trimmer every six months with a drop of sewing machine oil.

---

## REPLACING THE FOILS AND CUTTERS

---

To ensure continued high quality performance from your shaver, we recommend the foils and cutters are replaced every six months.

### Signs that your foils and cutters need replacing.

- Irritation: as foils get worn, you may experience skin irritation.
- Pulling: as the cutters wear, your shave may not feel as close and you may feel the cutter pulling your hair.
- Wear through: you may notice that the cutters have worn through the foils.

### To replace the foil:

1. Remove the foil assembly by pressing the foil assembly release buttons on either side of the head and lifting the assembly upwards to remove from the hair pocket.
2. Insert the new foil assembly on the hair pocket, press down and click into place.

### Replacing the cutters

1. Grasp the cutter between your thumb and forefinger and pull upwards.
2. Snap the new cutter into the oscillator tip. Note: DO NOT press on the cutter ends as this may cause damage.
3. Foil head replacements can be found on the Remington website.

---

## TROUBLESHOOTING

---

If your shaver battery is completely empty or the shaver has not been used for an extended period of time, the shaver may not start when operated using the cord. If this occurs, a 5 minute quick charge will allow for 3 minutes of shaving.

---

## REMOVING THE RECHARGEABLE BATTERY

---

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
  - Disconnect the charging adapter before removing the battery.
1. Slide the trimmer up to the open position and remove a single philips head screw.
  2. Using a small flat screwdriver pry the back cover off the shaver.
  3. Using a philips screwdriver remove 8 screws to open the back of the internal housing.
  4. Remove and open the core from the shaver to expose the batteries.
  5. Cut the wire connecting the batteries to the circuit board and remove the batteries.
- Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/collection point.
  - Do not attempt to operate the shaver once you have opened it.

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.

\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

---

## SERVICE CENTRE

---

### United Kingdom

 0800 212 438 (free call mainland UK)


Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

**Ref. No. XF8505/XF8705**

**Type No. XF8505 / XF8705**

19/UK/ XF8505/XF8705 T22-7000597 Version 06 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.  
Spectrum Brands (UK) Ltd

Fir Street,  
Failsworth,  
Manchester  
M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2019 Spectrum Brands, Inc.