

REMINGTON®

Ultimate Series Rotary Shaver

 


 
 
 
 
R9

 www.remington.co.uk

Register online for an EXTRA year guarantee

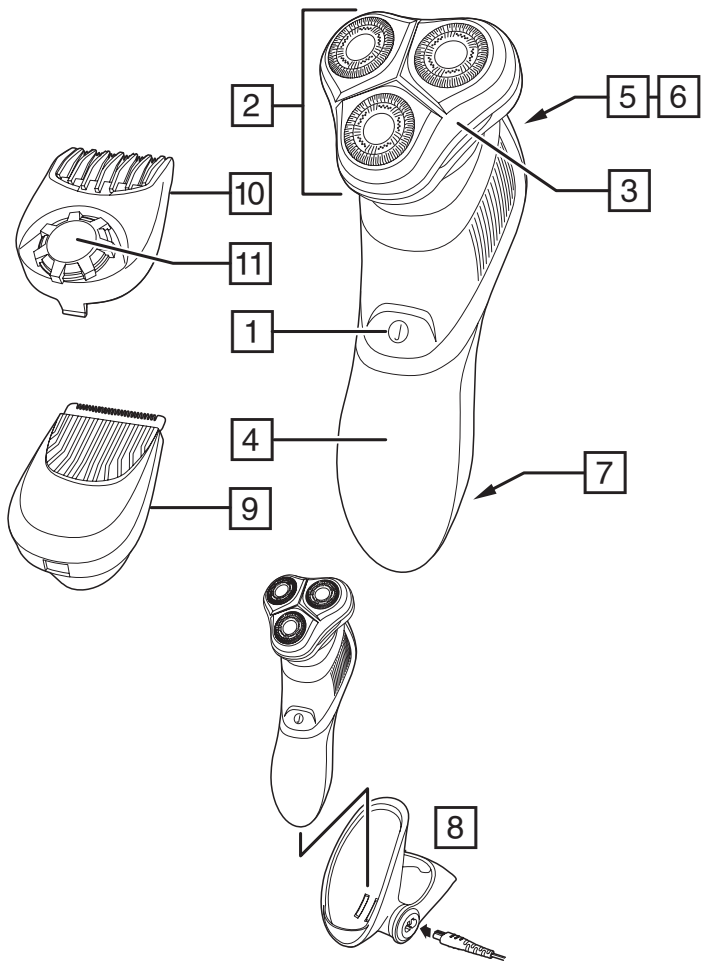

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

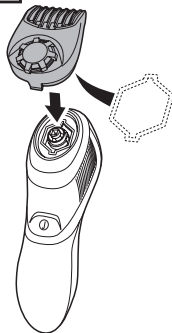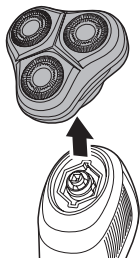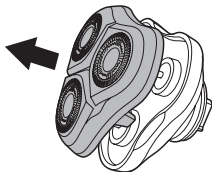

A**B****C****D****E****F**

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
-  The shaver is suitable for cleaning under an open water tap.
-  Suitable for use in a bath or shower.
- **WARNING:** Detach the shaver from the charging adaptor before cleaning it in water.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- This product should only be used with the charging adaptor supplied.
- Always replace a damaged adaptor with one of the original type.
- Do not use the shaver, charging adaptor, charging stand or any other part if it is damaged, as this may cause injury.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|-----------------------------|--------------------------------|
| 1. On/off switch | 9. Beard trimming attachment |
| 2. Head and cutter assembly | 10. Comb |
| 3. Hair pocket | 11. Comb adjustment dial |
| 4. LED display | 12. Adaptor (not shown) |
| 5. Pop-up trimmer | 13. Headguard (not shown) |
| 6. Trimmer release button | 14. Cleaning brush (not shown) |
| 7. Charging pins | 15. Storage case (not shown) |
| 8. Charging stand | |

GETTING STARTED

Charging

- Important: Charge your shaver fully before your first use.
- Your shaver will show the “Lo” indication on the battery LED display when first opened and turned on. It is important to recharge the battery fully before first use to calibrate the battery and LED display. Recharging your battery fully will take up to 90 minutes.
- The LED display will indicate charging and full charge as described under “Battery Indicator”.
- When fully charged, unplug the charge adapter from the power outlet. Use the shaver until the LED display flashes “Lo” to indicate a recharge is required. Do not leave the charger plugged in and avoid recharging the shaver after each use. This will shorten the life of the battery.

Battery Indicator

- The LED lights on the front panel of the shaver indicate the status of the battery charge.
- Low Charge: When the shaver has a limited amount of run time remaining, the display will show a flashing “Lo” indication. This mean the shaver should be charged.
- Charging: When placed in the plugged-in charging stand, single red LED lights will flash sequentially in a clockwise direction around the perimeter of the display. This indicates the shaver is charging.
- Full charge: When fully charged the LED display will flash “60” to indicate the battery is fully charged and then the display will turn off.
- Charge remaining: After each use, the digital display will indicate approximately how many minutes of run time are remaining for 5 seconds and then turn off.
- Running Lights: Blue LED lights will sweep side to side on the display panel when the shaver is turned on. When turbo speed is activated, the blue lights will turn on solid and the red lights will rotate rapidly.

Quick Charge Feature

If the shaver battery is exhausted and the shaver needs to be used immediately, you can place it on charge for 5 minutes and it will deliver up to 5 minutes of use.

INSTRUCTIONS FOR USE

It is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system.

Shaving

1. Switch the shaver on.
2. Stretch the skin with your free hand so the hairs stand upright.
3. Only apply light pressure on the shaving head while shaving (pressing too hard can damage the heads and make them vulnerable to breakage).
4. Use short, circular strokes.

Shaving with shaving gel

- Follow the same instructions as dry shaving if using shaving gel.
- **CAUTION** After use with shaving gel, please rinse the head and cutters under warm water to clean away any excess gel and debris.

Trimming

- Push the trimmer button to release the detail trimmer.
- Hold the trimmer at right angles to your skin.
- Place the trimmer at desired trim line for a quick, easy, professional trim.
- To retract the trimmer, push down until it locks into position.

Beard trimmer attachment

To fit the beard trimmer attachment:

1. Switch off your shaver.
 2. Grasp the head and cutter assembly and pull it away from the body of your shaver (Fig A).
 3. If using, snap the comb to the beard trimming attachment (Fig B).
 4. Align the underside of the beard trimmer attachment with the hexagonal recess in the shaver body and click it into place (Fig C).
- Use the trimmer without the comb for trimming hair close to the skin. This will trim hair to 1mm, holding the blades perpendicular to the skin will trim hair to 0.4mm.
 - Adjust the comb setting by rotating the adjustment dial on top of the comb clockwise to increase the cut length or anticlockwise to reduce the cut length. The selected setting is shown on the scale.

Travel lock

The Travel Lock feature prevents the shaver from turning on and discharging accidentally while packed in luggage.

To set the travel lock:

- Press and hold the on switch for 3 seconds. The shaver will turn on, then will shut off after the 3 seconds. The LED display will flash five times to indicate the lock is set.
- While the travel lock is set, if the on switch is pressed, the LED display will flash three times to indicate the shaver is in travel lock mode.

To Unlock the Travel Lock:

- Press and hold the on switch for 3 seconds. The LED display will flash three times while the button is being held and then the shaver will turn on.

Turbo feature

Use the Turbo feature to shave thick stubble. Press the on/off switch once to operate the shaver at normal speed. Press the on/off switch a second time to operate the shaver in Turbo mode. When the Turbo feature is activated the LED display will cycle around. To deactivate press the on off switch once to turn the shaver off.

TIPS FOR BEST RESULTS

- Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid damage to the rotary heads.

CARE FOR YOUR SHAVER

To ensure long lasting performance clean after each use.

1. Grasp the head and cutter assembly and pull it away from the body of your shaver (Fig D).
 2. Pull the face off the hair pocket (Fig E).
 3. Tap out excess hair shavings from the hair pocket (Fig F). Hair clippings can also be washed out of the hair pocket and or shave face by rinsing these under the tap.
 4. Once dry, snap the face back onto the hair pocket.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.
 - Lubricate the teeth of the trimmer every six months with a drop of sewing machine oil.

REMOVING THE RECHARGEABLE BATTERY

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
 - Disconnect the charging adapter before removing the battery.
1. Run the shaver until the motor stops.
 2. Remove the head from the shaver (pull the head up and off).

3. Using a small screwdriver, pry the 'collar' off the top of the handle.
 4. Using a small screwdriver, pry the front cover from the body.
 5. Remove three screws located on front of shaver.
 6. Using a small screw driver, pry up the newly unsecured inner housing to expose the battery.
 7. Pry the battery free from the circuit board.
- Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/collection point.
 - Do not attempt to operate the shaver once you have opened it.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other

restrictive trade measures enforced by the United States or other applicable jurisdictions.

This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the model number to hand, as we won't be able to help you without it. The model number can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington-europe.com

SERVICE CENTRE

United Kingdom

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK
www.remington.co.uk

Ireland

 142 951 40

Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12
<https://ie.remington-europe.com>

Ref. No. XR1570

Type No. R04A

19/UK/ XR1570 T22-7000620-B Version 08 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2019 Spectrum Brands, Inc.