

# REMINGTON®

EST. NEW YORK 1937

 
 
 


 
## The Crafter Beard Kit MB4051

 [www.remington.co.uk](http://www.remington.co.uk)

Register online for an EXTRA year guarantee

Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.

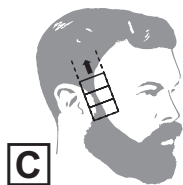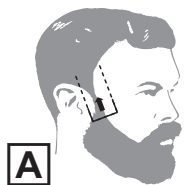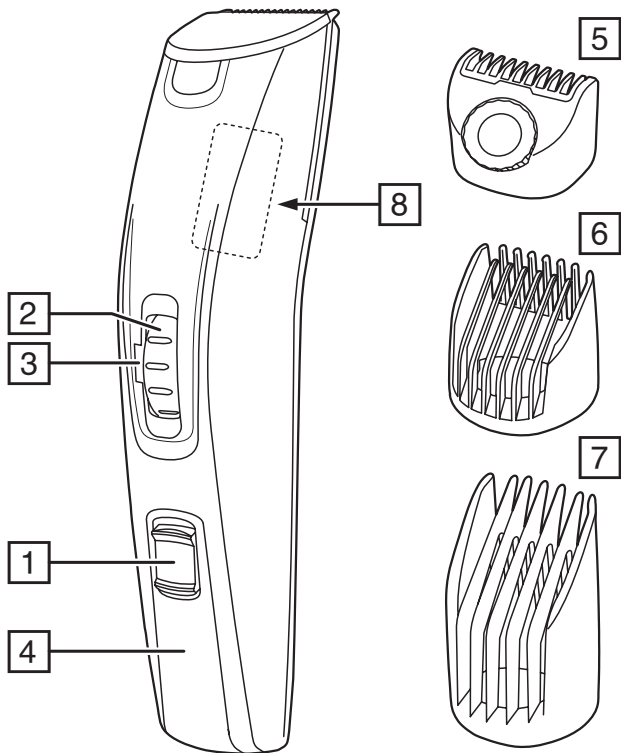

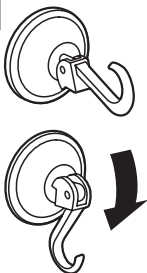**D****E****F****G****H****J**

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## **IMPORTANT SAFEGUARDS**

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
- The body of this appliance is not washable or water resistant. Do not put the appliance in liquid.
- **WARNING:** Detach the shaver from the charging adaptor before cleaning it in water.
- Do not use the product with a damaged cord.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance - type reference PA-3215U.
- This product should only be used with the charging adaptor supplied.
- Always replace a damaged adaptor with one of the original type.
- Do not use the appliance if it is damaged or malfunctions.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.

- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

---

## PARTS

---

- |                                     |                   |
|-------------------------------------|-------------------|
| 1. On/off switch                    | <i>Not shown:</i> |
| 2. Adjustable zoom wheel            | 9. Beard towel    |
| 3. Length position indicator        | 10. Beard bib     |
| 4. Charging indicator               | 11. Scissors      |
| 5. Stubble comb (1-5mm)             | 12. Beard brush   |
| 6. Short adjustable comb (1.5-18mm) | 13. Adaptor       |
| 7. XL adjustable comb (20-35mm)     | 14. Travel pouch  |
| 8. Pop-up trimmer                   | 15. EDGESTyler    |
- 

## CHARGING

---

Before using your trimmer for the first time, charge for 16 hours.

1. Ensure the product is switched off.
  2. Connect the charging adaptor to the product and then to the mains.
  3. The charging indicator will illuminate. The charging indicator will remain illuminated after the battery is fully charged.
- Your trimmer cannot be overcharged. However, if it is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store.
  - To preserve the life of your batteries, let them run out every 6 months then recharge for 16 hours.
  - On a full charge, your beard trimmer will run for up to 90 minutes of cordless usage.

## CORDED

- Connect the appliance to the mains and turn on.
  - We recommend you let the product charge for a few minutes before using corded.
- CAUTION: Extended mains only use will result in the reduction of the battery life.
- 

## INSTRUCTIONS FOR USE

---

- Cordless use – when the product is switched on and fully charged it can be used in cordless mode for up to 90 minutes.
- Switch the product on by sliding up the on/off switch.
- Always comb your beard or moustache with a fine comb before you start trimming.
- If you wish to trim your beard hair between 1.5-18 mm – attach the short length adjustable comb.
- For maintaining and trimming longer beard length between 20-35 mm attach the XL adjustable comb.

- To attach a comb, first ensure the adjustable zoom wheel is set to 1. Then slide on the desired comb so that the comb rails align into the slots found at the top of the trimmer head.
- Select the comb length by rotating the zoom wheel upwards to increase the length and downwards to decrease the length. Please see the table below for the different length increments.

Setting	Short Comb	XL Comb
1	1.5 mm (Grade 0)	20 mm
2	2.5 mm (Grade 1)	21 mm
3	4 mm	22 mm (Grade 7)
4	5.5 mm (Grade 2)	23.5 mm
5	7 mm	25.5 mm (Grade 8)
6	9 mm (Grade 3)	27.5 mm
7	11 mm (Grade 4)	29.5 mm
8	14 mm (Grade 5)	32 mm
9	18 mm (Grade 6)	35 mm

- To remove the comb, set the adjustable zoom wheel to 1 then pull the comb off the beard trimmer.
- For a more detailed, precision stubble look, fit the adjustable stubble comb which can trim hair between 1 to 5mm. The cutting lengths increase in 0.5 increments.
- Please note that the adjustable zoom wheel does not increase the length settings on the stubble comb. To adjust these length settings, turn the dial found on the back of the stubble comb which will then indicate the different trimming lengths to choose from.
- Note: The below instructions are recommended for those with or wanting to trim beard hair between 1.5 to 18 mm in length.

### BEARD BIB

The beard bib is designed to collect hair during trimming in order to prevent mess and making disposal of hair clippings easier.

1. The suction hooks are designed to fix to a smooth non-porous surface such as a mirror or ceramic bathroom tiles. Position them horizontally at about shoulder height. Rotate the hook downwards to activate the suction hook (fig. D).
2. Fasten the bib around the neck then hook the loops over the suction hooks (fig. E)
3. When finished, leave the bib fastened around your neck then unhook the loops and bring the two ends of the bib together. Keep the ends raised to contain the hair clippings.

4. Lower the end of the bib over a waste bin and gently shake out the hair clippings using the bib as a chute to guide the clippings into the bin.
5. Release the suction hooks by rotating the hook upwards. Carefully pull the hook off the surface it was fixed to.

### **TO THIN AND TAPER THE BEARD/MOUSTACHE**

- Turn the unit on.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide the trimmer through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush off.

### **DETAILING**

- To create sharp lines around your beard, press the pop-up trimmer release button.
- Start with the edge of the beard/moustache line and gently lower the trimmer blade onto your skin. Use motions towards the edge of the beard/moustache line to trim to the desired locations in the facial area and away from beard in neck area.

### **TRIMMING AND STYLING LONGER BEARDS**

- To take out volume from your beard or if you want to take down the length significantly, select your desired length setting on the XL comb (please see the table for trimming length settings). Place the flat top of the trimmer comb against the skin. Slowly slide through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush the hair off.

### **HOW TO BLEND/TAPER YOUR BEARD**

- Tapering is when you fade the length of your beard from shorter sideburns to a longer beard. This is how you can truly style your beard based on different lengths and shapes.
1. Adjust the comb to your selected grade.
  2. Grade settings and the respective trimming lengths the beard kit offers can be seen in the table. You will either need to use the short length adjustable comb or the XL adjustable comb depending on the grade you require. If you don't know, you can start at a longer trimming setting and work up towards your hairline, lowering the grade number as you go.
  3. Beard hairs sit on your face much lower than at the root compared to stubble. Therefore, use a comb to lift up the hair you want to remove and identify where the root is. This section of hair should be located at the middle of your ear (fig. A).
- Start grading your beard here, upwards. Don't start clipping too low or you are going to be taking away supporting hairs lower down.

## **CLIPPING**

1. Lift this section of hair, guide into the adjustable comb and run the clipper through. Go over a couple of times.
2. Now it's time to blend. Lower the grade setting on your trimmer to move onto the next higher section of hair (eg. grade 4 to 3). Go slightly higher than previous section working upwards (fig. B). Again, place hair into the comb and run the clipper through.
3. Repeat process (eg. grade 3 to 2) - this is fading. Keep moving the process upwards until you match the grade number on the sides of your head (fig. C).
4. Trim any protruding hairs with the scissors.
5. Brush your beard through with the beard brush.
6. Add your choice of beard oil/beard wax to your beard.

## **TRIMMING EDGE OF SIDEBURNS**

- Hold the trimmer with the trimmer blade facing you.
- Start with edge of sideburn and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim to desired locations in facial area.
- Shape as desired.

## **TRIMMING THE NAPE OF YOUR NECK**

- You will need a hand mirror for this operation if performing it alone.
- Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer.
- Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up, and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
- Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

## **TIPS FOR BEST RESULTS**

- Beard, moustache and sideburn hairs should be dry.
- Always brush your beard before beginning to trim, shape or style it.
- Avoid using lotions before using your trimmer.
- If you are trimming for the first time start with the maximum comb length setting.

## **ATTACHING AND REMOVING THE BLADE**

- To remove the blade press the release button found at the top of the trimmer where it meets the back of the blade head and push the blade cartridge upwards and away from the trimmer.
- To attach a blade, snap the desired cartridge in place until it clicks.



---

## USING THE EDGESTyler

---

The EDGESTyler tool is used to guide your trimmer to create a symmetrical, defined edge to your beard.

### NECK LINE (fig. F)

Hold the appropriate curved side of the tool underneath your jaw and run your trimmer along it for a clean edge. Repeat on the other side then even up the remaining V left under the chin freehand.

### CHEEK (fig. G)

Hold the appropriate curved side of the tool against the cheek and run your trimmer along it for a clean edge. Repeat on the other side of your face.

### SIDEBURN (fig. H)

Use the straight edge of the tool against the sideburn for perfect, straight edges.

### MOUSTACHE (fig. J)

Use the curved edge of the tool to sculpt the moustache area.

---

## CLEANING AND MAINTENANCE

---

- To ensure long lasting performance clean after each use.
  - Ensure the appliance is switched off and unplugged from the mains.
  - Always store the attachment guide comb on the trimmer blade.
  - Do not use harsh or corrosive cleaners on the unit or blades.
  - To clean the unit, wipe with a damp cloth and dry immediately.
  - Wash the removable blade cartridge under a running tap to remove any hair clippings.
  - We recommend that you add a couple of drops of oil to the blades every so often.
- 

## BATTERY REMOVAL

---

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Ensure the trimmer is discharged of all power.
- Remove the comb attachment.
- Detach the blade head.
- Remove the head clip using a screw driver.
- Pry apart the top and bottom housing.
- Unscrew the two screws on the circuit board.
- Remove the upper circuit board.
- Disconnect the battery from the low circuit board.
- Dispose of the batteries safely.

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under

any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.

\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

---

## SERVICE CENTRE

---

### UNITED KINGDOM

☎ 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd  
Fir Street, Failsworth, Manchester  
M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)  
[productsupport@Remington.co.uk](mailto:productsupport@Remington.co.uk)

### IRELAND

☎ 142 951 40

Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12

<https://ie.remington-europe.com>  
[productsupport@Remington.co.uk](mailto:productsupport@Remington.co.uk)

**Ref No. MB4051**

**Type No. RG019A**

20/UK/ MB4051 T22-7001531 Version 03 /20

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2020 Spectrum Brands, Inc.