

REMINGTON®

Wetech Rotary Shaver



GUARANTEE ⁺¹
2 yr

AQ7

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery



Visit www.remington.co.uk/product/register
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE OR INJURY TO PERSONS:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Don't submerge the shaver in liquid such as a bath, basin or any other vessel for extended periods.
- 3 Keep the power plug and cord away from heated surfaces.
- 4 Do not leave the appliance unattended while plugged in.
- 5 Do not use attachments other than those we supply.
- 6 Do not twist or kink the cable, or wrap it round the appliance.
- 7 Store the product at a temperature between 15°C and 35°C.
- 8 Do not use the appliance if it is damaged or malfunctions.
- 9 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 10 This appliance is not intended for commercial or salon use.



KEY FEATURES

- 1 On/off switch
- 2 Head and cutter assembly
- 3 Individual flexing heads
- 4 Head release button
- 5 Hair pocket
- 6 Charging indicator light
- 7 Charging stand
- 8 Charging pins
- 9 Cleaning brush
- 10 Adaptor

GETTING STARTED

- It is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system.

CHARGING YOUR SHAVER

- Ensure the appliance is turned off.
- Connect the shaver to the adapter and then to the mains.
- Charge for at least 24 hours when using for the first time.
- When charging the blue indicator will show.
- After the shaver is fully charged, the blue indicator light will turn off.
- Use product until the battery is low. This is indicated by illuminated red light.
- When empty, the battery will be fully charged within 90 minutes.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 24 hours.

INSTRUCTIONS FOR USE

SHAVING

- Make sure your shaver is properly charged.
- Switch the shaver on.
- Stretch the skin with your free hand so the hairs stand upright.
- Only apply light pressure on the shaving head while shaving (pressing too hard can damage the heads and make them vulnerable to breakage).
- Use short, circular strokes.

SHAVING WITH SHAVING GEL

- Follow the same instructions as dry shaving if using shaving gel.

CAUTION

- After use with shaving gel, please rinse the head and cutters under warm water to clean away any excess gel and debris.

Tips for best results

- Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid damage to the rotary heads.

CARE FOR YOUR SHAVER

- Care for your appliance to ensure a long lasting performance.
- We recommend you clean your product after each use.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.

CLEANING CAUTIONS

DAILY

- Ensure the shaver is switched off.
- Open the shaver head by pressing the release button on the front of the shaver.
- Tap out excess hair shavings and use a cleaning brush if necessary.
- Close head assembly.

MONTHLY

- Perform the daily cleaning steps first.
- Open the shaver head by pressing the release button on the front of the shaver and flipping open the head away from the body of the shaver.
- Release the inner cutter carrier away from the inner cutters.
- Thoroughly brush hairs from the inner and outer cutters and rinse out any remaining debris.
- Replace the inner cutter.
- Place the inner cutter carrier back onto the upper hair pocket and lock into place by rotating the locking arms clockwise until the arms 'click' into place.
- This shaver is a wet shaver, the hand-held part of which may be used in a bath or shower.

TROUBLESHOOTING

- If your shaver battery is completely empty or the shaver has not been used for an extended period of time, the shaver may not start when operated using the cord. If this occurs, a 5 minute quick charge will allow for 3 minutes of shaving.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.

- Remove the headguard and the hair pocket from the shaver.
- Using a small screwdriver, pry off the front housing carefully.
- Using a screwdriver, remove 6 screws from the front of the shaver and remove the rear housing.
- Pry the PCB assembly out of the shaver housing.
- Cut or break the wire stamps on the both end of the batteries and remove the batteries.
- The battery is to be disposed of safely.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➔ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.


Defects from repair by an unauthorized dealer are not covered.


If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. AQ7

16/UK/ AQ7 T22-0004383 Version 06 /16

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2016 Spectrum Brands, Inc.