

REMINGTON®

Travel Dryer



D1500

 www.remington.co.uk

Register online for an EXTRA year guarantee

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.



Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
 - ⊘ Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
 - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
 - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom*.
- * Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
 - Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
 - Keep direct airflow away from eyes or other sensitive areas.

- Do not allow any part of the appliance touch the face, neck or scalp.
- During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the unit to cool.
- Keep the power plug and cord away from heated surfaces.
- Do not leave the appliance unattended while plugged in.
- Do not place the appliance on any soft furnishings.
- Do not use attachments other than those we supply.
- Do not set the appliance down while still on.
- Do not twist or kink the cable, or wrap it round the appliance.
- Do not use the appliance if it is damaged or malfunctions.
- Check the cord regularly for any sign damage.
- When storing or after use, do not wrap the mains cord around the appliance as this can damage the cord.
- Always ensure that the rear grille/filter is clear of any hair, fluff or other debris before use. A blocked grille/filter can cause the appliance to overheat.
- During use, never place the appliance on a surface that can be damaged by heat.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|--|-----------------------------------|
| 1. Speed/heat setting switch | 5. Dual voltage selector 120/240V |
| 2. Folding handle for convenient storage | 6. Hang up loop |
| 3. Concentrator | 7. Cord |
| 4. Diffuser | |

INSTRUCTIONS FOR USE

Dual Voltage Function

Warning: Before each and every use make sure that the voltage select switch is in the correct voltage position for the country in which it is being operated. For example, for the UK the voltage selector should point to the 240V mark.

To change the voltage twist the voltage selector clockwise to adjust the operating voltage from 240V to 120V, or anti-clockwise to adjust the operating voltage from 120V to 240V. This can be done using a small coin, screwdriver or similar.

Using your dryer

- Wash and condition your hair as normal.
- Squeeze out excess moisture with a towel and comb through.
- Hairsprays contain flammable material - do not use while using this product.

1. Plug the product into the mains power supply.
2. To turn on slide the switch up to setting '1'.
3. For fast drying use the high heat/high speed function.
4. To increase the setting, slide the switch to setting '2'.
5. Select the desired temperature and speed setting using the switch on the handle.
6. After use, turn the appliance off and unplug.
7. To turn off slide the switch to setting '0'.
8. Let the appliance cool down before cleaning and storing away.

TIPS

- For fast drying use the high heat / high speed setting.
- To create smooth styles use the concentrator and a round hair brush (not included) whilst drying.
- To enhance natural curls and waves, attach the diffuser to the dryer. Turn your head upside down and gently place your hair into the diffuser bowl slightly rotating the dryer as you style.
- To create extra volume at the roots of the hair, keep your head upright and place the diffuser against the top of the head. Gently rotate the hairdryer allowing the diffuser fingers to gently massage the scalp being careful not to burn the scalp. Dry gently on a medium heat / low speed setting.
Caution: Do not use the diffuser on the highest heat setting.
- To set your style, press the cool shot button whilst styling.

CLEANING AND MAINTENANCE

- Unplug the appliance and allow to cool.
- Don't use harsh or abrasive cleaning agents or solvents.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the air filter grille.

OVERHEAT PROTECTION

- In the event of overheating, the appliance may either stop unexpectedly or start to blow cold air. Overheating is usually caused by a blocked grille/filter. If this happens, immediately unplug the appliance and refer to CLEANING AND MAINTENANCE to clean the grille/filter. If, after doing this overheating continues to happen, stop using the appliance and contact Customer Service.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: www.remington.co.uk/productregister

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

www.ie.remington-europe.com

REGISTER ONLINE

Register online for an EXTRA year guarantee*.

Visit www.remington.co.uk/productregister

*You must register within 28 days of purchase.

Model No. D1500

18/UK/ D1500 T22-7000567 Version 10 /18

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2018 Spectrum Brands, Inc.