

# REMINGTON®

## Cord/Cordless Beard Trimmer



**MB320C**

 [www.remington.co.uk](http://www.remington.co.uk)

**Register online for an EXTRA year guarantee**

Visit [uk.remington-europe.com/product-registration](http://uk.remington-europe.com/product-registration) You must register within 28 days of purchase.



Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## **IMPORTANT SAFEGUARDS**

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
- Check if the voltage indicated on the adapter corresponds to the local mains voltage before you connect the appliance.
- Only use the adapter supplied to charge the appliance.
- Always replace a damaged adaptor with one of the original type.
- Keep the appliance and the adapter dry.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Do not plug or unplug the appliance with wet hands.
- Do not use attachments other than those we supply.
- This appliance is not intended for commercial or salon use.

---

## **PARTS**

---

- |                              |                                 |
|------------------------------|---------------------------------|
| 1. On/off switch             | 5. Adjustable trimmer comb      |
| 2. 9 position zoom wheel     | 6. Trimmer assembly             |
| 3. Length position indicator | 7. Pop-up trimmer (not shown)   |
| 4. Charging indicator        | 8. Charging adaptor (not shown) |

---

## GETTING STARTED

---

- Before using your trimmer for the first time, charge for 14-16 hours.
- Ensure the product is switched off.
- Connect the charging adaptor to the product and then to the mains.
- The charging indicator will illuminate.
- The charging indicator will remain illuminated once charge is complete.
- Your appliance cannot be overcharged. However, if the product is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store.
- Fully recharge your appliance for 16 hours when you would like to use it again.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 14-16 hours.

### CORDED USE

- Connect the charging adaptor to the product then to the mains.

### CAUTION

- Extended mains only use will result in the reduction of the battery life.

---

## INSTRUCTIONS FOR USE

---

### BEFORE YOU BEGIN

- Comb facial hair with a fine comb before you start trimming.

### ADJUSTING THE TRIM LENGTH

- The trimmer comb can be adjusted to give you 9 different trim lengths simply by turning the wheel to the desired setting.
- Turn the wheel clockwise for shorter length, anti-clockwise for longer length.
- The wheel will click into place as it reaches each setting and the setting number will appear on the length position indicator.

SETTING	HAIR DESCRIPTION	HAIR LENGTH	
1	Stubble or Cropped look	1.5mm	0.06"
2		2.5mm	0.1"
3	Short	4mm	0.16"
4		5.5mm	0.22"
5	Medium	7mm	0.28"
6		9mm	0.35"
7		11mm	0.43"
8		14mm	0.55"
9	Long	18mm	0.71"

- Note: trimmer comb must be attached to the product in order to use the hair length selector.
- Note: use the beard trimmer without the adjustable comb for trimming hair close to the skin. This will trim hair to 1mm, holding the blades perpendicular to the skin will trim hair to 0.4mm.

#### **ATTACHING AND REMOVING THE TRIMMER COMB**

- Hold the trimmer in one hand with your thumb firmly on the zoom wheel to keep it from turning. Ensure that the length position indicator is at 1.
- Slide the comb down the grooves until it clicks into place.
- The trimmer comb attachment can only be attached in one way.
- To remove the comb attachment slide the comb off the grooves and pull away from the trimmer body.

#### **TO THIN AND TAPER THE BEARD/MOUSTACHE**

- Slide on the attachment comb to the main trimmer blade.
- Use the zoom wheel to set the trimmer comb to the desired length setting. The setting will appear on the length position indicator. If you are trimming for the first time start with the maximum trimming length setting.
- Turn the unit on.
- Place the flat top of the trimmer comb against the skin.
- Slowly slide through the hair. Repeat from different directions as necessary.
- If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush the hair off.

#### **TO DEFINE THE BEARD/MOUSTACHE LINE**

- Remove the trimmer comb attachment.
- Start with edge of beard/moustache line and gently lower the trimmer blade onto your skin.
- Use motions towards edge of beard/moustache line to trim to desired locations in facial area and away from beard in neck area.
- For finer shaping, raise the pop-up trimmer. Shape as desired.

#### **TRIMMING EDGE OF SIDEBURNS**

- Remove the trimmer comb attachment.
- Start with edge of sideburn and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim the desired locations in facial area.
- For finer shaping, raise the pop-up trimmer. Shape as desired.
- To raise the pop-up trimmer, remove the adjustable comb and then slide up the pop-up trimmer release button which sits below the pop-up trimmer.
- To retract the pop-up trimmer, slide down the pop-up trimmer release button.

## **TRIMMING THE NAPE OF YOUR NECK**

Note: You will need a hand mirror for this operation if performing it alone.

- Remove the trimmer comb attachment.
- Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer.
- Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up and move the trimmer up the length of the neck until it touches your finger, covering the hair roots at the base of your head.
- Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer.

## **REMOVING THE CUTTING ASSEMBLY**

- Remove the cutting assembly by firmly pushing up on the blade with your thumb.

## **REPLACING THE CUTTER ASSEMBLY**

- Hold the trimmer in one hand. With your other hand, insert the lower part of the cutter assembly into the trimmer, push down the cutter until firmly attached.

## **TIPS FOR BEST RESULTS**

- Beard, moustache and sideburn hairs should be dry.
- Avoid using lotions before use.
- Comb your hair in the direction that it grows.
- Remove the trimmer comb attachment if you are; defining hairline edges such as sideburns, trimming the nape of your neck or trimming your beard line on front of neck.

---

## **CARE FOR YOUR TRIMMER**

---

- Care for your product to ensure a long lasting performance.
- Your trimmer is fitted with high-quality, cutting blades that are permanently lubricated.
- Cleaning should only be done with a soft brush.

## **AFTER EACH USE**

- Turn the groomer off.
- Remove the trimmer comb attachment and cutter assembly.
- Gently brush the remaining hairs away from the trimmer comb and trimmer blade.
- Please note, the main body of the trimmer is not washable and should be kept away from water.
- After rinsing under a tap ensure the blades are dry.

## POP-UP TRIMMER

- Remove the trimmer comb attachment.
- Slide up the pop-up trimmer into operating position.
- Brush hair from the trimmer blades and the surrounding area.

## CLEANING CAUTIONS

- Only the adjustable trimmer comb and cutter assembly may be removed from the trimmer for cleaning.
- Cleaning should only be done with a soft brush.
- Do not use harsh or corrosive cleaners on the units or their blades.
- This trimmer is not washable. Do not rinse under water.
- Do not submerge in water as damage will occur.

## STORAGE

- Store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not wrap the cord of the charging adaptor around the appliance.

## TROUBLESHOOTING

### The trimmer does not work when turned on:

- Trimmer must be charged for a full 14-16 hours. If this does not work, contact Remington® Service Centre.

### Trimmer blades do not move:

- The cutting unit may be dirty and clogged.
- Clean and lubricate the unit.

---

## BATTERY REMOVAL

---

- The battery must be removed from the appliance before it is scrapped.
  - The appliance must be disconnected from the mains supply when removing the battery.
1. Turn the trimmer on and discharge all remaining power.
  2. Remove the comb and cutter assembly.
  3. Use a screwdriver to pry out the holder plate under the trimmer carefully.
  4. Use a screwdriver to pry the two side panels carefully.
  5. Remove the 4 screws from the housing.
  6. Using a screwdriver carefully pry apart the top and bottom housing.
  7. Unscrew the 2 screws on the circuit board.
  8. Remove the upper circuit board.
  9. Disconnect the battery from the low circuit board.
- The battery is to be disposed of safely.

---

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts\* are excluded and are only covered by a 1 year warranty.

\*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.



---


## SERVICE CENTRE

---

### UNITED KINGDOM

 0800 212 438 (free call mainland UK)  
Spectrum Brands (UK) Ltd  
Fir Street, Failsworth, Manchester  
M35 0HS, UK  
[www.remington.co.uk](http://www.remington.co.uk)

### IRELAND

 142 951 40  
Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12  
<https://ie.remington-europe.com>





# Model No. MB320C

19/UK/ MB320C T22-7000566 Version 06 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2019 Spectrum Brands, Inc.