

REMINGTON®

Lithium Barba Beard Trimmer





MB350L

 www.remington.co.uk

Register online for an EXTRA year guarantee


Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

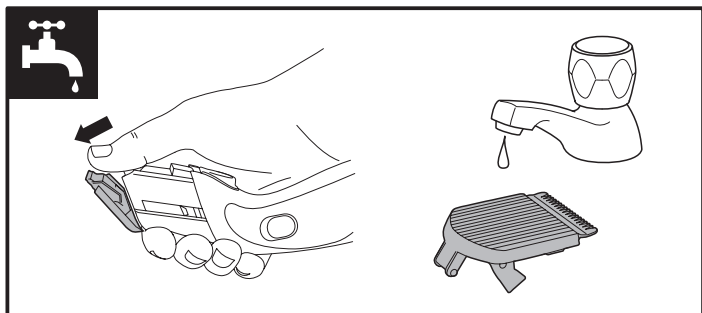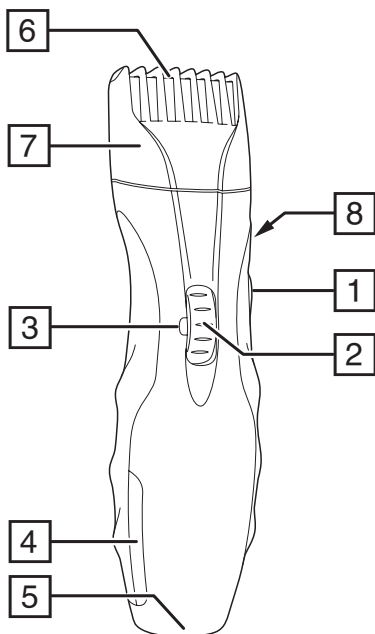

A**B****C****D**

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
 - Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
 - The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
 - Check if the voltage indicated on the adapter corresponds to the local mains voltage before you connect the appliance.
 - Only use the adapter supplied to charge the appliance.
 - Always replace a damaged adaptor with one of the original type.
 - Keep the appliance and the adapter dry.
 - This appliance should never be left unattended when plugged into a power outlet, except when charging.
 - Do not plug or unplug the appliance with wet hands.
 - Do not use attachments other than those we supply.
 - This appliance is not intended for commercial or salon use.
-  The blades are washable under a running tap.
- Please note the main body of the trimmer is not washable and should be kept away from water.

PARTS

1. On/Off switch
2. Zoom wheel
3. Length position indicator
4. Indicator light
5. Charging connector
6. Trimmer assembly
7. Adjustable comb
8. Detail trimmer (on back)
9. Adaptor (not shown)
10. Cleaning brush (not shown)
11. EDGESTyler (not shown)

CHARGING YOUR APPLIANCE

Before using your trimmer for the first time, charge for 4 hours.

1. Ensure the product is switched off.
2. Connect the charging adaptor to the product and then to the mains.
3. The indicator light will come on.

Charge Level	Indicator light
While charging	Green LED will flash
Fully Charged	Green LED will come on
Low Charge	Red LED will come on

- Your trimmer cannot be overcharged. However, if it is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store.
- To preserve the life of your batteries, let them run out every 6 months then recharge for 4 hours.
- On a full charge, your beard trimmer will run for up to 60 minutes of cordless usage.

CORDED

- Connect the charging adaptor to the product and then to the mains.
- Switch your trimmer on.
- We recommend you let the product charge for a few minutes before using corded.

CAUTION: Extended mains only use will result in the reduction of the battery life.

INSTRUCTIONS FOR USE

FITTING THE ADJUSTABLE COMB

- Hold the trimmer in one hand with your thumb firmly on the zoom wheel to prevent it from turning. Ensure the length position indicator is at 1.
- Slide the comb down the grooves until it clicks into place.
- The comb can only be attached one way.

ADJUSTING THE TRIM LENGTH

- The trimmer comb can be adjusted to give you 9 different trim lengths simply by turning the wheel to the desired setting.
- Turn the wheel clockwise for shorter length, anti-clockwise for longer length.
- The wheel will click into place as it reaches each setting and the setting number will appear on the length position indicator.

Setting	Description	Hair length	
		mm	inch
1	Stubble or cropped look	1.5	0.06
2		2.5	0.1
3	Short	4	0.16
4		5.5	0.22
5	Medium	7	0.28
6		9	0.35
7		11	0.43
8		14	0.55
9	Long	18	0.71

Note: trimmer comb must be attached to the product in order to use the hair length selector.

TO THIN AND TAPER THE BEARD/MOUSTACHE

1. Fit the adjustable comb.
2. Use the zoom wheel to set the comb to the desired length setting.
3. The setting will appear on the length position indicator. If you are trimming for the first time start with the maximum trimming length setting.
4. Turn the unit on.
5. Place the flat top of the trimmer comb against the skin.
6. Slowly slide through the hair. Repeat from different directions as necessary.
7. If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull the comb and brush the hair off.

Note: Use the beard trimmer without the adjustable comb for trimming hair close to the skin. This will trim hair to 1mm, holding the blades perpendicular to the skin will trim hair to 0.4mm.

TRIMMING THE NAPE OF YOUR NECK

Note: you will need a hand mirror for this operation if performing it alone.

1. Remove the adjustable comb.
2. Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by the beard trimmer.
3. Using your other hand, hold the trimmer to the base of your neck with the cutting unit facing up and move the trimmer up the length of the neck until it touches your finger covering the hair roots at the base of your head.
4. Be sure to move the unit slowly when performing this operation and to keep the roots at the base of your head out of the way of the trimmer.

TO DEFINE THE BEARD/MOUSTACHE LINE

1. Remove the adjustable comb.
2. Start with edge of beard/moustache line and gently lower the trimmer blade onto your skin.
3. Use motions towards edge of beard/moustache line to trim to desired locations in facial area and away from beard in neck area.
4. For finer shaping, raise the pop-up trimmer.

TRIMMING EDGE OF SIDEBURNS

1. Remove the adjustable comb.
2. Start with edge of sideburn and with the trimmer blades resting lightly against your skin, use motions towards edge of sideburn line to trim the desired locations in facial area.
3. For finer shaping, raise the pop-up trimmer. Shape as desired.
4. To raise the pop-up trimmer, remove the adjustable comb and then slide up the pop-up trimmer release button which sits below the pop-up trimmer.
5. To retract the pop-up trimmer, slide down the pop-up trimmer release button.

TIPS FOR BEST RESULTS

- Beard, moustache and sideburn hairs should be dry.
- Avoid using lotions before use.
- Comb your hair in the direction that it grows.
- Remove the adjustable comb if you are defining hairline edges such as sideburns, trimming the nape of your neck, or trimming your beard line on front of neck.

USING THE EDGEStyler

The EDGEStyler tool is used to guide your trimmer to create a symmetrical, defined edge to your beard.

Neck Line (Fig. A)

Hold the appropriate curved side of the tool underneath your jaw and run your trimmer along it for a clean edge. Repeat on the other side then even up the remaining V left under the chin freehand.

Cheek (Fig. B)

Hold the appropriate curved side of the tool against the cheek and run your trimmer along it for a clean edge. Repeat on the other side of your face.

Sideburn (Fig. C)

Use the straight edge of the tool against the sideburn for perfect, straight edges.

Moustache (Fig. D)

Use the curved edge of the tool to sculpt the moustache area.

CARING FOR YOUR TRIMMER

- To ensure long lasting performance of the trimmer, clean the blades and unit regularly.
- Ensure the appliance is switched off and unplugged from the mains.
- Do not use harsh or abrasive cleaners on the unit or blades.
- This product has washable blades. Ensure the blades are detached from the trimmer before washing the blades.

BLADE RELEASE

1. Ensure the trimmer is switched off.
2. Remove the adjustable comb.
3. Remove the blades by pushing your thumb upwards under the blades and move the blade set away from the trimmer body.
4. To reattach the blades, align the back of the blades with the back housing at the top of the trimmer and push down until the blade clicks into place.

CLEANING

- Wash the blades under a running tap to remove any hair clippings.
- After rinsing under a tap ensure the blades are dry.
- Do not rinse while the product is connected to the charger.
- Please note the main body of the trimmer is not washable and should be kept away from water.

BATTERY REMOVAL

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
 - Disconnect the charging adapter before removing the battery.
1. Turn the trimmer on and discharge all remaining power.
 2. Remove the comb and cutter assembly.
 3. Use a screwdriver to carefully pry out the holder plate under the trimmer.
 4. Use a screwdriver to carefully pry the two side panels carefully.
 5. Remove the 4 screws from the housing.
 6. Using a screwdriver carefully pry apart the top and bottom housing.
 7. Unscrew the two screws on the circuit board.
 8. Remove the upper circuit board.
 9. Disconnect the battery from the low circuit board.
- Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/collection point.
 - Do not attempt to operate the shaver once you have opened it.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

United Kingdom

 0800 212 438 (free call mainland UK)


Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Ref. No. MB350L

Type No. MB320C

19/UK/ MB350L T22-7000583 Version 06 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2019 Spectrum Brands, Inc.