

REMINGTON®

TouchTech Beard Trimmer

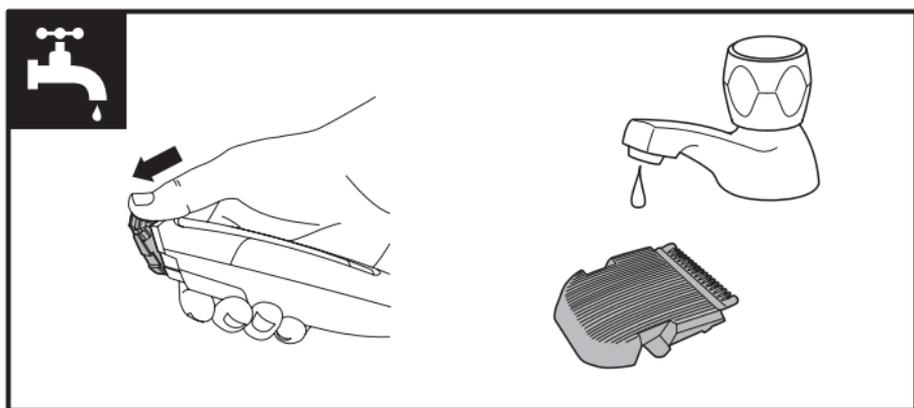
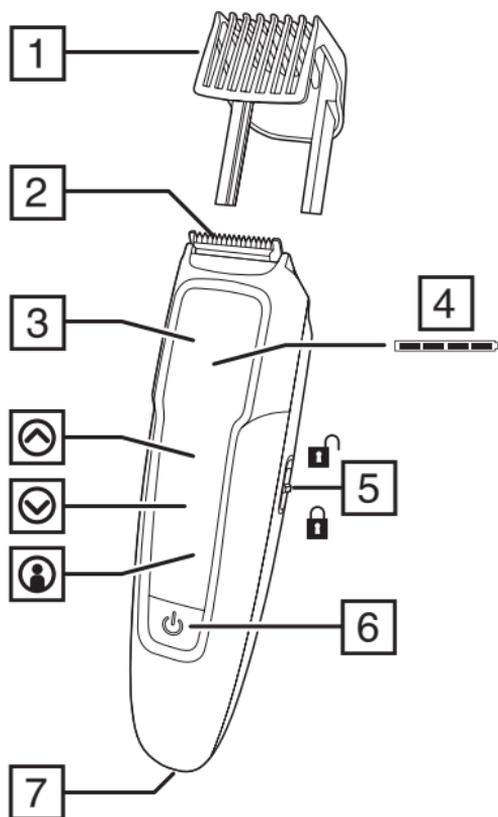


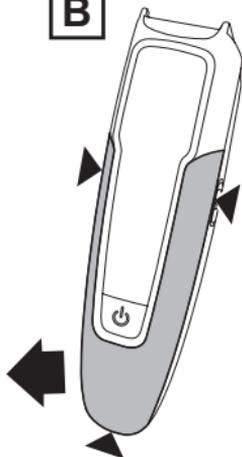
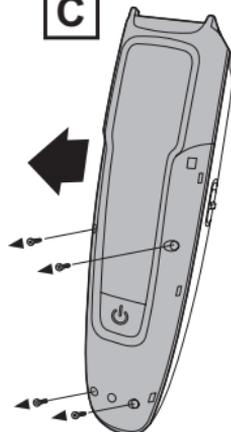
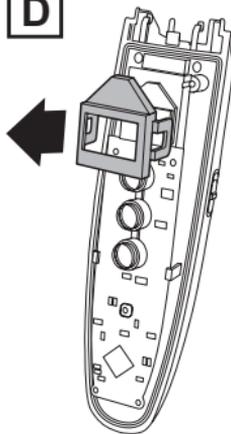
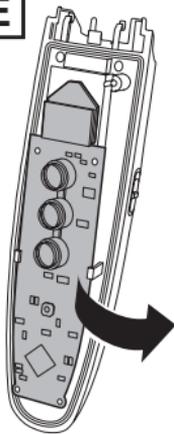
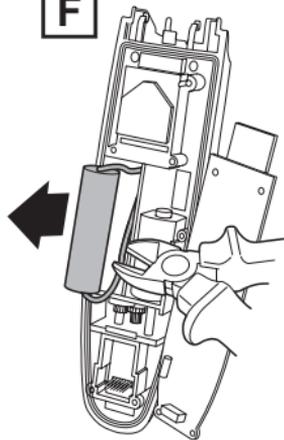
MB4700

 www.remington.co.uk

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.



**A****B****C****D****E****F**

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.



The device is suitable for cleaning under an open water tap.

- **WARNING:** Detach the device from the charging adapter before cleaning it in water.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- This product should only be used with the charging adaptor, or the USB cable supplied.
- Do not use the appliance, charging adaptor, or any other part if it is damaged, as this may cause injury. Always replace a damaged charging adaptor with one of the original type.
- The charging adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
- Do not immerse the charging adaptor in water or any other liquid, nor rinse it under the tap.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|------------------------------|------------------------------------|
| 1. Adjustable beard comb | 6. On/off button |
| 2. Main blade | 7. Charger connector |
| 3. Display | 8. Charging adapter (not shown) |
| 4. Charge/profiles indicator | 9. Cleaning brush (not shown) |
| 5. Travel lock | 10. USB charging cable (not shown) |
-

CHARGING

Charge the device:

- Before using for the first time.
 - When only one charge indicator bar is showing.
 - After the device has not been used for a long time.
1. Ensure that the travel lock is in the unlocked position and the device is not running.
 2. Connect the charging adapter to the power connector and then to the mains power outlet.
 3. When charging, the four charge indicator bars will light up one after the other. When charging is complete, all four indicator bars will be lit.
 4. A first time charge should take approximately 4 hours. Top up charges should take approximately 2 hours.
 - To preserve the life of your batteries, let them run out every 6 months then recharge for 4 hours.

NOTE: If this is the first time you have charged the device, or if it has not been charged in a long time, the display may not turn on immediately when charging.

USB charging via PC

1. Ensure that the travel lock is in the unlocked position and the device is not running
2. Connect your USB cable to the USB port on the PC.
3. Connect the USB cable to device.
 - When charging the digital display will illuminate.

NOTE: If this is the first time you have charged the unit, or if it has not been charged in a long time, the display may not turn on immediately when charging.

Corded/cordless use

- When fully charged, your trimmer should provide approximately 50 minutes of cordless use.
- You can also connect the charger (as if you were going to charge your trimmer) and operate your trimmer 'corded' if desired.

FITTING/REMOVING THE ADJUSTABLE BEARD COMB

1. Switch your trimmer off.
2. Slide the comb up and out of the guides.
3. To refit the comb, slide the comb into the guides and press it all the way down until it clicks.

ADJUSTING THE CUTTING LENGTH OF YOUR TRIMMER

Your trimmer can be adjusted manually in 0.1 mm increments. It can also store and recall the last four trimming lengths used (Profiles).

Adjusting manually

1. Use the up and down buttons   to manually adjust the cutting length. Tap the appropriate button to move the comb up or down in 0.1 mm increments.
2. Hold your finger on the button to move the comb quickly.
3. The display will show the selected length setting.

Note that the length settings cannot be changed when the trimmer is running.

Using profiles

When you adjust the comb length and then operate your trimmer the length setting will automatically be stored in profile one. Your trimmer will store the four most recently used settings in the order of the most recently used. This allows you to recall the settings you use most often.

If all four profile locations have a setting stored and then you make a new cutting length adjustment (one that has not been previously stored) the oldest profile will be deleted and the new setting will be stored.

To recall a profile:

1. Ensure that the trimmer is stopped. Tap the profiles button .
2. Tap the up and down buttons   to select a profile. The display will show the cutting length, and 1, 2, 3 or 4 horizontal bars to represent profile 1, profile 2, etc.



3. Tap the profile button  again to select that profile.
4. The comb will then move to the position stored in the selected profile.

To exit profile mode:

To exit without selecting a profile, either press the on/off button, or don't press any button for 5 seconds. Profile mode will be exited without any changes being made to the comb length setting.

SWITCHING YOUR TRIMMER ON AND OFF

Waking up

Providing the travel lock has not been set to the locked position, your trimmer will wake automatically when you pick it up:

- The display will come on.
- The buttons will light up.
- The comb will move to the last selected length setting.

Note: Your trimmer will go into energy saving mode if it has not been used for several days. Use the on/off button to reactivate it.

Stopping and starting your trimmer

To start your trimmer, press the on/off button.

To stop your trimmer, press the on/off button again.

Hibernate

To place your trimmer into hibernate mode, press and hold the on/off button.

- The display will go out.
- The buttons will go out.
- The comb will fully retract.

For 20 seconds, your trimmer will not respond to touch signals. However, you can activate your trimmer during this time by pressing the on/off button. After 20 seconds, picking up your trimmer will wake it up again.

Auto off

If left unattended your trimmer will auto shut down after a period of time. Your trimmer will wake up automatically when picked up.

Travel lock

To prevent your trimmer accidentally switching on during travel, storage, etc. slide the travel lock switch to the lock  position. This will deactivate the touch control features of your trimmer. To reactivate, slide the lock to the unlocked  position. The travel lock can also be set to the lock position to switch your trimmer off.

INSTRUCTIONS FOR USE

During use, your trimmer will automatically adapt its speed and cutting rate according to the hair thickness being cut.

Trimming your beard

For even cutting, allow your trimmer to cut its way through the beard hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb length setting.

Thinning or tapering the beard or moustache

1. Use the controls to set the trimmer comb to the desired length setting.
2. Place the flat top of the trimmer comb against the skin.
3. Slowly slide the trimmer through the hair. Repeat from different directions as required.
4. If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush the hair off.

Trimming your sideburns

1. Hold your trimmer with blade facing you.
2. Start with edge of your sideburns. With the trimmer blade resting lightly against your skin, move your trimmer carefully towards your sideburn until the desired shape is achieved.

Trimming the nape of your neck

1. Remove the adjustable comb.
2. Use the fingers of one hand to lift the hair at the base of your head up off your neck.
3. Your index finger should be covering the roots of the hairs you are lifting to prevent them from being accidentally cut.
4. Hold the trimmer to the base of your neck with the blade facing up. Move the trimmer up the neck until it touches your index finger which is protecting the hair roots.
5. Move your trimmer slowly and keep the hair roots at the base of your head out of the way of the trimmer.

TIPS FOR BEST RESULTS

- Your beard, moustache or sideburn hair should be dry.
- Avoid applying lotions before use.
- If you are trimming for the first time, start with the adjustable comb set to its maximum length position.

CARING FOR YOUR TRIMMER

Never rinse, wash or otherwise subject this product to liquid whilst the charger is connected.

1. For best results, keep trimmer running while rinsing it under the tap.
2. For more thorough cleaning the blades can be easily removed to wash any hair trimmings from the blades.
3. Push the top of the blade away from the trimmer body using your thumb.

4. Wash, then refit the blade.
5. Place a small drop of cutter or sewing machine oil onto the blades at each end and at the middle point of the blades. Turn the unit on for a few seconds to distribute the oil then turn off and wipe off excess oil.

REMOVING THE RECHARGEABLE BATTERY

We strongly recommend that a professional removes the rechargeable battery. Parts of the case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
 - Disconnect the charging adapter before removing the battery.
1. Ensure that the battery is fully discharged. To do this, operate the trimmer until it stops.
 2. Remove blade then remove the two screws (FIG A).
 3. Use an appropriate tool to prise off the front cover trim (FIG B) at the points indicated (▶◀).
 4. Remove the four screws (FIG C).
 5. Unclip then lift off the display cover (FIG D).
 6. Unclip the circuit board (FIG E) and move it aside.
 7. Lift out the battery and cut the two wires (FIG F).
- The battery must be disposed of at an appropriate official recycling/collection point.
 - Do not attempt to operate the trimmer once you have opened it.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

United Kingdom

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Model No. MB4700

19/UK/ MB4700 T22-7000585 Version 06 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2019 Spectrum Brands, Inc.