

# REMINGTON®

## PRO-Luxe Dryer



AC9140

Register online for  
£10,000 prize draw  
EXTRA year guarantee  
FREE rewards gallery



Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister)  
You must register within 28 days  
of purchase.


Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe.

Remove all packaging before use.

---

## IMPORTANT SAFEGUARDS

---

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Warning – for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask an electrician for advice.
- 3 For UK, Household Use Only. Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the dryer/straightener is not permitted (see BS7671).
- 4 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 5 Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water. 
- 6 When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- 7 Do not wrap the cord around the unit. Check the cord regularly for any sign of damage.
- 8 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- 9 Do not use the appliance if it is damaged or malfunctions.
- 10 Do not allow any part of the appliance to touch the face, neck or scalp.
- 11 Keep direct airflow away from eyes or other sensitive areas.
- 12 During use, always ensure the inlet and outlet grilles are not blocked in any way as this will cause the unit to automatically stop. If this should occur, switch off and allow the unit to cool.
- 13 Ensure the inlet grille is free from obstructions such as fluff, loose hair etc.
- 14 Do not leave the appliance unattended while plugged in.

- 15 Do not set the appliance down while still on.
- 16 Do not place the appliance on any soft furnishings.
- 17 Do not use attachments other than those we supply.
- 18 Do not use the diffuser on the highest heat setting.
- 19 This appliance is not intended for commercial or salon use.
- 20 Let the appliance cool down before cleaning and storing away.



## KEY FEATURES

- 1 Heat settings switch
- 2 Speed settings switch
- 3 Cool shot
- 4 Style shot
- 5 Slim 7mm concentrator
- 6 Styling concentrator
- 7 Diffuser
- 8 Removable easy clean rear grille
- 9 Hang up loop
- 10 Cord

---

## PRODUCT FEATURES



 


---

- OPTIheat technology - intelligent style shot optimises the temperature settings to apply heat only where it matters to achieve longer lasting styles.
- 1850 – 2400 watts.
- AC motor.
- Styling concentrator, creates even heat distribution for improved styling results.
- Ionic conditioning - 90% more ions for frizz free shine\*.
- Ceramic grille.

---


## INSTRUCTIONS FOR USE

---

- Wash and condition your hair as normal.
- Squeeze out excess moisture with a towel and comb through.
- ★ Hairsprays contain flammable material – do not use while using this product.
- Plug the product into the mains power supply.
- To switch the product on press the speed setting down to medium speed setting .
- To increase speed press the switch down again to the high speed setting .
- To select heat setting press the temperature setting switch to the low , medium  or high setting .

### ★ HOW TO CREATE LONGER-LASTING STYLES

- For best results, the style shot should only be used when the hair is 70-80% dry.
- The style shot works on all temperature and speed settings.
- Select the desired temperature and speed setting using the switches on the handle as described above.
- Dry your hair gently without sectioning until it is around 70-80% dry.
- Turn off the dryer and attach the styling concentrator (fig. 1). The 7mm may also be used.

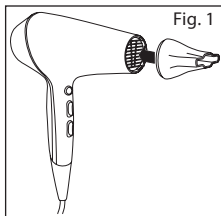

- Section the hair.
- Ensure the style shot setting has been selected and turn the dryer on (fig. 2).

Fig. 2



- ✦ **Style Shot:** Increases the dryer temperature and ensures the perfect amount of heat is applied to the hair when styling.
- Using a hair brush, work on one section at a time.
- Turn the hairdryer on and run the concentrator down the hair until dry.
- When the section of hair is dry, select the cool setting (fig. 3) and run the concentrator down the hair again. This will help to set the style and achieve longer-lasting results.
- After use, turn the appliance off and unplug.

Fig. 3



#### ➡ TIPS FOR BEST RESULTS

- To enhance natural curls and waves, attach the diffuser to the dryer. Turn your head upside down and gently place your hair into the diffuser bowl slightly rotating the dryer as you style.
- To create extra volume at the roots of the hair, keep your head upright and place the diffuser against the top of the head. Gently rotate the hairdryer allowing the diffuser fingers to gently massage the scalp being careful not to burn the scalp. Dry gently on a medium heat / low speed setting.
- ✦ **Caution:** Do not use the diffuser on the highest heat setting.

---

## 👁 CLEANING AND MAINTENANCE

---

- Unplug the appliance and allow to cool.
- To maintain peak product performance and to prolong motor life, it is important to regularly remove any dust and dirt from the air filter grille and clean with a soft brush.
- Wipe all the surfaces with a damp cloth.

✳ **To remove the rear grille for cleaning –**

- Hold the dryer handle in one hand, then with the other place your thumb on the tab at the bottom of the grille. Push upwards to flip the grill up and off the dryer.

✳ **To replace the rear grill -**

- Hold in place with thumb and index finger hook the top into the slot and click the bottom into place.



## ENVIRONMENTAL PROTECTION

---

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



---

## ➡ SERVICE AND GUARANTEE

---

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at [www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)

---

## ➡ SERVICE CENTRE

---

### United Kingdom

☎ Tel 0800 212 438 (free call mainland UK)

☎ +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

## Ireland

 Tel 142 951 40

Remington Consumer Products,  
Unit B12, Ballymount Corporate Park,  
Ballymount, Dublin 12.  
[www.remington.co.uk](http://www.remington.co.uk)

---

## REGISTER ONLINE FOR

---

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

**Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.**

## **Model No. AC9140**

17/UK/ AC9140 T22-0004878 Version 01 /17

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2017 Spectrum Brands, Inc.