

REMINGTON®



Official Electrical Styling Partner of Manchester United

Heritage Foil Shaver





HF9050

 www.remington.co.uk


Register online for an **EXTRA** year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

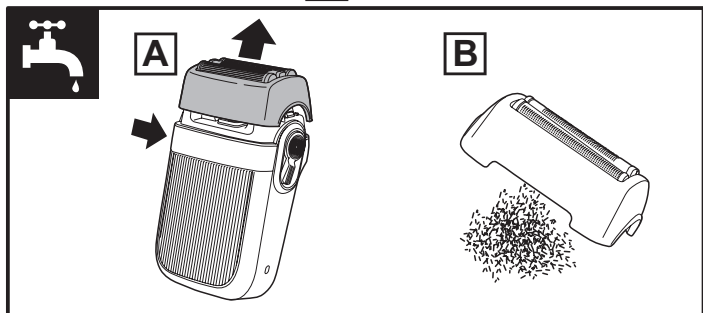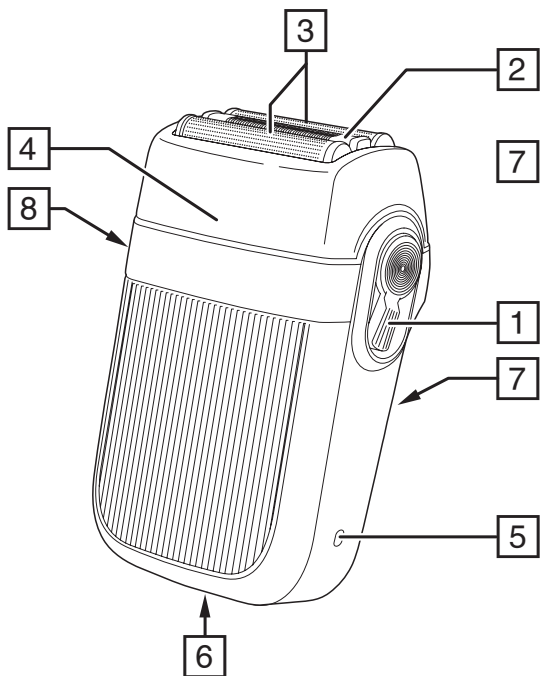

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
-  The shaver is suitable for cleaning under an open water tap.
- **WARNING:** Detach the shaver from the charging adaptor before cleaning it in water.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- This product should only be used with the charging adaptor supplied.
- Always replace a damaged adaptor with one of the original type.
- Do not use the appliance if it is damaged or malfunctions.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.
- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

1. On/off switch
 2. Intercept trimmer
 3. Shaving foils
 4. Hair pocket
 5. Charging indicator
 6. Charging connector
 7. Pop-up trimmer (on back)
 8. Foil assembly release buttons
 9. Face towel (not shown)
-

GETTING STARTED

CHARGING YOUR SHAVER

10. Ensure the product is switched off.
11. Connect the charging stand to the adaptor and then to the mains.

Charging indicator

Charge Level	Indicator
Charging	LED flashes slowly
Low charge	LED flashes quickly
Full charge	LED comes on for 5 minutes then goes off

- Run time from fully charged is up to 60 minutes.
 - Charge time from empty is 2 hours.
 - To preserve the life of your batteries, let them run out every 6 months then recharge for 24 hours.
-

INSTRUCTIONS FOR USE

It is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system.

Shaving

12. Switch the shaver on by pressing the on/off switch.
13. Stretch the skin with your free hand so the hairs stand upright.
14. Hold the shaving head so that the foils touch your face.
15. Use short, linear strokes.

Shaving with shaving gel

Follow the same instructions as dry shaving if using shaving gel.

Caution: After use with shaving gel, please rinse the blade under warm water to clean away any excess gel and debris.

TIPS FOR BEST RESULTS

- Always hold the shaver at right angles to the skin so that all foils are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short linear motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid damage to the foil heads.

CARE FOR YOUR SHAVER

Care for your appliance to ensure a long lasting performance. We recommend you clean your appliance after each use.

The easiest and most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.

16. Remove the foil assembly by pressing the release button on the side of the head and lifting the foil assembly upwards to remove it from the hair pocket (Fig A).
 17. Tap out the excess hair shavings and rinse the foils under running water (Fig B).
 18. Do not clean the shaving foil with a brush.
 19. Replace the head assembly by placing the assembly on top of the hair pocket, press down and click into place.
- Lubricate the teeth of the trimmer every six months with a drop of sewing machine oil.

REPLACING THE FOILS AND CUTTERS

To ensure continued high quality performance from your shaver, we recommend the foils and cutters are replaced every six months.

Signs that your foils and cutters need replacing.

- Irritation: as foils get worn, you may experience skin irritation.
- Pulling: as the cutters wear, your shave may not feel as close and you may feel the cutter pulling your hair.
- Wear through: you may notice that the cutters have worn through the foils.

To replace the foil:

20. Remove the foil assembly by pressing the release button on the side of the head and lifting the foil assembly upwards to remove it from the hair pocket (Fig A).
21. Insert the new foil assembly on the hair pocket, press down and click into place.

Replacing the cutters

1. Grasp the cutter between your thumb and forefinger and pull upwards.
2. Snap the new cutter into the oscillator tip. Note: DO NOT press on the cutter ends as this may cause damage.

3. Foil head replacements can be found on the Remington website.

TROUBLESHOOTING

If your shaver battery is completely empty or the shaver has not been used for an extended period of time, the shaver may not start when operated using the cord. If this occurs, a 5 minute quick charge will allow for 3 minutes of shaving.

BATTERY REMOVAL

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
 - Disconnect the charging adapter before removing the battery.
1. Run the shaver until the motor stops.
 2. Remove the foil assembly head and pull off the cutters.
 3. Using a Philips screwdriver, remove 4 screws and pry out the top piece of plastic.
 4. Remove the front panel with the Remington logo to expose two screws. Remove them.
 5. Pry off the front panel held by three internal plastic snaps.
 6. Remove the four exposed screws.
 7. Pry out the plastic bracket. A release button and spring will come out at the same time.
 8. Remove the two screws within the shaver body that hold the inner housing to the outer housing. One screw is to the bottom and the other screw is to one side.
 9. Loosen the large screw holding the power switch to the housing; there is no need to remove this screw entirely.
 10. Pry apart the housing from the power switch to separate the two components held together by the metal pin.
 11. Pull the inner housing out of the outer housing.
 12. Remove the two screws holding together the front and back panel of the inner housing.
 13. Pry apart the front and back panel of the inner housing by spreading the two plastic snaps to either side.
 14. Remove the two screws holding the circuit board to the housing.
 15. Cut the wires connecting the circuit board to the charge port, motor, and power switch.
 16. Pull out the circuit board and battery assembly and cut the metal tabs connecting the battery to the board.
 17. Remove the battery
- The battery is to be disposed of safely.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

United Kingdom

 0800 212 438 (free call mainland UK)


Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

Ref. No. HF9050

Type No. HF9000

19/UK/ HF9050 T22-7000983 Version 04 /19

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2019 Spectrum Brands, Inc.