

REMINGTON®

Cordless Ladyshaver



GUARANTEE
2⁺¹
yr

WDF4840

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery



Visit www.productregister.co.uk/remington.
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFETY INSTRUCTIONS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- 2 Keep the appliance and cable out of reach of children under 8 years.
- 3 Do not leave the appliance unattended while plugged in.
- 4 Only set the appliance down on a heat-proof surface.
- 5 Do not use accessories or attachments other than those we supply.
- 6 Do not twist or kink the cable or wrap it round the appliance.
- 7 Store the product at a temperature between 15° C and 35° C.
- 8 Don't use the appliance if it is damaged or malfunctions.
- 9 If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, in order to avoid hazard.



👁️ KEY FEATURES

- | | |
|---|---|
| 1 Head assembly | 7 Charging indicator light |
| 2 Head release button | 8 Moisturising massage strip with Aloe Vera |
| 3 On/off switch | 9 Charging Stand |
| 4 2 hypoallergenic flexing shaver foils | 10 Anti-Slip Grip |
| 5 Bikini trimmer comb guard | 11 Beauty bag (not shown) |
| 6 Flexible trimmer | 12 Cleaning Brush (not shown) |

★ 2 Year Guarantee

GETTING STARTED

Be patient when first using your lady shaver, as with any new product, it may take a little while to familiarise yourself with the product. Take the time to acquaint yourself with your shaver, as we are confident you will receive years of enjoyable use and complete satisfaction.

This appliance should be charged by approved safety isolating adaptors HK28B-3.6-100 or BD040010J with the output capacity of 3.6Vdc, 100mA and 4.0Vdc, 100mA respectively.

Charging

- 1 Always ensure that your hands, trimmer and mains adaptor are dry before charging.
- 2 Before using your Remington® lady shaver for the first time charge it for 24 hours. For subsequent uses, charge for 20 hours before use. One full charge allows 30 minutes of cordless usage time.
- 3 Use product until the battery is low. This is indicated by the lady shaver working distinctly slower.
- 4 Your lady shaver cannot be overcharged. However, if the product is not going to be used for an extended period of time (2-3 months), unplug it from the mains and store. Fully recharge your lady shaver when you would like to use it again.
- 5 To preserve the life of your batteries, let them run out every 6 months then recharge for 20 hours.

Charging Cautions

- Do not attach the power cord to the mains with wet hands.
- Always charge shaver in a cool, dry place.
- Do not charge the shaver in close proximity to water.
- The shaver can be attached to an electrical outlet voltage of 220V – 240V.

INSTRUCTIONS FOR USE

- Your lady shaver is suitable for legs, underarms and the bikini area.
- Suitable for use in a bath or shower.

For Regular Shaving

- 1 Turn the lady shaver on.
- 2 Hold the shaver at a right angle to your skin and move the shaver against the direction of the hair growth.

- 3 After shaving, turn shaver off.
- NOTE: Before dry shaving, ensure the area is clean, dry and free from creams or oils.

✱ For Longer Hairs

- 4 If you have not shaved for a while, use the trimmer before shaving. This will help you achieve a more effective shaving result.
- 5 Hold the shaver with the trimmer facing your leg and slightly tilted towards you (approximately a 45° angle).
- 6 Move the trimmer slowly against the direction of hair growth.

✱ Trimming and Shaping

- 7 Attach the bikini trimmer attachment.
- 8 Hold the shaver at a right angle to your skin and press down gently.
- 9 Edge and shape the areas as desired.

✱ For Best Shaving Performance

- We recommend that you use your new shaver daily for 2-3 weeks to allow time to find the optimum shaving methods for your particular type of hair growth patterns.

✱ CAUTION

- If your skin is easily irritated by shaving or you suffer from skin allergies, you should test a section of your arm or leg before using the shaver.

✱ Caring for your Shaver

- To ensure long lasting performance of your shaver, clean the head assembly regularly. The easiest and the most hygienic way to clean the shaver is by rinsing the having head after use with warm water.

✱ After Each Use

- Ensure the shaver is turned off.
- Press the side release button to slip open the head assembly.
- Blow any loose debris from the foil.
- Brush or rinse any accumulated hair from the main body of the shaver, head assembly and cutter assembly.
- Leave the head assembly open to allow the shaver to dry completely.

✱ NOTE

Ensure that the lady shaver is turned off when cleaning.



The lady shaver is suitable for use in the bath or shower.

- Do not rinse with water hotter than 70°C.
- Do not completely submerge the lady shaver in water.
- Do not clean the shaving foils with the brush.
- At regular intervals, put a drop of sewing machine oil onto the foils and cutter heads.

✱ **Replacing your Foil and Cutters**

To ensure the continued highest quality performance from your shaver, we recommend that the foil and cutter are replaced every 6 months. These can be obtained from our nearest Remington* Service Centre.

✱ **Signs that your foils and cutters need replacing:**

- **Irritation:** As foils get worn, you may experience skin irritation.
- **Pulling:** As the cutters wear, your shaver may not feel as close and you may feel the cutter pulling your hair.
- **Wear through:** You may notice that the cutters have worn through the foils.

✱ **To Replace the Foil**

- Ensure the lady shaver is switched off.
- Gently push the small plastic area at either end of the foil. The foil should then easily detach from the head assembly.
- To reassemble, slide the foil into foil bracket and click into position.
- Close the head assembly.

✱ **CAUTION**

- Only hold the plastic to prevent damage to the foil.
- Do not press on the foil when replacing.

✱ **To Replace the Cutters**

- Ensure the shaver is switched off and open the head assembly (as above).
- To remove cutter, grasp cutter between the thumb and forefinger and pull upwards.
- To reassemble cutter, place cutter onto the oscillator tip. Gently push down clicking into position.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- Remove the shaver head from the unit.

- Using a small screwdriver, remove the screw from the bottom of the shaver.
- Pry the front panel from the front housing and remove the switch button.
- Pull out the inner housing from the top of the unit and expose the PCB and batteries.
- Pry the PCB assembly out of the inner housing.
- Cut or break the wire stamps on both ends of the batteries and remove the batteries.
- Dispose of the batteries safely.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Defects from repair by an unauthorized dealer are not covered.

Consumables are excluded.


Your statutory rights are not affected.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

Model No. WDF4840

13/UK/ WDF4840 T22-0001690 Version 07 /13

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2013 SBI