

REMINGTON®

Ultimate Bikini Kit



WPG4035

Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery



Visit www.productregister.co.uk/remington.
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

WARNING – TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 An appliance should never be left unattended when plugged into a power outlet, except when charging.
- 3 Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- 4 Do not twist or kink the cable, or wrap it round the appliance.
- 5 Store the product at a temperature between 15°C and 35°C.
- 6 Do not use attachments other than those we supply.
- 7 Make sure the power plug and cord do not get wet.
- 8 Do not plug or unplug the appliance with wet hands.
- 9 This product is for cordless use only. Do not use your trimmer whilst plugged into the mains.
- 10 This appliance is not intended for commercial or salon use.



KEY FEATURES


- 1 Precision trimmer attachment with comfort tips
- 2 Adjustable comb attachment
- 3 Bikini exfoliator
- 4 MiniScreen shaver attachment
- 5 On/off switch
- 6 Hanging hook
- 7 Charging indicator light
- 8 Cleaning brush (not shown)
- 9 Storage pouch (not shown)
- 10 Mains adaptor (not shown)

GETTING STARTED

- Be patient when first using your trimmer. As with any new product, it may take a little while to familiarise yourself with the product.
- Take the time to acquaint yourself with your new trimmer, as we are confident you will receive years of enjoyable use and complete satisfaction.

INSTRUCTIONS FOR CHARGING

- Always ensure that your hands, trimmer and mains adaptor are dry before charging.
- Before using your trimmer for the first time charge for 24 hours. For subsequent uses, charge for 14-16 hours before use. One full charge allows 30 minutes of cordless usage time.
- Ensure the product is switched off and attach the mains adaptor to the trimmer.
- Connect the mains adaptor to the mains. The charging indicator will light up.
- Charge for the time indicated above.
- Use product until the battery is low. This is indicated by the trimmer working distinctly slower.

 **NOTE:** This product is for cordless use only. Do not use your trimmer whilst plugged into the mains.

- Your trimmer cannot be overcharged. However, if the product is not going to be used for an extended period time (2-3 months), unplug it from the mains and store. Fully recharge your trimmer when you would like to use it again.
- To preserve the life of your batteries, let them run out every six months then recharge for 14-16 hours.
- This appliance should be supplied with approved safety isolating adaptors VD040010J / HK28G-3.6-100 (for Europe), BD040010J / HK28B-3.6-100 (for United Kingdom) with the output capacity of 3.6-4Vdc; 100mA (adaptor output).

CHARGING CAUTIONS

- Do not attach the mains adaptor to the mains with wet hands.
- Always charge your trimmer in a cool, dry place.
- Do not charge your trimmer in close proximity to water.
- The trimmer can be attached to an electrical outlet voltage of 220V – 240V.

YOUR TRIMMER ATTACHMENTS

- Your trimmer has 4 different attachments to meet all your bikini grooming needs: a precision trimmer, adjustable length comb, a mini screen shaver and an exfoliating brush.

- Please see the 'Instructions for Use' section for guidance on which attachments to use for each area.

✳ EXCHANGING THE ATTACHMENTS

- Just place the attachment on the trimmer and turn it clockwise until the lock symbols align/you hear a 'click'.

✳ ATTACHING THE ADJUSTABLE COMB TO THE PRECISION TRIMMER

- The precision trimmer has an adjustable comb attachment which can be adjusted to give 3 different trim lengths.
- To fasten the comb attachment, slide it onto the precision trimmer from front to back until it locks into place.
- To adjust the comb length, grip the sides of the comb, slide the comb off, adjust to align into desired slots and slide back into locked position.
- To remove, grip the sides of the comb and slide off.

✳ Combs attachment settings:

Position	Length
No comb	0.8mm
1	2mm
2	4mm
3	6mm

- If you are trimming for the first time, start with the maximum trimming length setting.

INSTRUCTIONS FOR USE



Suitable for use in a bath or shower.

✳ EXFOLIATING

- The exfoliating brush gently rotates to help prevent ingrown hairs and irritation in the bikini area.
- Exfoliating before trimming can help to lift flat lying and ingrown hairs.
- Exfoliating between trimming can help prevent ingrown hairs and leave the skin feeling smoother.
- The exfoliating attachment is recommended for wet use.
- Wet the skin and use in a continuous circular motion.

- Rinse the brush attachment after each use.

✱ BIKINI

✱ To Trim the Length

- Attach the precision trimmer.
- Place the comb attachment onto the trimmer, select the desired length.
- Place the flat top of the comb against the skin and slowly slide the trimmer through the hair in the direction of hair growth.
- CAUTION: Ensure that the trimmer blade is kept away from any sensitive areas.

✱ Edging and Shaping

- Attach the precision trimmer without the comb attachment.
- Hold the trimmer at a right angle to your skin and press down gently.
- Edge and shape the area as desired.
- Attach the mini screen shaver and move over any trimmed areas for smoother results.

✱ Underarms

- Attach the mini screen shaver.
- Gently move the shaver against the hair growth.
- NOTE: If hair length is more than 1mm use the precision trimmer first.

✱ Tips for best results

- After trimming, lightly go over the trimmed areas with the mini screen shaver to get a smooth clean finish.
- Hold the Trimmer so the mini screen shaver is gently touching the skin. Avoid holding the groomer at an angle.
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards or across) for better results.
- Use your free hand to stretch the skin for easier trimming.
- Note: The miniscreen shaver is designed to shave small detailed areas. It is not designed to shave large surfaces. For a close comfortable shave of these areas we recommend using one of REMINGTON®'s female shavers.

✱ REPLACING YOUR FOIL AND CUTTERS

- To ensure the continued highest quality performance from your shaver, we recommend that the foil and cutter are replaced regularly.

✱ Signs that your foils and cutters need replacing.

- Irritation: as foils get worn, you may experience skin irritation.
- Pulling: as the cutters wear, your shave may not feel as close and you may feel the cutter pulling your hair.

- Wear through: you may notice that the cutters have worn through the foils.

CARE FOR YOUR TRIMMER

- Care for your appliance to ensure a long lasting performance.
- We recommend you clean your appliance after each use.
- The easiest and the most hygienic way to clean the appliance is by rinsing the appliance head after use with warm water.
- Keep the switch in the “off” position when not in use.

AFTER EACH USE

- To clean the precision and arc detail trimmers attachments:
- Brush the accumulated hair from the cutting assembly.

TO CLEAN THE MINISCREEN FOIL

- Hold the trimmer in one hand, with the other press the foil release buttons and gently pull the foil assembly off the trimmer.
- Blow any loose debris from the foil.
- Brush or rinse the accumulated hair from the cutter assembly.
- To replace the foil assembly, hold either side of the foil and push down until you hear a click and it is firmly attached. Do not press down on the foil.
- Rinsing the groomer under water or using when in the shower may require lubricating the cutter blades periodically.

CAUTION

- Only use the light-grade oil or sewing machine oil on the blades.
- Do not use harsh or corrosive cleaners on the units or their cutters.
- Do not apply pressure or hard objects to cutters.
- Do not disassemble cutter assembly.
- Do not submerge in water as damage will occur.

BATTERY REMOVAL

- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- To remove the rechargeable battery:
- Unplug the trimmer.
- Run the trimmer until the motor stops.
- Open the handle by placing a flat head screwdriver between the handle and hang hook.
- Gently pry apart the hang hook from the handle.

- Gently pull out the inner bracket of the battery.
- Cut the connect plates of the battery and take out the battery.
- The battery is to be disposed of safely.



ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➔ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.


If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at www.remington.co.uk/parts-accessories

➔ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.remington.co.uk

 **REGISTER ONLINE FOR**

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.
Visit www.productregister.co.uk/remington. You must register within 28 days of purchase.

Model No. WPG4035

14/UK/ WPG4035 T22-0002368 Version 08 /14

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.
Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2014 SBI