

 
 
# REMINGTON®

 
 
 
 
 
 
EST. NEW YORK 1937



## **R1 Style Series Rotary Shaver R1000AU**

[www.remington-products.com.au](http://www.remington-products.com.au)  
[www.remington.co.nz](http://www.remington.co.nz)

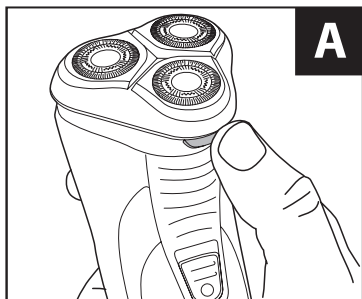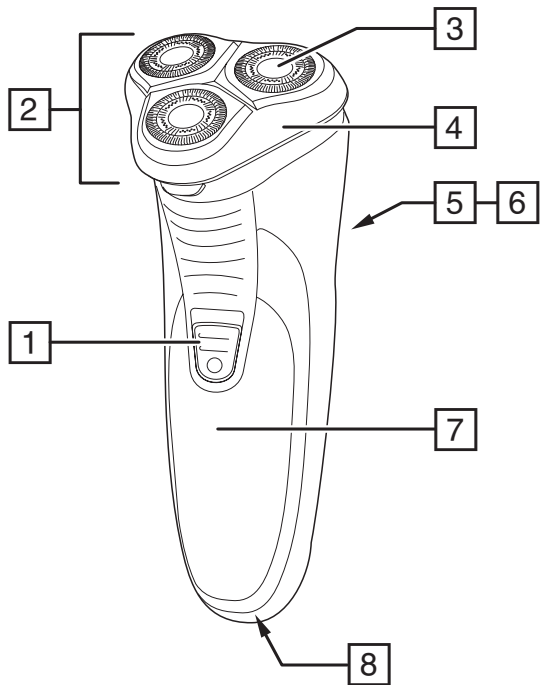

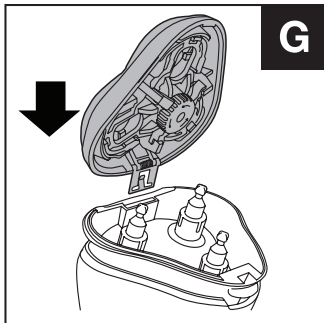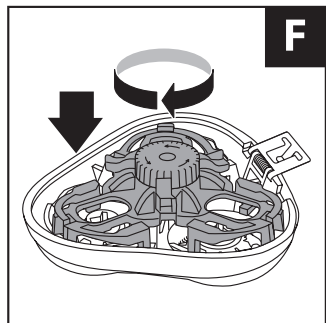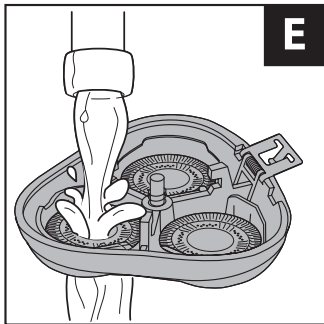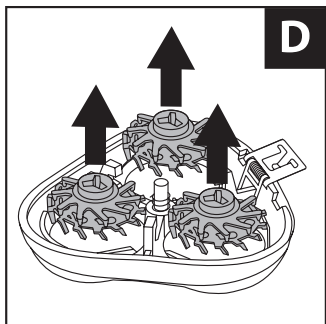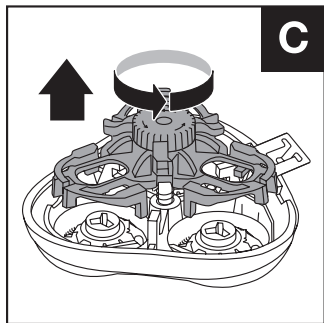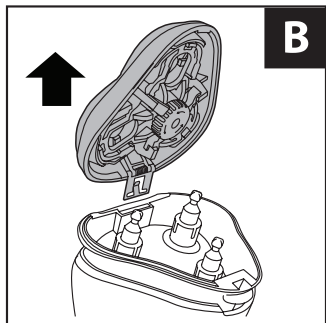

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

---

## **IMPORTANT SAFEGUARDS**

---

**When using electrical appliances, basic precautions should always be observed, including the following.**

 **READ ALL INSTRUCTIONS BEFORE USING**

**DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off.**

**For additional protection, the installation of a residual current device (rcd) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.**

**WARNING: TO REDUCE THE RISK OF BURNS, ELECTROCUTION AND FIRE OR INJURY TO PERSONS**

- Before using your product, we recommend that you carefully read the user manual, which indicates the term of this warranty and the proper use you should give the product.
- The appliance should never be left unattended when plugged into a power outlet, except when charging the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Never operate this appliance if it has a damaged cord or plug, if it is not working correctly, if it has been dropped or damaged, or dropped into water. If the supply cord or plug of the appliance is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. It cannot be repaired.
- Keep the cord away from heated surfaces.
- Charge, use and store the product at a temperature between 0°C and 32°C.

- Do not use outdoors or where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use this appliance with damaged or broken tracks, foils or cutters, as injury may occur.
- Do not plug or unplug the appliance with wet hands.
- For household use only.
- Do not place or store the appliance or charging cable where it can fall or be knocked into a sink or bath.
- Do not place in or drop into water or any other liquid for extended periods of time.
- If an appliance falls into water, "unplug it" immediately. Do not reach into the water.
- Unplug the charging cable immediately after fully charging.
- **WARNING:** Detach the hand-held part from the supply cord before using or cleaning it in water.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments other than those we supply..
- Never drop or insert any object into any opening of this appliance.
- Always store the cable and shaver in a moisture-free location.
- Do not use on people who are asleep.
- Do not wrap the cord around the appliance.
- We strongly recommends that an approved Safety Switch (Residual current device) be installed to protect all bathroom power outlets. Ask an electrical contractor for advice.



This product is not suitable for use in a bath or shower.

- **WARNING:** Keep the appliance dry.
- When charging, you must use an external supply unit with an output terminal of 5Vdc (the measured maximum output power is less than 15W) and meets the requirements of IEC 60335-1 standard.
- For household use only.

## SAVE THESE INSTRUCTIONS

### PARTS

1. On/off switch
  2. Head and Cutter assembly
  3. Flexing heads
  4. Hairpocket
  5. Detail trimmer
  6. Trimmer release button
  7. Charging indicator light
  8. Power connector
- Not shown*
- USB charging cable
  - Cleaning brush
  - Head guard

### GETTING STARTED

#### CHARGING

- It is recommended to fully charge your appliance before using it for the first time.
- Ensure the product is switched off.
- Connect the product to the USB cable and then connect the USB end of the cable to a powered USB port.

#### CHARGING INDICATOR LIGHT

Light	Status
Flashing	Shaver is charging
Continuously on	Shaver fully charged
Flashing rapidly	Shaver battery is low

- Run time from fully charged is up to 30 mins.
- Charge time from empty is 8 hours.
- Do not recharge your product after each use as this will shorten the life of the battery.
- Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

### INSTRUCTIONS FOR USE

#### SHAVING

1. Slide the power switch to turn on.
2. Stretch the skin with your free hand so the hairs stand upright.
3. Only apply light pressure on the shaving head while shaving (pressing too hard can damage the heads and make them vulnerable to breakage).
4. Use short, circular strokes.

#### TRIMMING

1. Push the trimmer button to release the detail trimmer.

2. Hold the trimmer at a right angle to your skin.
3. Place the trimmer at desired trim line for a quick, easy professional trim.
4. To retract the trimmer, pull the trimmer button back.

---

## TIPS FOR BEST RESULTS

---

- Ensure your skin is dry. Always hold the shaver at right angles to the skin so that all three heads are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- DO NOT press hard against the skin in order to avoid damage to the rotary heads.

---

## CARE FOR YOUR SHAVER

---

- Care for your appliance to ensure a long lasting performance. We recommend you clean your appliance after each use.
- Ensure the appliance is switched off and unplugged from the mains before cleaning.
  1. Open the shaver head by pressing the release button.
  2. Empty out any hair clippings.
  3. Pull the shaver head upwards to remove it from the body.
  4. Rotate the circular button in the centre of the retainer counter clockwise to release the retainer. Once released, lift it out of the shaver head. Make a note of the correct orientation of the retainer to make refitting easier.
  5. Carefully brush away any hairs from the cutters.
  6. For a more thorough cleaning, lift out the three cutters.
  7. Wash the shaving head under running water. Allow to dry thoroughly.
  8. Carefully refit the three cutters.
  9. Refit the retainer. Rotate the button clockwise to lock the retainer in place.
  10. Once the shaver head is assembled, align the spring hinge with the slot at the back of the hair pocket and press into place. Close the shaver head.

### TRIMMER

Lubricate the teeth of the trimmer every six months with a drop of sewing machine oil.

---

## REMOVING THE RECHARGEABLE BATTERY

---

This appliance contains nickel metal hydride batteries that are non-replaceable. When the battery is at the end of its life, the appliance and battery must be properly disposed of at an official recycling point.

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The battery must be removed from the appliance before it is scrapped.

- Disconnect the charging adapter before removing the battery.
  - Be aware of the risk of terminals of the battery-operated appliance or battery being short circuited by metal objects.
1. Ensure that the battery is fully discharged. To do this, operate the device until it stops.
  2. Use a small flat screwdriver to pry away the front panel.
  3. Unscrew 2 screws from the front housing.
  4. Pry off the front housing and expose the batteries.
  5. Take out the battery assembly and cut the two wires on the end of the battery.
- Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/collection point.
  - Do not attempt to operate the device once you have opened it.
  - Caution: Do not put in the fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns.

---

## **DISPOSAL/RECYCLING**

---

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.

### **Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd WARRANTY AGAINST DEFECTS**

#### **In this warranty:**

Australian Consumer Law means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

CGA means the New Zealand Consumer Guarantees Act 1993;

Goods means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

Manufacturer, We or us means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573; or

2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

You means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:

3. We warrant the Goods for all parts defective in workmanship or materials for the period of two (2) years from the date of purchase (Warranty Period). If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

### **Warranty Conditions**

4. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.

5. Consumable parts (such as shaver heads, cutters and foils) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.

6. The warranty granted under clause 3 is limited to repair or replacement only.

7. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.

8. In order to claim under the warranty granted under clause 3 you must:

(a) Retain this warranty with your receipt/proof of purchase; and

(b) Return the Goods to us at the relevant address below or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.

9. This warranty is immediately void if:

(a) Any serial number or appliance plate is removed or defaced;

(b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.

10. The Goods are designed for domestic use only. A limited 90-day Warranty applies to any industrial or commercial use of the Goods. The Goods must be connected to the

electrical voltage requirements as specified in the ratings label located on the Goods.

11. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.

12. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Limited.

Contact us or the Supplier for further details.

**Spectrum Brands Australia Pty Ltd**

Locked Bag 3004

Braeside, VIC 3195

AUSTRALIA

Customer service in Australia: 1800 623 118

E-mail: [consumer.enquiry@remington-products.com.au](mailto:consumer.enquiry@remington-products.com.au)

Website: [www.remington-products.com.au](http://www.remington-products.com.au)

**Spectrum Brands New Zealand Limited**

PO Box 9817

Newmarket, Auckland 1149

NEW ZEALAND

Customer service in New Zealand: 0800 736 776

E-mail: [info@remington.co.nz](mailto:info@remington.co.nz)

Website: [www.remington.co.nz](http://www.remington.co.nz)



REMINGTON®  
EST. NEW YORK 1937

