



Russell Hobbs®

A BRITISH ICON SINCE 1952

27710

 www.russellhobbs.com

Before First Use

	Read the instructions and retain for future reference.
---	--

Intended Use

	Household use only
	Do not use outdoors

Specification

Power Rating (W)	1370-1670
Operating voltage (V)	220-240, 50/60Hz

Important Safeguards

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Do not use the appliance for any purpose other than those described in these instructions.
- Do not operate the appliance if it's damaged or malfunctions.
- Do not use accessories or attachments other than those we supply.
- Do not leave the appliance unattended while plugged in.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been

supervised/instructed and understand the hazards involved.

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Do not connect the appliance via a timer or remote control system.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains. Never use the appliance below wall cupboards or shelves.
- Remove and empty the crumb tray regularly. Wipe with a damp cloth, dry, then replace in the toaster.
- If the cable is damaged, return the appliance, to avoid hazard.
- Do not toast or reheat bread that is too thick, buttered, torn, or misshapen.
- Be careful when you toast food that contains sugar, jam, seeds, or currants. These materials can melt or fall into the toaster. This can cause the toaster to overheat or catch fire.
- If bread gets jammed, unplug the toaster, let it cool, and carefully remove the bread.
- Route the cable so it does not overhang, and cannot be tripped over or caught.
- Do not cover the appliance.

Warning Symbol Glossary


	Do not immerse in any liquid
	Caution: Surface may be hot

Parts List

1	Toasting slots	
2	Crumb tray	
3	LED Operation Panel	
4	LED Increment Matrix	
5	Warming Rack	

LED Operation Panel Glossary

Symbol	Function
	Volume Function
	Bagel Function
	Frozen Function
	Lift and Look Function
	Reheat Function
	Start/Stop Function
	Operation Function (Down)
	Operation Function (Up)

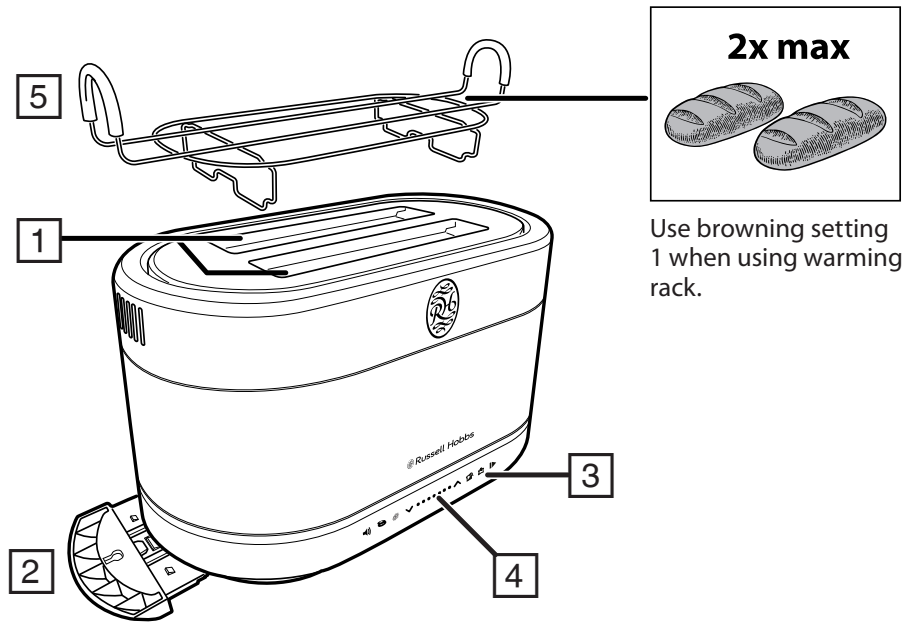

Basic Operation - Set browning level

Note - there are 7 settings and is visually shown along the LED Increment Matrix (4).

This is a multi-step operation:

Symbol	Step	Action
▼	1	Press to decrease time
▲	1	Press to increase time
▶	2	Press to activate

Basic Operation - Lift and Look Function

During toasting, pressing this button will lift the toast for viewing for 8 seconds. In this time, you must remove the toast or press Lift and Look Function again to continue with the toasting cycle.

Symbol	Action
	Press to activate

Basic Operation - Bagel Function

This is a multi-step operation:

Symbol	Step	Action
▶	1	Press
	2	Press to activate

Basic Operation - Frozen Function

This is a multi-step operation:

Symbol	Step	Action
	1	Press
▼	2	Press to decrease time
▲	2	Press to increase time
▶	3	Press to activate

Basic Operation - Re-Heat Function

This function can be used within two minutes of the toaster cycle ending.

This is a multi-step operation:

Symbol	Step	Action
	1	Press
▶	2	Press to activate

Demo Mode

Symbol	Action	Seconds
▼	Press + Hold together	2
▲		

Note, By default on entering Demo Mode, the appliance enters Music Cycle - Demo Mode.

Illumination - Demo Mode

This is a multi-step operation:

Symbol	Action	Seconds
▶	Press + Hold	2
▼	Press either to cycle through Demo Illumination library	
▲		

Exit - Demo Mode

Symbol	Action	Seconds
▼	Press + Hold together	2
▲		

Music

Symbol	Action
▼	Press either to cycle through Music options
▲	

Music Volume

This is a multi-step operation:

Symbol	Action	Seconds
🔊	Press + Hold	2
▼	Decrease Volume	
▲	Increase Volume	

Care and Cleaning

Allow the appliance to fully cool before Care and Cleaning.

This appliance contains no user serviceable parts. Before cleaning, ensure the appliance is switched off and unplugged from the mains outlet. Do not use abrasives or brushes to clean components. Do not place parts in boiling liquids.

Clean using a damp cloth and dry:

1	Toasting slots
3	LED Operation Panel
4	LED Increment Panel

Remove, clean and dry:

2	Crumb tray
---	------------

Recycling



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always

dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

ERP

For ErP energy consumption information, please refer to website **en.russellhobbs.com/erp**

Service

If you contact Customer Service, please have the Model Number to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product). The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice. If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to: Customer Service

Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS.

Email: support@russellhobbs.com
telephone: 0345 658 9700 (local rate number)

Please note, If you have purchased the product within the last 6 months, please contact the retailer in the first instance to deal with any matters relating to warranty.

Guarantee

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Guarantee period = 2 years from first retail purchase. To claim an extra 1 year guarantee, register your product online within 28 days of purchase. Register at: **uk.russellhobbs.com/product-registration**

Consumables are guaranteed only for their recommended lifecycle.

Replacement/Spare parts* are excluded and are only covered by a 1 year warranty.

* Examples include filters, removable grill plates, drip trays/crumb trays etc.

27710

26/UK/ 27710

T23-9004448

Version 03/26

Russell Hobbs is a Registered Trade Mark
of Spectrum Brands, Inc., or one of its
subsidiaries.

Spectrum Brands (UK) Limited

Fir Street,

Failsworth,

Manchester

M35 0HS

www.russellhobbs.com

© 2026 Spectrum Brands, Inc.
