



# Russell Hobbs

A BRITISH ICON SINCE 1952

## RHBLDLUSB25B-AU Operating Manual

[russellhobbs.com.au](http://russellhobbs.com.au)  
[russellhobbs.co.nz](http://russellhobbs.co.nz)

## CONTENTS

Safety Instructions	3
Product Overview	5
Product Setup	6
Battery Removal	9
Cleaning and Maintenance	10
Problem Solving	11
Customer Service and Warranty	12
Warranty Conditions	13



Read this guide carefully before installing or operating your new fan and keep it somewhere safe for future reference.

## SAFETY INSTRUCTIONS

- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.
- Do not use with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified technicians to avoid a hazard.
- This product is intended for household use only.
- Do not use outdoors.
- Cleaning and user maintenance should not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate this appliance for anything other than its intended use.
- Do not immerse whole unit in water or other liquids for cleaning.
- Unplug from outlet when not in use. Do not leave unattended while plugged in.
- Do not use if there are visible signs of damage to the appliance.
- Do not use if it has been dropped, damaged, left outdoors or submerged in water.
- Keep the appliance away from water. Do not allow it to get wet. If the unit gets wet, do not plug the unit into a wall socket or turn the unit on.
- Do not handle the appliance with wet hands.
- Do not pull or carry by the cord, use the cord as a handle, close doors on the cord, pull the cord around sharp corners or edges or expose the cord to heated surfaces. Do not unplug by pulling on the cord.

 
## SAFETY INSTRUCTIONS

- To protect against electrical shock, do not immerse the cord, plug or appliance in water or other liquids.
- Do not use this appliance in the immediate surroundings of a bath, shower or swimming pool.
- Unplug from the mains outlet when not in use, before putting on and taking off parts, and before cleaning.
- Only use the unit when fully assembled.
- Never place your fingers or other objects into any part of the appliance. Be aware that loose clothing or hair may become trapped in the appliance if improperly used.
- Before use, ensure that all the air vents of the appliance are clear and there is no restriction of air flow.
- Caution: Appliance may disturb ashes in an open fire. Always avoid directing the appliance toward naked flames.
- This appliance contains batteries that are only replaceable by a qualified engineer. Battery must be removed before scrapping appliance. Battery must be disposed of safely.
- Do not expose the appliance or battery to excessive temperatures.
- Be aware of the risk of terminals of the battery-operated appliance or battery being short-circuited by metal objects.
- This appliance contains batteries that are non-replaceable. When the battery is at end of life, the appliance shall be properly disposed of.
- It must only be supplied at safety extra low voltage corresponding to the marking on the appliance.



**WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.

# PRODUCT OVERVIEW

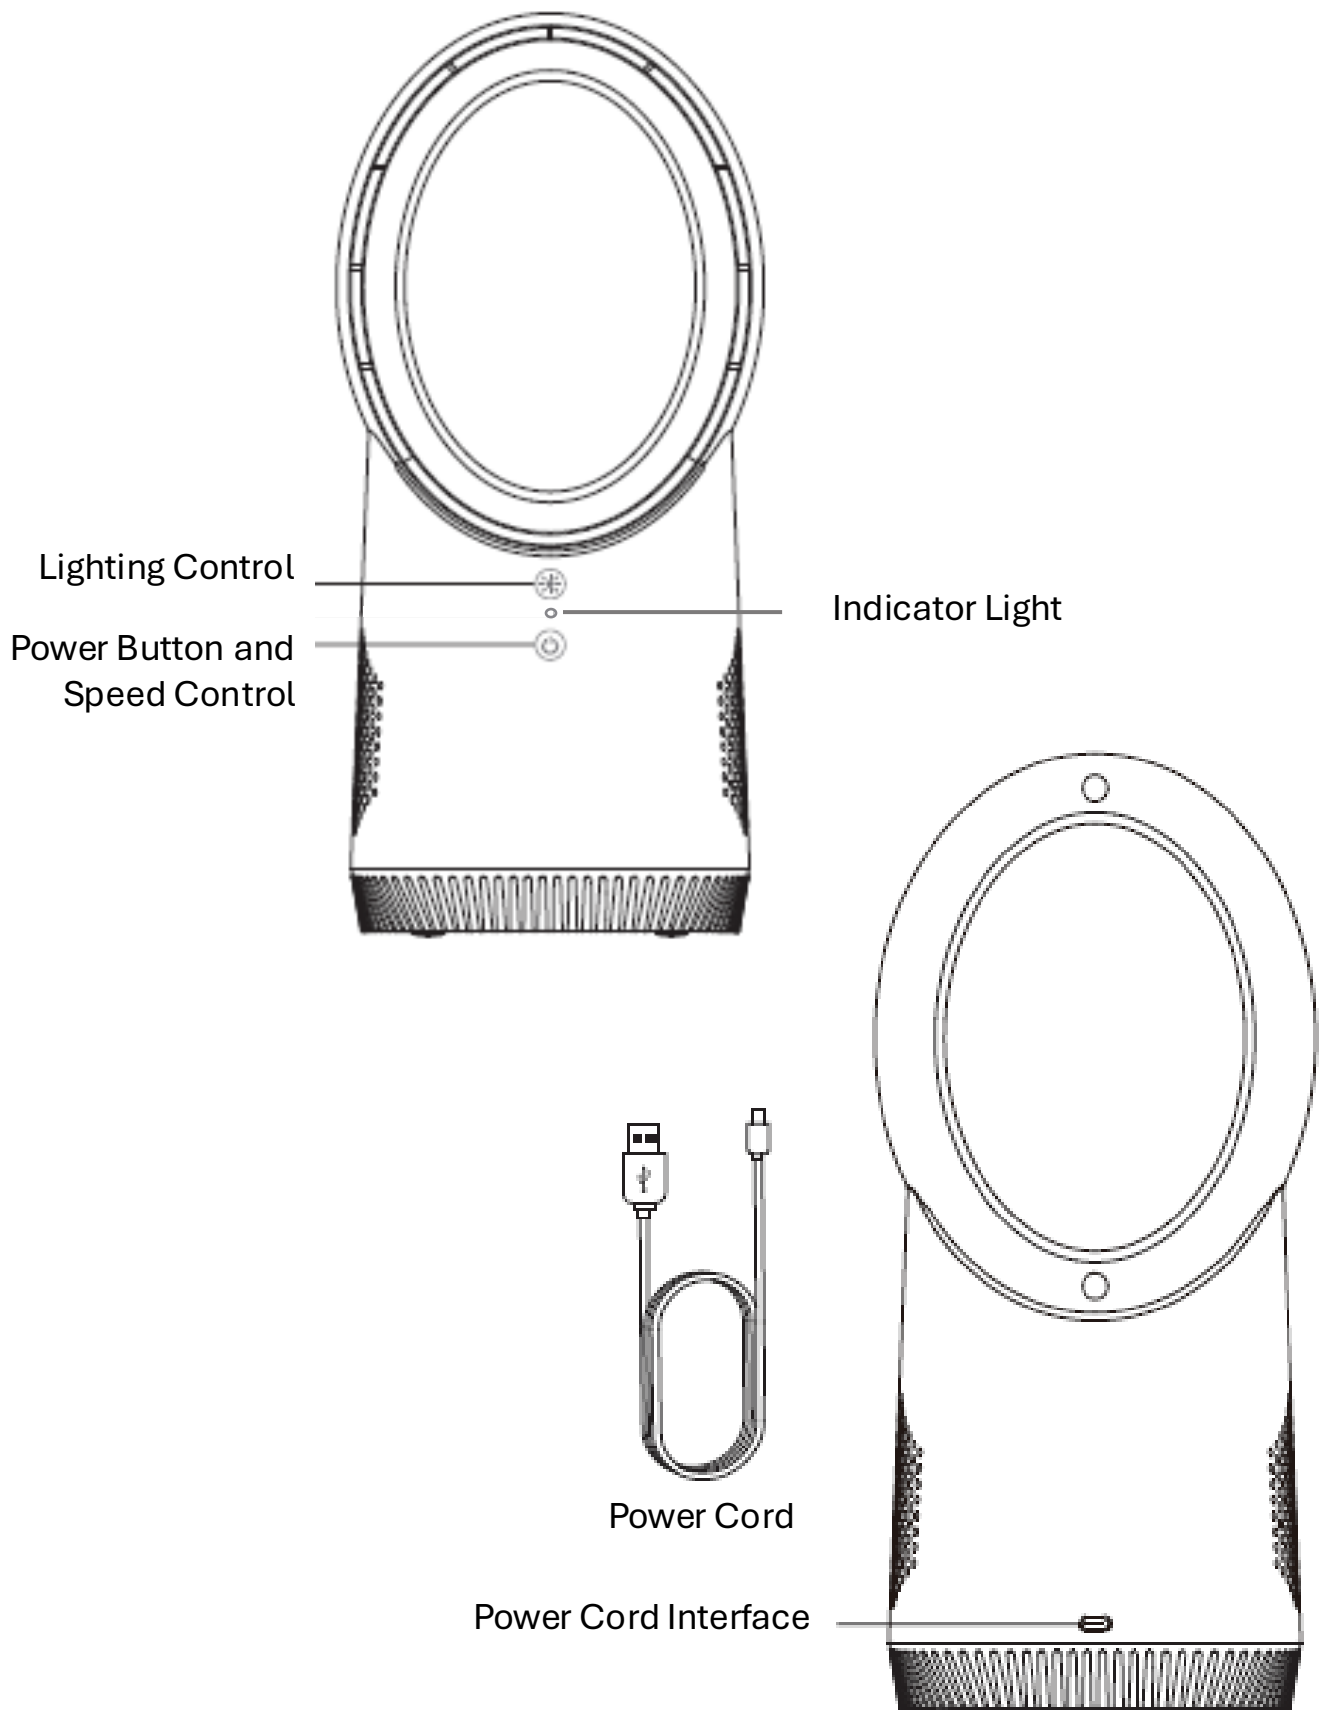


## PRODUCT SETUP

Remove packaging material and all transport bracing from the device.

For safe and trouble-free running of the device, choose the installation location which meets the following requirements:

 - The surface should be firm, flat and horizontal.
- Do not place the device in a hot, wet or very humid environment.
- The socket should be easily accessible so that the mains connection cable can be easily disconnected, if necessary.
- Temperature range: from 0 to + 40 °C .
- Humidity (no condensation): 5 - 75%.

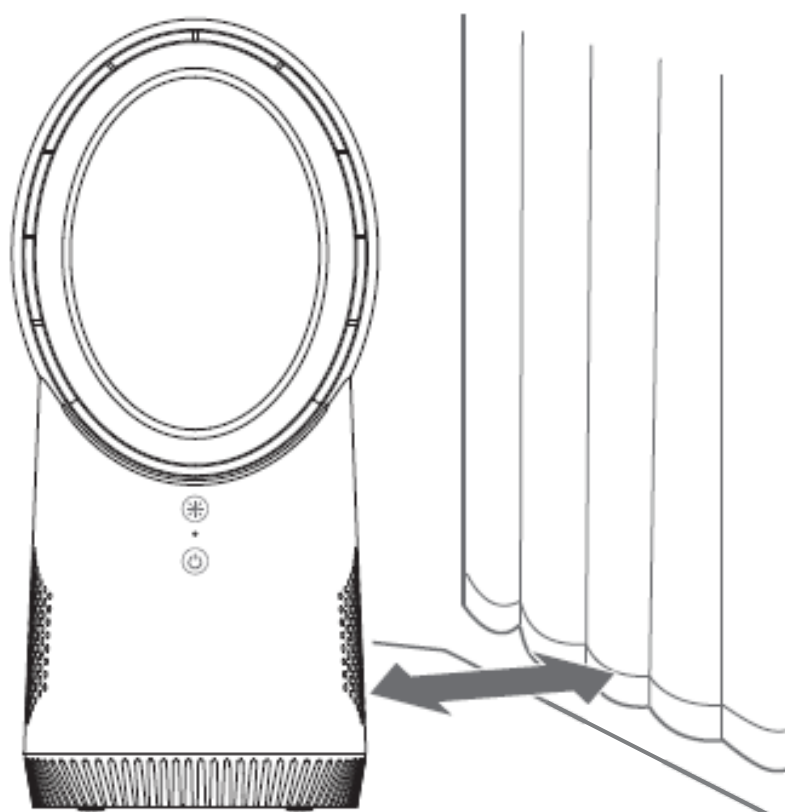

**Note:** Do not place fan near curtains




## PRODUCT SETUP

 
Connect the cable to the fan through an external power source to use continuously. To operate wirelessly disconnect the cable after the unit is fully charged

Approximate charge time: 3 hours

Approximate discharge time: 2 hours

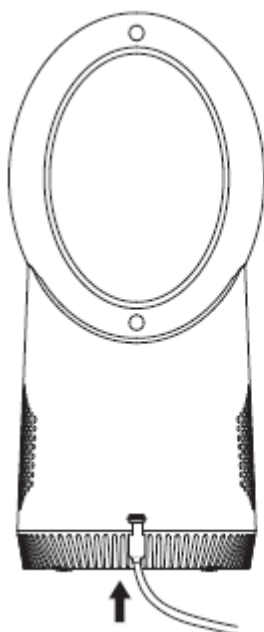

 
Insert the output end of the USB charging cable into the fan interface.

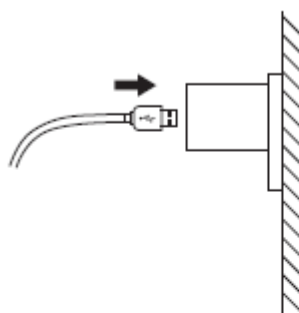

Insert the USB charging cable into the national standard output 5V 2A. Ensure the maximum output power does not exceed the 15W adapter.

Indicator Light

 When the battery is low, the red indicator blinks three times and the unit shuts down. During charging, the green indicator blinks and turns off when fully charged.

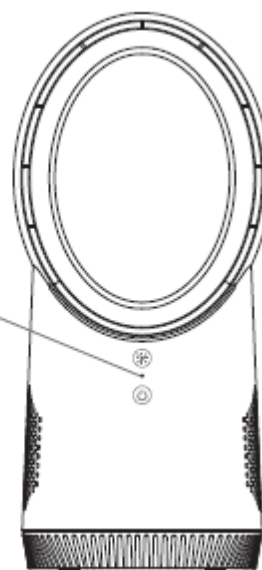

## PRODUCT SETUP

### Power Button and Speed Control

Press the power button on the fan and the power indicator will light up white. This is speed 1.

### To change the fan speed, wait 3 seconds before pressing again.

Press it a second time for speed 2. The power indicator will light up blue. Press it a third time for speed 3. The power indicator will light up green. Press it a fourth time to switch the fan off.

Press 1 = Speed 1

 
Press 2 = Speed 2

Press 3 = Speed 3

Press 4 = Switch off



**Note:** The buttons have a beep feedback when pressed and work best with a light swipe over them.

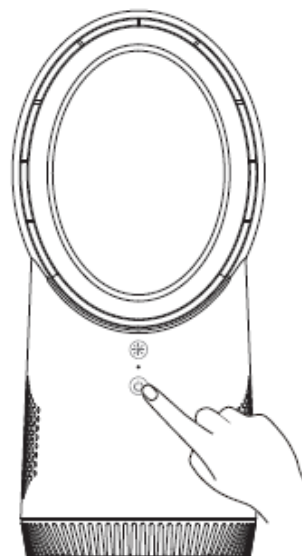

### Lighting Control button

Press the lighting control button to start the atmospheric lighting.

Keep pressing the button to cycle through the colours (white, blue, green, red, purple, gradient colour).

To end the atmospheric light function, press the ambience button again after the colour changes to gradient colour. The indicator light will then turn off. You can also press and hold the button to switch the light off.

### Colour Cycle

White – Blue – Green – Red – Purple – Gradient – Switch Off



## BATTERY REMOVAL



**Note:** The fan's battery may contain environmentally harmful substances. Do not dispose of the battery with regular household waste. Always follow local regulations when disposing of the battery.

 
Before removing the Li-ion battery, power off to ensure that the battery is free. If there is surplus power, let the fan run until the power is exhausted.

Do not short circuit the battery contact strip.


To remove the Li-ion battery, follow these instructions:

1. Take out the 6 silicone and screws at the bottom and back of the product (Figure 1).
2. Take out the plastic shell of the chassis and remove 2 screws (Figure 2).
3. Take out the rear shell, remove the battery terminal and remove the battery (Figure 3).


Do not reconnect the fan to the power supply after removing the battery.

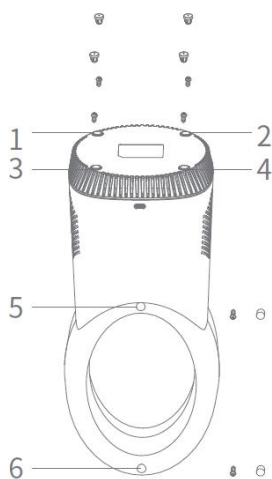

(Figure 1)

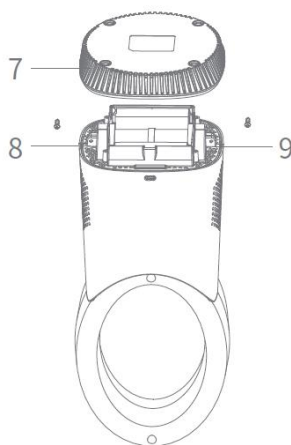 

(Figure 2)

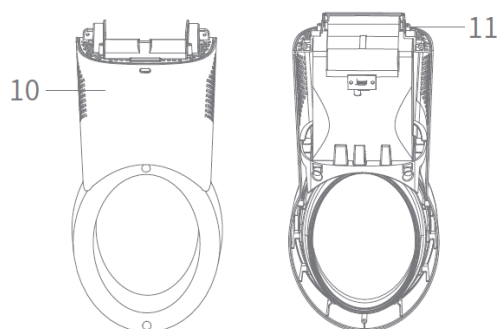 

(Figure 3)

# CLEANING AND MAINTENANCE



**Note:** This model should require minimal maintenance. Do not try to fix it yourself. If service is needed, contact a qualified technician.

- Ensure the unit is unplugged before assembly and before cleaning.
- During maintenance, do not soak or splash water on the fan. Getting the unit wet will damage it.
- Do not use gasoline, alcohol, bleach or metal objects to wipe the fan surface. This can cause the fan surface to discolour and deteriorate.
- To ensure adequate air circulation to the motor, keep vents at the rear free of dust. Do not disassemble the fan to remove dust.
- Do not use any abrasive detergent or solvents to avoid scratching the surface.
- Do not allow water or any other liquid into the motor housing or interior parts.

## Unit Surface

- Gently wipe the fan surface with a soft dry cloth.
- If the surface of the fan is dirty, the debris can be diluted with neutral detergent and then wiped with a soft cloth.

## Air Inlet and Outlet

- Use a soft brush or vacuum cleaner to remove dust at the air inlet and outlet.
- Too much dust can reduce effectiveness. To maintain the fan, clean it when only a minimal amount of dust has accumulated.

## Storage

- Avoid places with vibration and electrical appliances with cooling/heating function.
- Avoid placing it in direct sunlight, high temperatures and humidity.
- Keep out of the reach of children.

## PROBLEM SOLVING

Fan doesn't switch on	<ul style="list-style-type: none"> <li>• Check the fan is plugged in.</li> <li>• Check the socket is switched on.</li> <li>• Check another appliance in the socket.</li> <li>• Unplug and check for any obvious signs of damage to cord or plug.</li> <li>• If recently used, allow to cool for 1 hour then try again.</li> </ul>
Fan makes a rattling sound	<ul style="list-style-type: none"> <li>• Check there is nothing in contact with the fan.</li> <li>• Check the fan is on a level surface.</li> </ul>
Fan makes a grinding sound	<ul style="list-style-type: none"> <li>• Immediately switch off and contact Customer Services.</li> </ul>
Air coming out is dusty	<ul style="list-style-type: none"> <li>• Ensure fan is unplugged and set to OFF.</li> <li>• Using a vacuum and crevice brush, gently vacuum the front grille.</li> </ul>

# IMPORTANT!

## KEEP THE GRILLE CLEAN

Vacuum the grille at least once every 3 months.  
The fan may require more frequent vacuuming if in a dusty environment.  
Ensure that the fan is unplugged before cleaning.

**3**  
**MONTHS**

## RECYCLING

Legislation in some localities mandates that e-waste (anything with a plug, battery or cord) is disposed of through controlled recycling facilities and must not be disposed of in general household waste. For more information about recycling of electrical and battery operated appliances, please contact your local council or your local household waste disposal service.

# CUSTOMER SERVICE AND WARRANTY

## **Spectrum Brands Australia Pty Ltd**

Locked Bag 3004 Braeside  
Victoria 3195 Australia

## **Spectrum Brands New Zealand Ltd**

PO Box 9817 Newmarket  
Auckland 1149 New Zealand

### **Customer Service in Australia**

Toll Free: 1800 623 118  
Email: [consumer.enquiry@russellhobbs.com.au](mailto:consumer.enquiry@russellhobbs.com.au)  
Website: [www.spectrumbrands.com.au](http://www.spectrumbrands.com.au)

### **Customer Service in New Zealand**

Toll Free: 0800 736 776  
Email: [info@russellhobbs.co.nz](mailto:info@russellhobbs.co.nz)  
Website: [www.spectrumbrands.co.nz](http://www.spectrumbrands.co.nz)

## **Spectrum Brands Australia Pty Ltd and Spectrum Brands New Zealand Ltd Warranty Against Defects**

In this warranty:

**Australian Consumer Law** means the Australian consumer law set out in Schedule 2 to the Competition and Consumer Act 2010;

**CGA** means the New Zealand Consumer Guarantees Act 1993;

**Goods** means the product or equipment which was accompanied by this warranty and purchased in Australia or New Zealand, as the case may be;

**Manufacturer, We or us** means:

1. for Goods purchased in Australia, Spectrum Brands Australia Pty Ltd ABN, 78 007 070 573; or
2. for Goods purchased in New Zealand, Spectrum Brands New Zealand Ltd, as the case may be, contact details as set out at the end of this warranty;

**Supplier** means the authorized distributor or retailer of the Goods that sold you the Goods in Australia or in New Zealand; and

**You** means you, the original end-user purchaser of the Goods.

1. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, or the CGA. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. The benefits provided by this Warranty are in addition to all other rights and remedies in respect of the Goods which the consumer has under either the Australian Consumer Law or the CGA. The original purchaser of the Goods is provided with the following Warranty subject to the Warranty Conditions:
3. We warrant the Goods for all parts defective in workmanship or materials for a period of 2 years from the date of purchase (Warranty Period).

If the Goods prove defective within the Warranty Period by reason of improper workmanship or material, we may, at our own discretion, repair or replace the Goods without charge.

# WARRANTY CONDITIONS

1. The Goods must be used in accordance with the manufacturer's instructions. This Warranty does not apply should the defect in or failure of the Goods be attributable to misuse, abuse, accident or non-observance of manufacturer's instructions on the part of the user. As far as the law permits, the manufacturer does not accept liability for any direct or consequential loss, damage or other expense caused by or arising out of any failure to use the Goods in accordance with the manufacturer's instructions.
2. Exhaustible components (such as batteries, filters and brushes) of the Goods are included under this Warranty only where there is a defect in workmanship or materials used.
3. The warranty granted under clause 3 is limited to repair or replacement only.
4. Any parts of the Goods replaced during repairs or any product replaced remain the property of the manufacturer. In the event of the Goods being replaced during the Warranty Period, the warranty on the replacement Goods will expire on the same date as for the Warranty Period on the original Goods which are replaced.
5. In order to claim under the warranty granted under clause 3 you must:
  - a) Retain this warranty with your receipt/proof of purchase; and
  - b) Return the Goods to us at the relevant address or to the Supplier by prepaid freight within the Warranty Period accompanied with (i) the legible and unmodified original proof of purchase, which clearly indicates the name and address of the Supplier, the date and place of purchase, the product name or other product serial number and (ii) this warranty.
6. This warranty is immediately void if:
  - a) Any serial number or appliance plate is removed or defaced;
  - b) The Goods have been serviced or otherwise repaired by a person not authorised to do so by us or where non approved replaced parts are used.
7. The Goods are designed for domestic use only. The Goods must be connected to the electrical voltage requirements as specified in the ratings label located on the Goods.
8. This warranty does not cover the cost of claiming under the warranty or transport of the Goods to and from the Supplier or us.
9. This warranty is only valid and enforceable in Australia against Spectrum Brands Australia Pty Ltd and in New Zealand against Spectrum Brands New Zealand Ltd.

Contact us or the Supplier for further details.

## REGISTER YOUR PRODUCT ONLINE

Registration of your product is for marketing purposes only, not warranty registration.

If you live in Australia, please visit: <https://au.russellhobbs.com/product-registration>

If you live in New Zealand, please visit: <https://www.russellhobbs.co.nz/product-registration>

Registration entitles you to receive these benefits: Product information; Hints and tips; Recipes and news; Information on special price offers and promotions.

Please retain your receipt as proof of purchase for any warranty claims.

Any questions? Please contact Customer Service for advice.

## NOTES

## NOTES



Model number	RHBLDLUSB25B-AU
Rated voltage	DC5V
Rated current	2A

