



Russell Hobbs®

A BRITISH ICON SINCE 1952

Black Marble Cookware Set

Please retain instructions for future reference.

BEFORE FIRST USE

Hand-wash thoroughly.

USING THE COOKWARE

Suitable for use on hobs only, including induction. For optimum energy efficiency, place the cookware on hob rings equivalent to the base size. Do not let flames overlap the sides or handles. To increase the longevity of the cookware, it is recommended to use silicone, wooden or nylon utensils. Do not use metal utensils. Do not overheat the cookware or allow to boil dry. Never leave unattended whilst in use. The non-stick coating is prone to discolouration. This has no effect on the functionality of the cookware. To avoid damage to ceramic hobs, always lift the cookware rather than drag it across the hob surface. Screws may loosen over time; using a screwdriver, carefully retighten them.

CLEANING AND STORING THE COOKWARE

Always allow to cool before cleaning. This cookware is not dishwasher safe. Hand-wash using a mild detergent and nonabrasive sponge, rinse and dry thoroughly. Do not store wet cookware.

CAUTION

Always use heat-resistant oven gloves to move the cookware. Never expose hot cookware to cold liquid. If there is any evidence of damage to the cookware, dispose of it carefully. Not suitable for deep fat frying.

Dimensions stated are approximate internal measurements taken rim to rim. If this product proves unsatisfactory or if you have any further queries, please contact your retailer.

Made in China.

Distributed by:

Spectrum Brands Australia Pty Ltd – 11B Chifley Drive, Mentone, VIC, 3194.

Spectrum Brands New Zealand Ltd – Level 1, 8 Hugo Johnston Drive, Penrose, Auckland, 1061.

Supplied by:

Ultimate Products UK Ltd., Victoria Street, Manchester OL9 0DD.
UK under licence from Spectrum Brands (UK) Limited. Russell Hobbs is the registered trademark of Spectrum Brands (UK) Limited.

www.russellhobbs.com.au

www.russellhobbs.co.nz

Subject to care and use instructions being followed, the Russell Hobbs 5-Year warranty promises to replace, substitute or refund any product that fails due to faulty workmanship or materials. This 5-year warranty does not cover any damage caused by accident or misuse and is in addition to your statutory rights. The warranty does not cover scratches to the coating, or discolouration of the coating as a result of overheating or ageing, or damage to the handles from exposure to heat sources. Should any defects due to faulty workmanship or materials appear within the warranty period, please return the goods with proof of purchase to the retailer.

AUS: For full warranty details, visit

www.russellhobbs.com.au/cookware-kitchenware-warranty.

NZ: For full warranty details, visit

www.russellhobbs.co.nz/cookware-kitchenware-warranty.