

REMINGTON®

EST. NEW YORK 1937




T-Series Ultimate Precision Trimmer MB7000


 www.remington.co.uk

Register online for an EXTRA year guarantee


Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

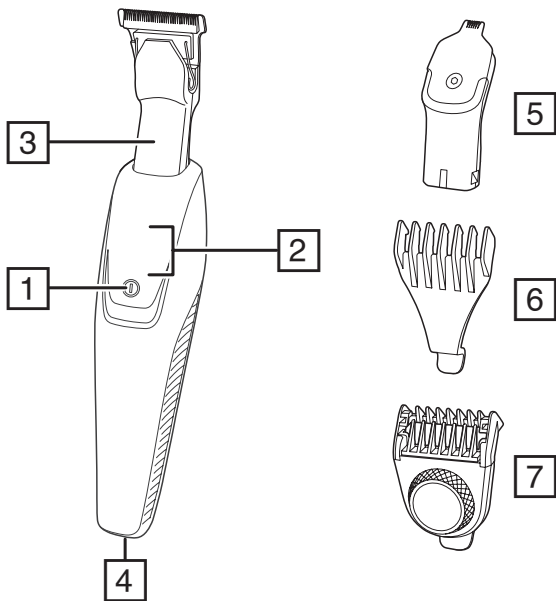

A

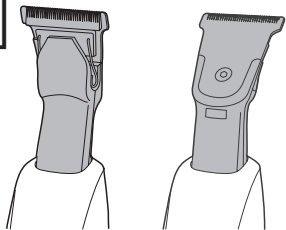


B

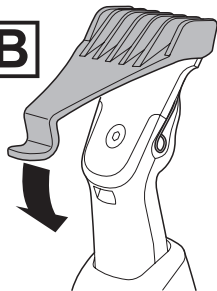

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.



IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.
- The adaptor contains a transformer. Do not cut off the adaptor to replace it with another plug, as this causes a hazardous situation.
-  Suitable for use in a bath or shower.
- **WARNING:** Detach the shaver from the charging adapter before cleaning it in water.
- Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- **WARNING:** For recharging the battery, only use the charger supplied with the appliance – type reference PA-0505U.
- Always replace a damaged adaptor with one of the original type.
- The battery in this device is not replaceable.
- Do not use the appliance if it is damaged or malfunctions.
- Do not use attachments other than those we supply.
- This appliance should never be left unattended when plugged into a power outlet, except when charging.
- Keep the power plug and cord away from heated surfaces.
- Do not plug or unplug the appliance with wet hands.

- Do not twist or kink the cable, or wrap it round the appliance.
- This appliance is not intended for commercial or salon use.

PARTS

- | | |
|-----------------------|-----------------------------------|
| 1. On/Off switch | 6. Fixed combs (x6) |
| 2. Fuel gauge | 7. Precision dial comb (1 - 5 mm) |
| 3. Precision T-blade | Not shown |
| 4. Charging connector | • Adaptor |
| 5. Micro detail blade | • Storage pouch |

CHARGING YOUR APPLIANCE

Before using your trimmer for the first time, charge for 4 hours.

1. Ensure the product is switched off.
2. Connect the charging adaptor to the product and then to the mains.

FUEL GAUGE

Charge Level	Fuel Gauge Lights	
	During Charging	During Use
Charging	Lights will cycle in an upwards pattern	-
Fully Charged	All lights will remain lit for 5 minutes and then switch off	Lights will cycle in an upwards and downwards pattern
Battery charge is low (3 minutes or less run time available)	-	Bottom light will flash

- In addition, the fuel gauge shows the level of charge for 5 seconds after the unit has been switched off after use.

Lights	Remaining Charge Level
Bottom light will flash	Battery charge low
Bottom light on	33%
Bottom and middle light on	33 - 66%
All lights on	66 - 100%

- Run time from fully charged is up to 60 minutes.

- Unplug the charger when the unit is fully charged .
- To preserve the life of your batteries, let them run out every 6 months then recharge for 4 hours.

ATTACHMENTS

Ensure that the device is switched off before fitting or removing attachments.

TO FIT AND REMOVE BLADES

- To remove, pull the blade upwards out of the body of the device.
- To fit, position the blade as desired (fig. A) then insert it into the opening and press it downwards until it clicks into place.
- The T-blade and micro detail blade can be positioned facing upwards or downwards to help you trim difficult to reach areas.

FITTING AND REMOVING FIXED/ADJUSTABLE COMBS

To Fit

- Hook the front of the guide comb over the teeth of the T-blade (Fig B).
- Press the back of the guide comb down until it clicks into place.

To Remove

- Lift the tab on the back of the guide comb upwards until it comes free from the T-blade.

INSTRUCTIONS FOR USE

- Comb facial hair with a fine comb before you start trimming.
- Comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction.
- Since all hairs do not grow in the same direction, you may want to try different trimming positions (i.e. upwards, downwards or across) for better results.
- Hair should be dry and free from any waxes or lotions.
- If hair builds up during use, switch the unit off, remove any attachment in use and clean any excess hair clippings from the attachment and groomer.

BEARD STYLING AND MAINTENANCE

1. Fit the T-blade and desired comb.
 2. Use the dial on the adjustable comb, or select a fixed comb for the desired length setting.
 3. Start trimming under the chin following the line of the jaw.
 4. Work upwards towards the ear and upper beard line.
 5. Tidy the beard edges using the precision T-blade or micro detail blade.
- Note: Use the beard trimmer without the combs for trimming hair close to the skin. This will trim hair to 1mm, holding the blades perpendicular to the skin will trim hair to 0.4mm.

FINE DETAILING, CONTOURING AND EDGING

1. Fit the desired blade (without a comb) in whichever orientation that gives the best access.
2. Start with the blades resting lightly against your skin, use motions towards edge of beard line to trim to desired locations in facial area.
3. Shape as desired.

CARE FOR YOUR TRIMMER

- To ensure long lasting performance clean after each use.
- The easiest and most hygienic way to clean the appliance is by rinsing the appliance head under the tap after use while the blades are running.
- To keep the unit in optimal condition we recommend re-oiling the blades after cleaning.
- Place a few drops of cutter or sewing machine oil onto the blades. Wipe off excess oil.

BATTERY REMOVAL

We strongly recommend that a professional removes the rechargeable battery. Parts of the shaver case, and tools have sharp edges and may cause injury if not handled correctly.

- The rechargeable battery must be removed from the appliance before it is scrapped.
 - Disconnect the charging adapter before removing the battery.
1. Turn the unit on and discharge the remaining power.
 2. Remove any attachments.
 3. Unscrew the 2 screws on the top side.
 4. Pry off the top decorative panel.
 5. Unscrew the 2 screws under the panel and take off the top housing.
 6. Take out the battery and printed circuit board assembly.
 7. Disconnect the battery from the circuit board.
- Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/collection point.
 - Do not attempt to operate the shaver once you have opened it.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under

any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM

 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd


Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

productsupport@Remington.co.uk

IRELAND

 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12

<https://ie.remington-europe.com>

productsupport@Remington.co.uk

شكراً لقيامك بشراء منتج Remington® الجديد. يرجى قراءة هذه التعليمات بعناية والاحتفاظ بها في مكان آمن. قم بإزالة جميع مواد التعبئة قبل الاستخدام.

إجراءات وقائية هامة

- يمكن استخدام هذا الجهاز بواسطة الأطفال الذين تتراوح أعمارهم من 8 سنوات وما فوق والأشخاص ذوي القدرات البدنية أو الحسية أو العقلية المنخفضة أو قليلي الخبرة والمعرفة إذا تم الإشراف عليهم/إرشادهم ويفهمون المخاطر المعنية. ويجب ألا يعيثر الأطفال بالجهاز. ويجب ألا يقوم الأطفال بالتنظيف والصيانة إلا إذا كان عمرهم أكبر من 8 سنوات وتحت إشراف. احفظ الجهاز والكابلات بعيداً عن متناول الأطفال دون سن 8 سنوات.
- يحتوي المحول على محول. لا تقطع المحول لاستبداله بمقبس آخر لأن ذلك يسبب ضعاً خطراً.

مناسب للاستخدام في حمام أو دش.

- أفضل الجزء المحمول من سلك المصدر قبل التنظيف في الماء.
- لا تستخدم المنتج مع سلك تالف. ويمكنك الحصول على البديل عن طريق مراكز الخدمة الدولية التابعة لن
- تحذير: لإعادة شحن البطارية، يجب استخدام الشاحن المرفق فقط مع الجهاز - مرجع النوع PA-0505U.
- استبدل دائماً محول الشحن التالف أو قاعدة الشحن التالفة بقطعة أخرى أصلية.
- البطارية غير قابلة للاستبدال.
- لا تستخدم ملحقات غير الملحقات التي تقوم بتوريدها.
- لا تستخدم الجهاز إذا كان تالفاً أو لا يعمل بصورة صحيحة.
- لا ينبغي أبداً أن تترك الجهاز بعيداً عن انتباهك أثناء توصيله بمصدر تيار كهربائي، إلا عند الشحن حافظ على قابس الطاقة والسلك الكهربائي بعيداً عن الأسطح الساخنة
- لا تقم بتوصيل أو فصل الجهاز بأيدي مثقلة.
- لا تقم بثني أو جدل الكبل أولفه حول الجهاز.
- دع الجهاز يبرد قبل تنظيفه وتخزينه.

الأجزاء

- | | |
|----|----------------------------|
| 1. | مفتاح تشغيل/إيقاف (On/off) |
| 2. | لمبات مؤشر الشحن |
| 3. | شفرة الدقة ذات الشكل T |
| 4. | موصل الشاحن |
| 5. | شفرة التفاصيل الدقيقة |
| 6. | أمشاط ثابتة (x6) |
| 7. | مشط بقرص الدقة (1 - 5 ملم) |
| | غير مبين: |
| • | قاعدة الشحن |
| • | جراب للتخزين |

الشحن

قبل استخدام طقم تشذيب اللحية والتزوين لأول مرة، اشحن الوحدة لمدة 4 ساعات للبدء الأمثل.

1. تأكد من إيقاف الجهاز.
2. قم بتوصيل محول الشحن بالمنتج ثم بالكهرباء.

لمبات مؤشر الشحن

لمبات مؤشر الشحن		مستوى الشحن
أثناء الاستخدام	أثناء الشحن	
-	ستدور إضاءة اللمبات في نمط تصاعدي	الشحن
ستدور إضاءة اللمبات في نمط تصاعدي وتنازلي	ستظل جميع اللمبات مضاءة لمدة 5 دقائق ثم تغلق	مشحونة بالكامل
ستومض اللمبة السفلية	-	انخفاض شحن البطارية (وقت التشغيل 3 دقائق أو أقل)

- بالإضافة إلى ذلك، يُظهر مؤشر الشحن مستوى الشحن لمدة 5 ثوان بعد إيقاف تشغيل الوحدة بعد الانتهاء من الاستخدام.

مستوى الشحن المتبقي	اللمبات
شحن البطارية منخفض	ستومض اللمبة السفلية
33%	تضيء اللمبة السفلية
33 - 66%	تضيء اللمبة السفلية والمتوسطة
66 - 100%	تضيء جميع اللمبات

- تصل مدة التشغيل من الشحن الكامل إلى 60 دقيقة.
- أفضل الشاحن عندما تكون الوحدة مشحونة بالكامل.
- للحفاظ على عمر البطاريات، دعها تنفذ تمامًا مرة كل 4 أشهر ثم قم بإعادة شحنها لمدة 4 ساعات.

الملحقات

يجب التأكد من أن الجهاز في وضعية الإيقاف قبل تركيب أو فك الملحقات.

لتركيب الشفرات وفكها

- لفك، اسحب الشفرة لأعلى خارج جسم الجهاز.
- للتركيب، ضع الشفرة المرغوب فيها (الشكل A) ثم أدخلها في الفتحة واضغط عليها للأسفل حتى تستقر في مكانها.
- يمكن وضع الشفرة ذات الشكل T وشفرة التفاصيل الدقيقة بحيث تكون متجهة لأعلى أو لأسفل لمساعدتك
- على تشذيب المناطق التي يصعب الوصول إليها.

تركيب الأمشاط الثابتة/القابلة للضبط وفكها للتركيب

- اشبك الجزء الأمامي من المشط الموجه من على أسنان الشفرة ذات الشكل T.
- اضغط على ظهر المشط الموجه لأسفل إلى أن تسمع نقرة دلالة على تثبيته في مكانه.
- ارفع الفتحة على ظهر المشط الموجه إلى أعلى حتى تتحرر من الشفرة ذات الشكل T.

تعليمات الاستخدام

- قم بتمشيط لحيثك أو شاربك دائما بمشط ناعم قبل بدء التشذيب.
- قم بتمشيط شعرك في اتجاه نموه بحيث تكون الشعرات في أقصى ارتفاع لها وفي نفس الاتجاه.
- وبما أن جميع الشعر لا ينمو في نفس الاتجاه، قد ترغب في تجربة تشذيب مواضع مختلفة (أي صعودا أو نزولا أو من جانب لآخر) لتحقيق أفضل النتائج.
- يجب أن يكون الشعر جافا وخاليا من أي مواد شمعية أو لوشن.
- في حالة تراكم الشعر أثناء الاستخدام، أوقف تشغيل الوحدة، وقم بفك الملحق المستخدم وتنظيف قصاصات الشعر الزائد من الملحق وماكينة الحلاقة.

تصنيف اللحية والعناية بها

1. تركيب الشفرة ذات الشكل T والمشط المطلوب.
2. استخدم القرص على المشط القابل للضبط، أو اختر مشط ثابت لإعداد الطول المطلوب.
3. ابدأ التشذيب تحت الذقن على طول خط الفك.
4. توجه إلى أعلى باتجاه الأذن وخط اللحية العلوي.
5. قم بضبط حواف اللحية باستخدام شفرة الدقة ذات الشكل T أو شفرة التفاصيل الدقيقة.
- ملحوظة: استخدم جهاز تشذيب اللحية بدون الأمشاط القابلة للضبط لتشذيب الشعر القريب من الجلد. سيؤدي ذلك لتشذيب الشعر بمقدار 1 ملم وسيؤدي مسك الشفرات عموديا على الجلد لتشذيب الشعر بمقدار 0.4 ملم.

الاعتناء بأدق التفاصيل وتكييف الحواف وتحديدها

1. قم بتركيب الشفرة المطلوبة (بدون مشط) في أي اتجاه يمنح أفضل وصول.
2. ابدأ بوضع الشفرة برفق على الجلد، استخدم حركات نحو طرف الذقن لتشذيب الشعر في الأماكن التي ترغب فيها من أجزاء الوجه.
3. وقم بتنفيذ النمط المطلوب.

صيانة أداة التشذيب الخاصة بك

- لضمان كفاءة الاستخدام لمدة طويلة، يجب التنظيف بعد كل استخدام.
- الطريقة الأسهل والأكثر صحية لتنظيف الجهاز هي شطف رأس الجهاز بماء دافئ بعد الاستخدام.
- للحفاظ على الوحدة في حالة مثالية، نوصيك بإعادة تزييت الشفرات بعد التنظيف.
- ضع بضع قطرات من زيت القواطع أو زيت ماكينة الخياطة على الشفرات. وامسح أي زيت زائد.

إخراج البطاريات

- نوصي بشدة بأن يقوم فني متخصص بإخراج البطارية القابلة للشحن. يوجد لدى بعض من عبوات ماكينة الحلاقة والأدوات حادة وقد تسبب الإصابة في حالة عدم التعامل معها على نحو صحيح.
- يجب إخراج البطارية القابلة للشحن من الجهاز قبل التخلص منها.
- افصل محول الشحن قبل إزالة البطارية.

1. تحقق من إفراغ شحن البطارية بالكامل. للقيام بذلك، قم بتشغيل ماكينة الحلاقة حتى تتوقف.
 2. فك أي من الملحقات.
 3. قم بفك المسامير الموجودين على الجانب العلوي.
 4. انزع اللوحة المزخرفة العلوية.
 5. قم بفك المسامير الموجودين أسفل اللوحة وانزع المبيت العلوي.
 6. أخرج البطارية ومجمع لوحة الدائرة المطبوعة.
 7. افصل البطارية عن لوحة الدائرة الكهربائية.
- يجب إخراج البطاريات الفارغة من الجهاز والتخلص منها في نقطة رسمية مناسبة لإعادة التدوير/ تجميع المخلفات.

إعادة التدوير

لتجنب المشاكل البيئية والصحية الناجمة عن المواد الخطرة، يجب عدم التخلص من الأجهزة، والبطاريات القابلة لإعادة الشحن والبطاريات غير القابلة لإعادة الشحن التي تحمل علامة واحدة من هذه الرموز مع نفايات البلدية غير المصنفة. يجب دائمًا التخلص من المنتجات الكهربائية والإلكترونية، وكذلك إذا أمكن، البطاريات القابلة لإعادة الشحن وغير القابلة لإعادة الشحن، في نقطة رسمية مناسبة لإعادة التدوير/ تجميع المخلفات.



الخدمة والضمان

سيتم تصحيح العيوب التي تؤثر على وظائف المنتج التي تظهر خلال مدة الضمان بالاستبدال أو الإصلاح وفقاً لخيارنا بشرط استخدام المنتج والحفاظ عليه وفقاً للتعليمات. لا تتأثر حقوقك القانونية.

يتم استبعاد المواد الاستهلاكية.

لا يتم تغطية العيوب الناجمة عن الإصلاح بواسطة موزع غير معتمد.

إذا طلبت مركز الخدمة، يرجى أن يكون لديك رقم الموديل فلن نكون قادرين على مساعدتك دون ذلك. ويمكن العثور على رقم الموديل على لوحة مقنن الجهاز.

اطلب ضماناتك الإضافي لمدة 1 سنة بتسجيل منتجك على الانترنت. فقط اذهب لموقع:

www.remington-europe.com/register/



Ref. No. MB7000

Type No. MB20A

20/UK/ MB7000 T22-7001151-B Version 04 /20

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2020 Spectrum Brands, Inc.